

Panasonic

Advanced Hybrid System

User Manual



KX-TES824

Model KX-TEM824




Thank you for purchasing a Panasonic Advanced Hybrid System.
Please read this manual carefully before using this product and save this manual for future use.

Feature Highlights

1.5.5 Using Voice Messaging (Built-in Voice Message [BV])

Built-in Voice Message


You can set incoming calls to be forwarded to your personal message area to let callers leave voice messages when you cannot answer the phone.

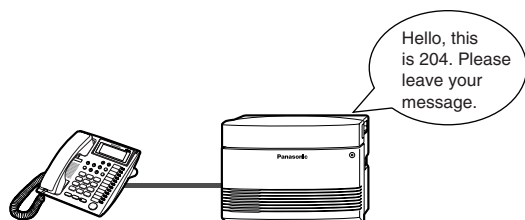

1.8.3 If a Voice Processing System is Connected

Voice Mail Integration


You can set your calls to be forwarded to a separate Voice Processing System (VPS) to let callers leave messages in your mailbox when you cannot answer the phone.

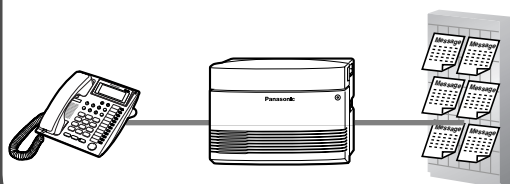

1.1.1 Before Operating a Telephone

Telephones


A Panasonic proprietary telephone (PT) and single line device (such as a fax machine, modem, SLT, or wireless telephone) can be connected to one extension jack in parallel. These devices share the same extension number.

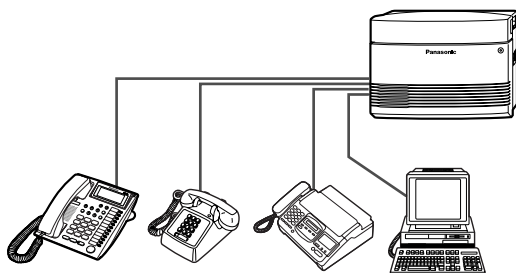

1.2.7 Accessing Another Party Directly from Outside (Direct Inward System Access [DISA])

3-level Automated Attendant

A caller can be directed to the desired party simply by pressing a single-digit number as directed by the 3-level DISA outgoing messages (OGMs).

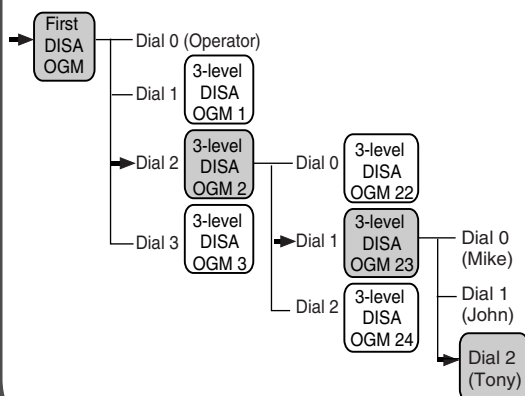

1.1 Before Operating a Telephone

Easy Operation

A Panasonic telephone that is equipped with a Navigator Key and a display helps you to access various features easily. The Message/Ringer lamp (if equipped) informs you of any calls or messages waiting.




Navigator Key



Message/Ringer Lamp

Call Routing for Fixed Line SMS

This PBX can route incoming calls sent from a Short Message Service (SMS) centre to specific single line telephones (SLTs) that support SMS.

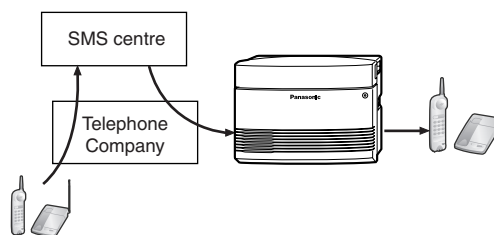

For more details, consult your dealer.

In this manual,

- Proprietary Telephone is abbreviated as "PT"^{*1}.
Single Line Telephone is abbreviated as "SLT".
Proprietary Telephone with a Display is abbreviated as "Display PT".
- The suffix of each model number is omitted.
- The following icons are used as hints and conditions throughout this manual.



Hints



Conditions

^{*1} In this manual, "proprietary telephone" ("PT") means an analogue proprietary telephone (APT).

Important Information

WARNING

- **THIS UNIT MAY ONLY BE INSTALLED AND SERVICED BY QUALIFIED SERVICE PERSONNEL.**
- **IF DAMAGE TO THE UNIT EXPOSES ANY INTERNAL PARTS, DISCONNECT THE POWER SUPPLY CORD IMMEDIATELY AND RETURN THE UNIT TO YOUR DEALER.**
- **WHEN RELOCATING THE EQUIPMENT, FIRST DISCONNECT THE TELECOM CONNECTION BEFORE DISCONNECTING THE POWER CONNECTION. WHEN THE UNIT IS INSTALLED IN THE NEW LOCATION, RECONNECT THE POWER FIRST, AND THEN RECONNECT THE TELECOM CONNECTION.**
- **THIS UNIT IS EQUIPPED WITH AN EARTHED PLUG. FOR SAFETY REASONS THIS PLUG MUST ONLY BE CONNECTED TO AN EARTHED OUTLET THAT HAS BEEN INSTALLED ACCORDING TO APPLICABLE REGULATIONS.**
- **TO PREVENT POSSIBLE FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**
- **THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE. ENSURE THAT THE AC OUTLET IS LOCATED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.**
- **TO PROTECT THIS UNIT FROM STATIC ELECTRICITY, DO NOT TOUCH ANY EXTERNAL CONNECTORS OF THE UNIT.**

Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using wired telephones during an electrical storm. There is a remote risk of electric shock from lightning.
3. Do not use a telephone in the vicinity of a gas leak to report the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire, as they may explode. Dispose according to local regulations.

SAVE THESE INSTRUCTIONS



The KX-TES824E, the KX-TES824NE, the KX-TES824GR/KX-TEM824GR, the KX-TES824CE/KX-TEM824CE, and the KX-TES824PD/KX-TEM824PD are designed to interwork with the Analogue Public Switched Telephone Network (PSTN) of European countries.

Panasonic Communications Co., Ltd./Panasonic Communications Company (U.K.) Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://doc.panasonic.de>

Contact:

Panasonic Services Europe GmbH

Panasonic Testing Centre

Winsbergring 15, 22525 Hamburg, F.R. Germany

Attention

- Keep the unit away from heating appliances and devices that generate electrical noise such as fluorescent lamps, motors, and televisions. These noise sources can interfere with the performance of the PBX.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C), and vibration, and should not be exposed to direct sunlight.
- If you are having problems making calls to outside destinations, follow this procedure to test the outside (CO) lines:
 1. Disconnect the PBX from all outside (CO) lines.
 2. Connect known working single line telephones (SLTs) to those outside (CO) lines.
 3. Make a call to an external destination using those SLTs.

If a call cannot be carried out correctly, there may be a problem with the outside (CO) line that the SLT is connected to. Contact your telephone company.

If all SLTs operate properly, there may be a problem with your PBX. Do not reconnect the PBX to the outside (CO) lines until it has been serviced by an authorised Panasonic Factory Service Centre.

- Never attempt to insert wires, pins, etc. into the vents or holes of this unit.
- Wipe the unit with a soft cloth. Do not clean the unit with abrasive powders or with chemical agents such as benzene or thinner.
- When using a Panasonic proprietary telephone (PT), use only the correct Panasonic handset.

For Future Reference

Please print, record, and retain the following information for future reference.

Note

The serial number of this product can be found on the label affixed to the unit. You should record the model number and the serial number of this unit as a permanent record of your purchase to aid in identification in the event of theft.

| | |
|-------------------|-------|
| MODEL NO. | _____ |
| SERIAL NO. | _____ |
| DATE OF PURCHASE | _____ |
| NAME OF DEALER | _____ |
| DEALER'S ADDRESS | _____ |
| | _____ |
| | _____ |
| | _____ |
| DEALER'S TEL. NO. | _____ |

Table of Contents

| | | |
|------------|--|-----------|
| 1 | Operation..... | 11 |
| 1.1 | Before Operating a Telephone | 12 |
| 1.1.1 | Before Operating a Telephone | 12 |
| 1.2 | Making Calls | 20 |
| 1.2.1 | Basic Calling | 20 |
| 1.2.2 | Easy Dialling | 25 |
| 1.2.3 | Redialling | 29 |
| 1.2.4 | When the Dialed Party is Busy or There is No Answer | 31 |
| 1.2.5 | Switching the Calling Method (Alternate Calling—Ring/Voice) | 38 |
| 1.2.6 | Using Your Calling Privileges at Another Extension (Walking COS) | 39 |
| 1.2.7 | Accessing Another Party Directly from Outside (Direct Inward System Access [DISA]) | 40 |
| 1.3 | Receiving Calls | 43 |
| 1.3.1 | Answering Calls | 43 |
| 1.3.2 | Answering Hands-free (Hands-free Answerback) | 44 |
| 1.3.3 | Answering a Call Ringing at Another Telephone (Call Pickup)..... | 45 |
| 1.4 | During a Conversation..... | 47 |
| 1.4.1 | Transferring a Call (Call Transfer)..... | 47 |
| 1.4.2 | Holding a Call..... | 49 |
| 1.4.3 | Talking to 2 Parties Alternately (Call Splitting) | 52 |
| 1.4.4 | Answering Call Waiting | 53 |
| 1.4.5 | Talking to Multiple Parties (Conference) | 56 |
| 1.4.6 | Muting a Microphone (Microphone Mute) | 60 |
| 1.4.7 | Using the Headset (Headset Operation) | 61 |
| 1.4.8 | Talking to Another Party without Lifting the Handset (Hands-free Operation)..... | 62 |
| 1.4.9 | Changing the Dialling Mode (Pulse to Tone Conversion)..... | 63 |
| 1.5 | Before Leaving Your Desk..... | 64 |
| 1.5.1 | Forwarding Your Calls (Call Forwarding [FWD])..... | 64 |
| 1.5.2 | Showing a Message on the Caller's Telephone Display (Absent Message) | 67 |
| 1.5.3 | Preventing Other People from Using Your Telephone (Extension Lock) | 69 |
| 1.5.4 | Leaving a Group (Log-in/Log-out) | 70 |
| 1.5.5 | Using Voice Messaging (Built-in Voice Message [BV]) | 71 |
| 1.6 | Making/Answering a Paging Announcement | 79 |
| 1.6.1 | Paging | 79 |
| 1.6.2 | Answering/Denying a Paging Announcement | 81 |
| 1.7 | Setting the Telephone According to Your Needs | 82 |
| 1.7.1 | Setting the Alarm (Timed Reminder) | 82 |
| 1.7.2 | Refusing Incoming Calls (Do Not Disturb [DND])..... | 84 |
| 1.7.3 | Receiving Call Waiting | 85 |
| 1.7.4 | Preventing Other People from Joining Your Conversation (Executive Busy Override Deny)..... | 86 |
| 1.7.5 | Turning on the Background Music (BGM) | 87 |
| 1.7.6 | Protecting Your Line against Notification Tones (Data Line Security) | 88 |
| 1.7.7 | Checking the Time Service Mode | 89 |
| 1.7.8 | Clearing Features Set at Your Extension (Extension Feature Clear) | 90 |
| 1.7.9 | Monitoring a Room (Room Monitor)..... | 91 |
| 1.8 | Using User-supplied Equipment..... | 93 |
| 1.8.1 | If a Doorphone/Door Opener is Connected | 93 |
| 1.8.2 | If a Host PBX is Connected..... | 95 |

| | | |
|--------------|---|------------|
| 1.8.3 | If a Voice Processing System is Connected | 96 |
| 1.9 | Using a Display Proprietary Telephone | 103 |
| 1.9.1 | Calling with the Incoming Call Log | 103 |
| 2 | Operator/Manager Operation | 109 |
| 2.1 | Control Features | 110 |
| 2.1.1 | Locking Other Extensions (Remote Extension Lock) | 110 |
| 2.1.2 | Switching the Time Service Mode (Time Service) | 111 |
| 2.1.3 | Setting an Alarm for Other Extensions (Remote Timed Reminder [Wake-up Call]) | 113 |
| 2.1.4 | Erasing All Caller Information in the Common Area (Incoming Call Log in the Common Area—CLEAR ALL) | 115 |
| 2.1.5 | Disregarding the Newest Call or Overwriting the Oldest Call in the Common Area Call Log (301st Incoming Call Logged in the Common Area) | 116 |
| 2.1.6 | Recording, Playing, or Erasing Common BV Outgoing Messages | 117 |
| 2.1.7 | Changing System Settings Using Programming Mode | 119 |
| 3 | Customising Your Phone & PBX | 123 |
| 3.1 | Customising Your Phone (Personal Programming) | 124 |
| 3.1.1 | Customising Your Phone (Personal Programming) | 124 |
| 3.1.2 | Changing Settings Using Programming Mode | 125 |
| 3.1.3 | Customising the Buttons | 128 |
| 3.2 | Managing Call Logs | 131 |
| 3.2.1 | Requirements | 131 |
| 3.2.2 | Viewing, Printing, and Clearing Call Logs | 132 |
| 3.3 | Customising Your PBX (System Programming) | 133 |
| 3.3.1 | Programming Information | 133 |
| 3.3.2 | System Programming | 136 |
| 4 | Appendix | 141 |
| 4.1 | Troubleshooting | 142 |
| 4.1.1 | Troubleshooting | 142 |
| 4.2 | Feature Number Table | 145 |
| 4.2.1 | Feature Number Table | 145 |
| 4.3 | Identifying Tones | 153 |
| 4.3.1 | Identifying Tones | 153 |
| Index | | 159 |



Section 1

Operation

*This chapter shows you step by step how to use each feature.
Read this chapter to become familiar with the many useful
features of this PBX.*

1.1 Before Operating a Telephone

1.1.1 Before Operating a Telephone


◆◆ What Kind of Telephone Can Be Used?

You can use a single line device such as a single line telephone (SLT), fax machine, modem, or wireless telephone, or a Panasonic proprietary telephone (PT) such as the KX-T7730. Some features may not be available, depending on the telephone you are using.

If you are using a Panasonic PT with special feature buttons, or a display (Display PT), or both, follow the procedures that use feature buttons or the display, for easy operation.

If you are using an SLT, follow the procedures that use specified numbers to access features (feature numbers).

If you use a Direct Station Selection (DSS) Console, you can also use the buttons on the DSS Console to perform operations, instead of the buttons on the connected PT.

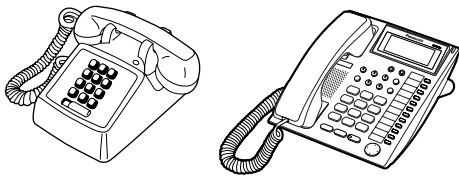

- If you use a Panasonic PT that does not have feature buttons, you may change one of the unused flexible buttons to a feature button. Refer to "3.1.3 Customising the Buttons".

◆◆ Feature Numbers

Features have been assigned feature numbers, which can be entered on your telephone to access the corresponding feature. Some features are only accessible by entering the feature number. In addition, some features require other additional parameters to be entered to activate the feature. Where necessary, these are specified in the text.

Notice

The default value assigned to certain features may vary depending on your country/area. For more details, consult your dealer.



If you use an SLT that does not have the "*" or "#" keys,
it is not possible to access features that have "*" or "#" in their feature numbers.

◆◆ Tone

Various tones are used during or after operations to provide you with information. For more details regarding the types of tones and their meanings, refer to "4.3.1 Identifying Tones" (Appendix).

◆◆ Display


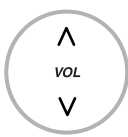
In this manual, you will see the phrase "the display ...". This refers to the display of a Panasonic PT. When you use a Panasonic display PT, displayed messages or items help you to operate the telephone.

Your Extension Number

If you use a Panasonic display PT, you can confirm your own extension number by pressing the "*" key 2 times ("**") while on-hook, or by accessing personal programming. For more details, refer to "3.1.2 Changing Settings Using Programming Mode".

◆◆ Using a Navigator Key/Volume Key (depending on the type of your PT)

The Navigator Key can be used to control display contrast and volume, or to search for items using the display. Press the Navigator Key/Volume Key in the desired direction. The contrast or volume level and the items displayed, will change as follows:

| Navigator Key | Volume Key |
|---|--|
| <p>Up (Level increases)</p> <p>Left  Right</p> <p>Down (Level decreases)</p> | <p>Up (Level increases)</p> <p></p> <p>Down (Level decreases)</p> |

◆◆ Examples


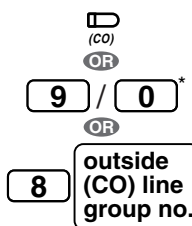

The displays and the illustrations shown throughout this manual as examples are of a telephone connected to the KX-TES824/KX-TEM824.

◆◆ Restrictions







Features that have been restricted through system programming will not be available at your extension.

◆◆ Icon Descriptions

The following icons are used frequently throughout this manual.

| | | | |
|---|--|--|---|
|  | This feature cannot be used with an SLT. |  | <p>Seize an outside (CO) line by doing one of the following:</p> <ul style="list-style-type: none"> Press a CO button. Dial the automatic line access number (9/0)*. <p>Note</p> <p>* For New Zealand, the automatic line access number may be either 1 or 9.</p> <ul style="list-style-type: none"> Dial the outside (CO) line group access number (8) and outside (CO) line group number. |
|  | See "Programming" for related programming, if necessary. | | |




 








1.1 Before Operating a Telephone

| | | | |
|---|---|---|---|
|  | Go off-hook by doing any of the following: <ul style="list-style-type: none"> • Lift the handset. • Press the SP-PHONE button. • Press the MONITOR button. (To start talking, lift the handset.) |  | Press the Call button on the Doorphone. |
|  | Go on-hook by doing any of the following: <ul style="list-style-type: none"> • Hang up. • Press the SP-PHONE button. • Press the MONITOR button. |  | Press the Recall/hookswitch briefly. |
|  | Talk. | <div>desired no.</div> | Enter the required number. <Example> <div>account code</div> Enter the account code. |
|  | You will hear a busy, confirmation, dial, ring, or ringback tone. B. Tone: Busy Tone C. Tone: Confirmation Tone D. Tone: Dial Tone R. B. Tone: Ringback Tone | <div>extension no.</div> | Dial an extension number. |
| <div>outside phone no.</div> | Dial an outside telephone number. | <div>phone no.</div> | Dial an extension number or outside telephone number. |





 


◆◆ When You Use a Panasonic Proprietary Telephone

If you use a Panasonic PT or DSS Console, you will be able to use some of the useful feature buttons described below. These buttons simplify certain operations. The illustrations below may differ from the actual buttons on your telephone.

Fixed Buttons

| | | | |
|---|---|---|---|
|  | CO: Used to access an outside (CO) line (or outside (CO) line group) when making or receiving a call. The button's preprogrammed Outside (CO) Line Access method determines which line is selected. Can also be customised as a feature button. |  | SP-PHONE: Used to select handset or hands-free operation. |
|  | AUTO DIAL/STORE: Used for System Speed Dialling/Saved Number Redial, playing back personal/common BV outgoing messages (OGMs) used by the Built-in Voice Message (BV) feature, and storing programme changes. |  | PAUSE: Used to insert a dialling pause in a stored number. |
|  | REDIAL: Used to redial the last number dialled. |  | MESSAGE: Used to leave a message waiting indication, call back the party who left a message waiting indication, or play back voice messages. This button is provided with an LED (Light Emitting Diode), except for on KX-T7700 series telephones. With KX-T7700 series telephones, the Message/Ringer Lamp is lit when a message waiting indication is left at your extension. |
|  | INTERCOM: Used to make or receive intercom calls. |  | MONITOR: Used to select hands-free dialling and monitor operation. |
|  | AUTO ANS (Auto Answer)/MUTE: Used to answer an intercom call automatically in hands-free mode or to mute the built-in microphone during a conversation. |  | TRANSFER: Used to transfer a call to another party. |
|  | HOLD: Used to place a call on hold. |  | FLASH/RECALL: Used to disconnect the current call and make another call without hanging up, or to send an EFA (External Feature Access) signal to the telephone company or host PBX to access external features. |

 1.1 Before Operating a Telephone

| | | | |
|--|---|---|---|
|  | CONF (Conference): Used to establish a 3-party or 5-party conference call. |  | VOICE CALL: Used to answer an intercom call automatically. |
|  | FWD/DND (Call Forwarding/Do Not Disturb): Used to set the FWD or DND feature for the extension. |  | PROGRAM: Used to enter and exit programming mode. |
|   | Navigator Key, Volume Key: Used to adjust the volume of the speaker, handset and headset, and the display contrast, or to select desired items. |  | Programmable Feature (PF): <i>Located in the right column of the CO button array on certain telephones or on the DSS Console.</i> Used to access a preprogrammed feature. Mostly used as a One-touch Dialling button. |

Customised Buttons

Throughout this manual, when the name of a button is written in parentheses, such as "(G-CO)", this means that it is a flexible button that has been customised. To customise flexible buttons, refer to "3.1.3 Customising the Buttons".

| Customised Button | Function |
|--|---|
| Single-CO (S-CO) | Used to access a specified outside (CO) line for making or receiving calls. |
| Group-CO (G-CO) | Used to access an idle outside (CO) line in a specified outside (CO) line group for making calls. Incoming calls from outside (CO) lines in the assigned outside (CO) line group arrive at this button. |
| Other-CO (O-CO) | Used to access an idle outside (CO) line for making calls. Incoming calls from the assigned outside (CO) lines, which are not assigned to S-CO or G-CO buttons, arrive at this button. |
| Direct Station Selection (DSS) | Used to call an extension with a one-touch operation. |
| One-touch Dialling | Used to call a preprogrammed party or access a feature with a one-touch operation. |
| Message | Used to leave a message waiting indication, call back the party who left the message waiting indication, or play back voice messages. |
| Message for another extension | Used to access voice messages stored for another extension. |
| FWD/DND (Call Forwarding/Do Not Disturb) | Used to set the FWD or DND feature for the extension. |
| Save | Used to store a telephone number while in a conversation with an outside party or while hearing a busy tone, and then easily redial the number later. |
| Conference | Used to establish a 3-party or 5-party conference call. |
| Log-in/Log-out | Used to switch between Log-in and Log-out status. |
| Extension Lock | Used to remotely lock or unlock another extension. |
| Day | Used to change the time service mode to day mode. |

| Customised Button | Function |
|-------------------------------|---|
| Night | Used to change the time service mode to night mode. |
| Lunch | Used to change the time service mode to lunch mode. |
| Caller ID Indication—Common | Used to inform you of calls logged in the common area, store the information of an incoming call during a conversation, and view caller information while on-hook and then call back a caller. |
| Caller ID Indication—Personal | Used to inform you of calls logged in your personal area, store the information of an incoming call during a conversation, and view caller information while on-hook and then call back a caller. |
| Caller ID Selection—Common | Used to display and cycle through the information of an incoming call during a conversation, while receiving a call, or while viewing caller information, display the number of logged calls while on-hook, and inform you that the common area call log is full. |
| Caller ID Selection—Personal | Used to display and cycle through the information of an incoming call during a conversation, while receiving a call, or while viewing caller information, display the number of logged calls while on-hook, and inform you that the personal area call log is full. |
| 2-way Record | Used to record a conversation into your own mailbox. |
| 2-way Transfer | Used to record a conversation into the mailbox of a specified extension. |
| Live Call Screening (LCS) | Used to listen while a caller is leaving a message in your voice mailbox and, if desired, intercept the call. |
| LCS Cancel | Used to stop monitoring your own voice mailbox while a caller is leaving a message, or stop the alert tone heard in Private mode while a caller is leaving a message. |
| Voice Mail (VM) Transfer | Used to transfer a call to the mailbox of a specified extension. |

◆◆ How to Follow the Steps


An example system operation procedure is shown below.

◆◆ **Calling Other Extensions**


Feature title

To call another extension (Intercom Call)

PT/SLT




Off-hook.




extension no.

Press **DSS** or dial extension number.




Talk.

Operation steps
Icons and meanings are explained in "Icon Descriptions".




- The Direct Station Selection (DSS) button light shows the current status as follows:
Off: The extension is idle.
Red on: The extension is on a call.

Conditions



- For quick operation**
If you are the operator or dial certain extension numbers frequently, DSS buttons are useful.
- Hands-free operation**
You can make an intercom call and have a conversation in hands-free mode using the SP-PHONE/INTERCOM button. Refer to "1.4.8 Talking to Another Party without Lifting the Handset (Hands-free Operation)".


Hints



Customising Your Phone


- 3.1.3 Customising the Buttons
Create or edit a Direct Station Selection (DSS) button.

Programming References: Related or required programming is noted.

-  If your telephone type is not included in the operation steps, for example, only "PT" is marked and you are using an SLT, your telephone cannot execute that feature.
- If your telephone can use several methods to execute one feature, you can select the preferred method according to your needs.

◆◆ Connection Example

This diagram shows devices that can be connected.

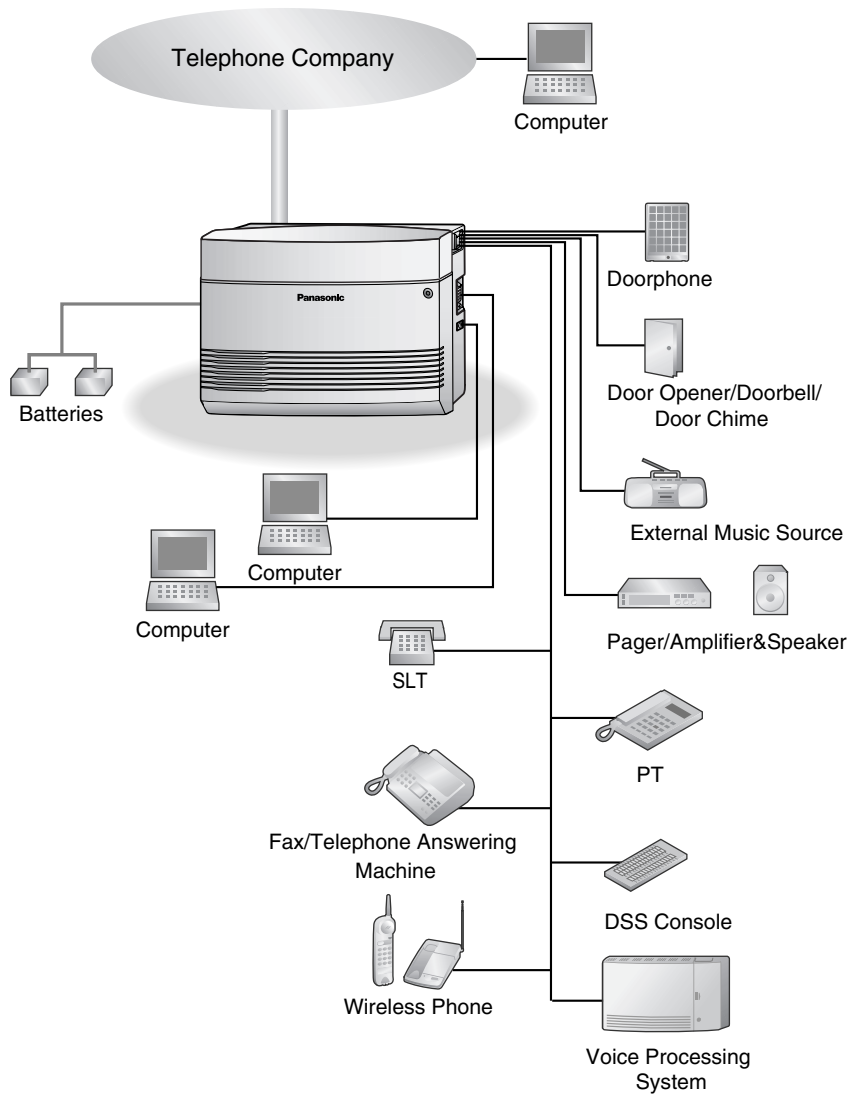


1.2 Making Calls

1.2.1 Basic Calling

- Calling Other Extensions
- Calling an Outside Party
- Using an Account Code (Account Code Entry)

◆◆ Calling Other Extensions

To call another extension (Intercom Call)

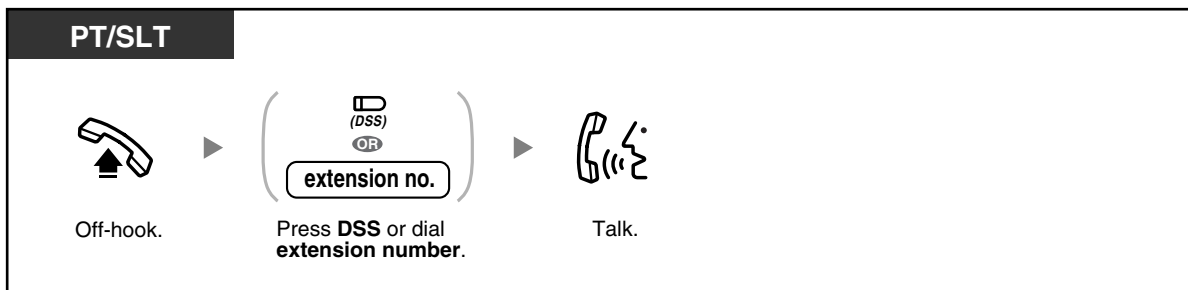

- The Direct Station Selection (DSS) button light shows the current status as follows:
Off: The extension is idle.
Red on: The extension is on a call.



- **For quick operation**
 If you are the operator or dial certain extension numbers frequently, DSS buttons are useful.
- **Hands-free Operation**
 You can make an intercom call and have a conversation in hands-free mode using the SP-PHONE/INTERCOM button. Refer to "1.4.8 Talking to Another Party without Lifting the Handset (Hands-free Operation)".




Customising Your Phone

- 3.1.3 Customising the Buttons
 Create or edit a Direct Station Selection (DSS) button.

To call the operator (Operator Call)

You can easily call the extension assigned as the operator extension.

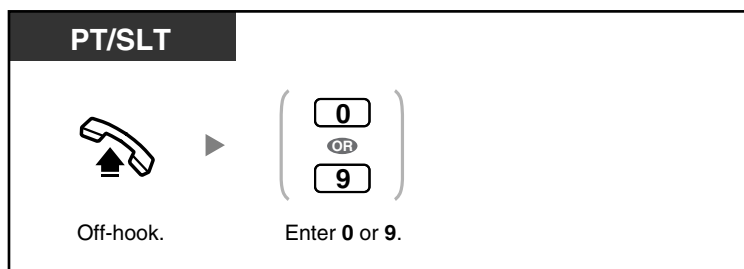


- The default operator call number varies depending on your country/area. For more details, consult your dealer.

◆◆ Calling an Outside Party

There are 4 methods of seizing an outside (CO) line. Use whichever method you prefer, unless requested by your manager to use a specific method.

Choose one of the following methods:

To select an idle outside (CO) line automatically (Automatic Line Access)

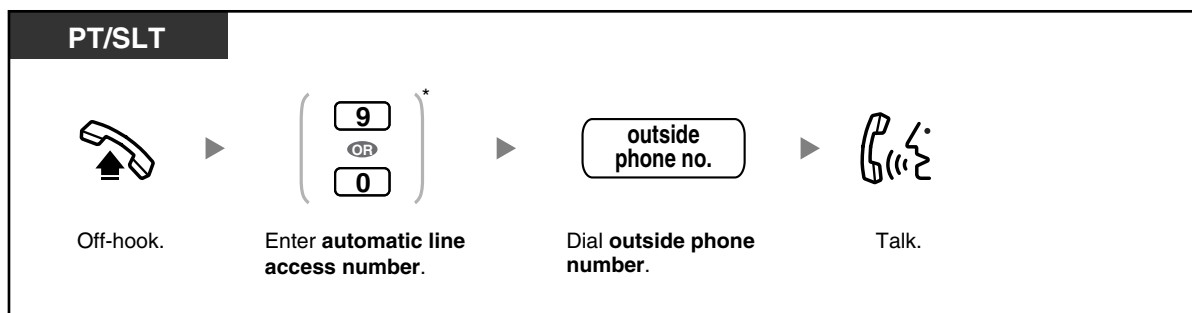


* For New Zealand: 1 or 9




- The default automatic line access number varies depending on your country/area. For more details, consult your dealer.


To select an idle outside (CO) line in the specified outside (CO) line group automatically (Outside (CO) Line Group Access)

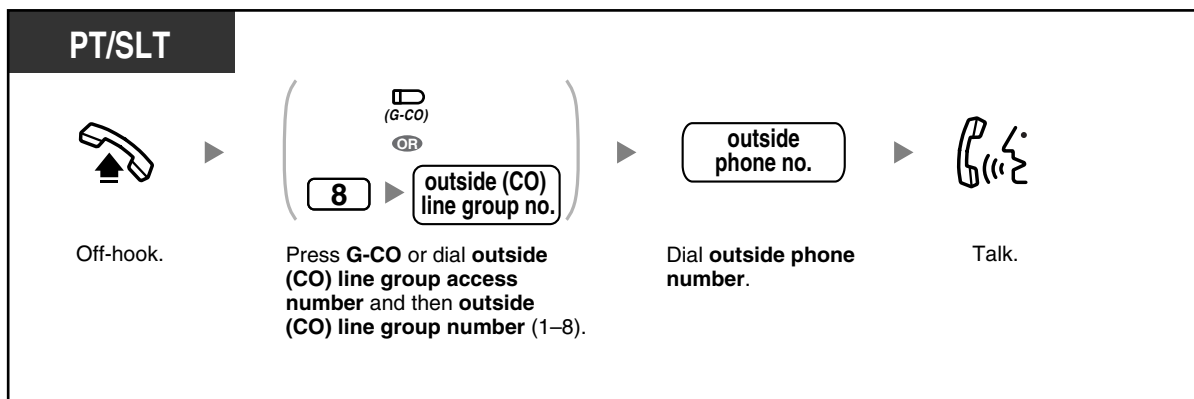

To select a specified outside (CO) line

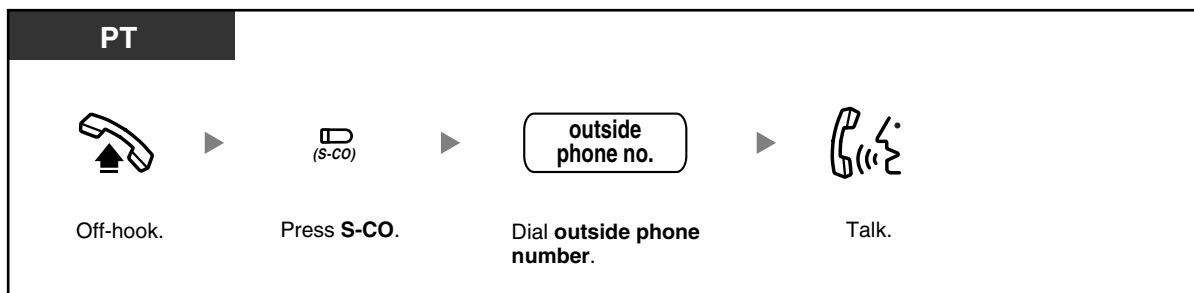

To select an idle unassigned outside (CO) line

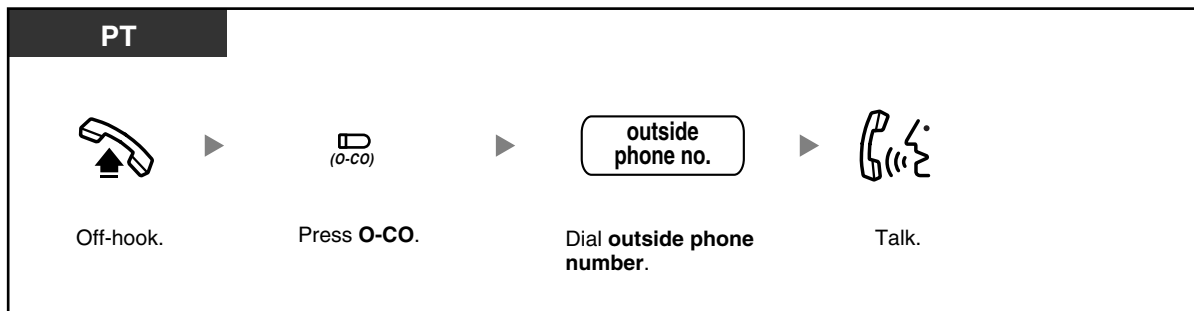



- The Single-CO (S-CO) and Group-CO (G-CO) button lights show the current status as follows:
Off: The line is idle.
Green on: You are using the line.
Red on: Another extension is using the line (S-CO), or other extensions are using all outside (CO) lines in the outside (CO) line group (G-CO).
- **Emergency Call**
 You can dial preprogrammed emergency numbers after seizing an outside (CO) line without any restrictions.
- You can press the S-CO or G-CO button without going off-hook first.
- You may be restricted from making calls to certain outside parties. If you have questions about your calling restrictions, consult your manager or dealer.



- **To make a call to another party without going on-hook**, press the FLASH/RECALL button. Pressing the button will re-access the outside (CO) line and provide an external dial tone. You can dial the new phone number without going on/off-hook.
- **Hands-free Operation**
 You can make an outside (CO) line call and have a conversation in hands-free mode using the SP-PHONE button. Refer to "1.4.8 Talking to Another Party without Lifting the Handset (Hands-free Operation)".




Customising Your Phone

- 3.1.2 Changing Settings Using Programming Mode—**Line Preference—Outgoing**
 Select the seized line when going off-hook.
- 3.1.3 Customising the Buttons
 Create or edit a Single-CO (S-CO) button, Group-CO (G-CO) button, or Other-CO (O-CO) button.

◆◆ Using an Account Code (Account Code Entry)

The manager may give personal account codes to extension users, and check their telephone usage for accounting purposes. Alternatively, an account code can be specified for each customer, to log call durations for billing purposes.

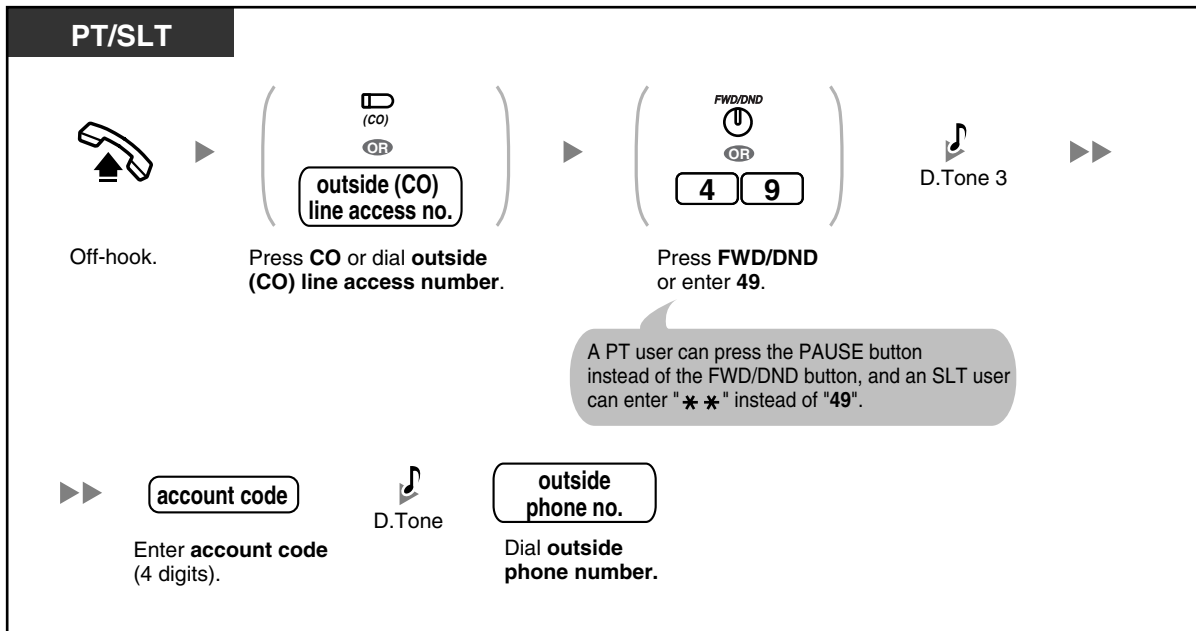

- You may not be able to make an outside (CO) line call without entering an account code depending on your telephone's mode of account code entry. The mode is assigned to each extension. Ask your manager or dealer about your telephone's mode.
- A Panasonic proprietary telephone (PT) user** can enter an account code during a conversation or within 30 seconds after the other party hangs up (while hearing a reorder tone), by pressing the FWD/DND (Call Forwarding/Do Not Disturb) button, then entering the account code.
- Account codes may use the digits "0 through 9". Non-numeric codes such as FLASH/RECALL and PAUSE cannot be used.
- You can clear the account code by pressing the " * * " key or FWD/DND button while entering the account code, and then re-enter the account code.



- If you hear a reorder tone after entering the account code**, the account code entered does not exist. Enter the correct code.
- For your convenience**, you can store a code together with a phone number in the telephone's memory (e.g., Speed Dialling).



Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit an FWD/DND (Call Forwarding/Do Not Disturb).


1.2.2 Easy Dialling

There are several convenient methods of storing and dialling frequently used phone numbers.

- Using a One-touch Button (One-touch Dialling)
- Using Numbers Stored at Your Extension (Personal Speed Dialling)
- Using Numbers Stored in the PBX (System Speed Dialling)
- Dialling a Preset Number by Going Off-hook (Hot Line)
- Using a Preprogrammed Number (Quick Dialling)

◆◆ Using a One-touch Button (One-touch Dialling)

You can dial a phone number (max. 24 digits) previously stored to a flexible button with a one-touch operation.

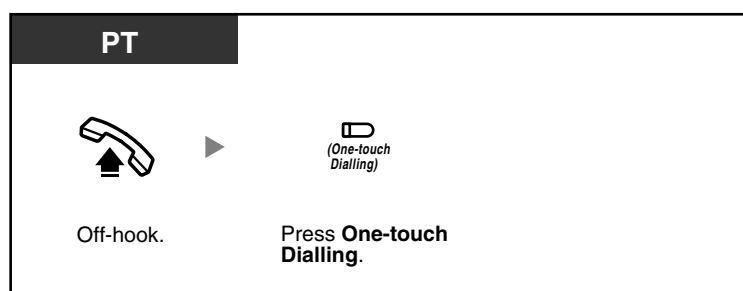

- A telephone number longer than 24 digits can be stored by dividing it among 2 or more One-touch Dialling buttons.
- You can confirm the stored number of a One-touch Dialling button by pressing it while on-hook.
- You can press a CO button to select a desired outside (CO) line before pressing the One-touch Dialling button.




Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a One-touch Dialling button, store the desired phone number, or feature number.


◆◆ Using Numbers Stored at Your Extension (Personal Speed Dialling)

You can store up to 10 numbers at your extension for your personal use.
This feature is also known as Station Speed Dialling.


To store a phone number

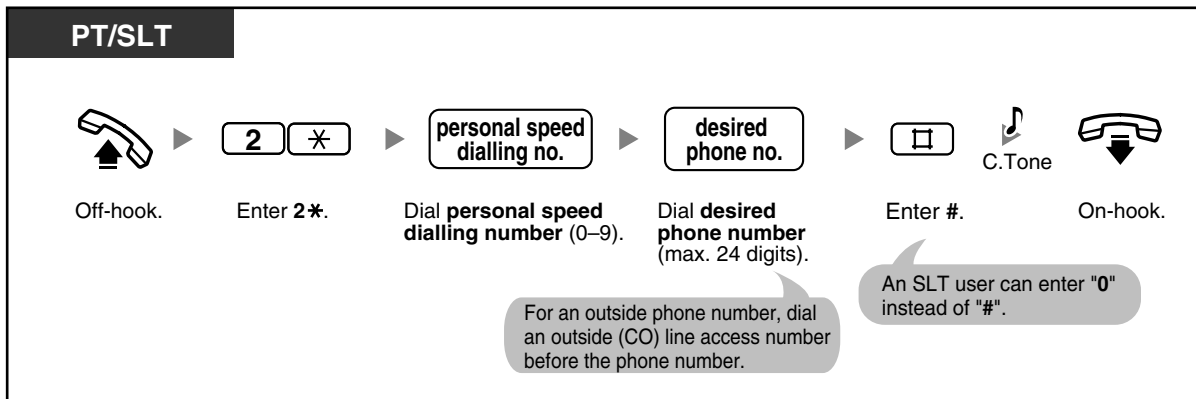

To dial

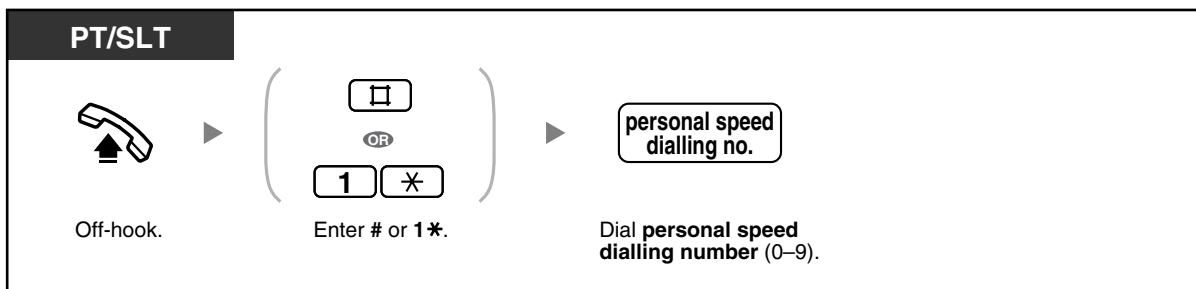


To confirm

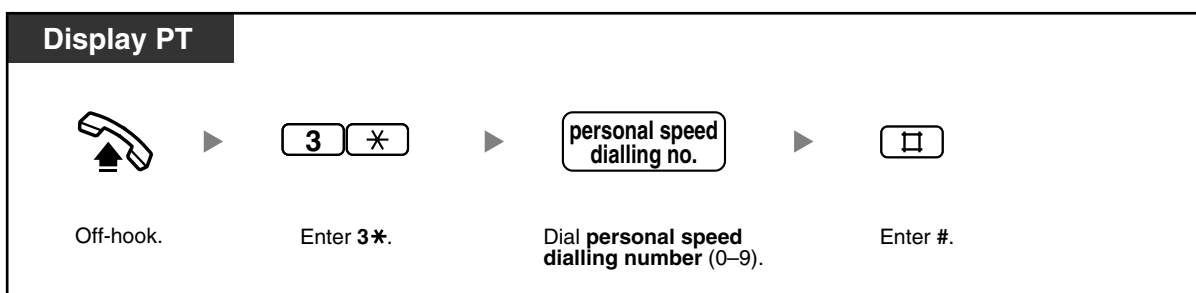

- Personal Speed Dialling numbers (0 through 9) correspond to the numbers (F1 through F10) of the Programmable Feature (PF) buttons assigned as One-touch Dialling numbers. Assigning a One-touch Dialling number to PF button "F1" will override Personal Speed Dialling number "0", and vice versa.
- Rotary single line telephone (SLT) users cannot use this feature.
- Up to 24 digits including "*" can be stored. However, depending on your mode of account code entry, "*" may not be regarded as a pause.

◆◆ Using Numbers Stored in the PBX (System Speed Dialling)

You can make calls using preprogrammed speed dialling numbers (max. 100 codes) stored in the PBX. Ask your manager or dealer about the stored speed dialling numbers.

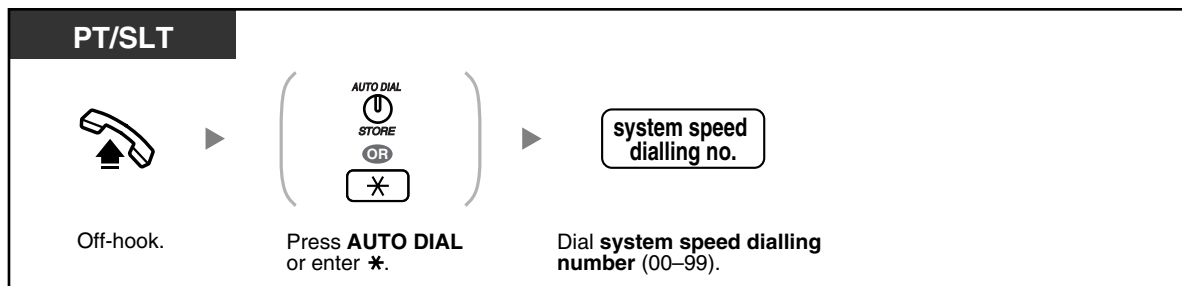

- A telephone number longer than 32 digits can be stored by dividing it among 2 or more System Speed Dialling buttons.

<Example>

If the number is divided and stored in system speed dial numbers 01 and 02:




- Rotary SLT users cannot use this feature.


◆◆ Dialling a Preset Number by Going Off-hook (Hot Line)

An SLT user can make a call simply by going off-hook, if the telephone number has been stored beforehand. This feature is also known as Pickup Dialling.

To store a phone number

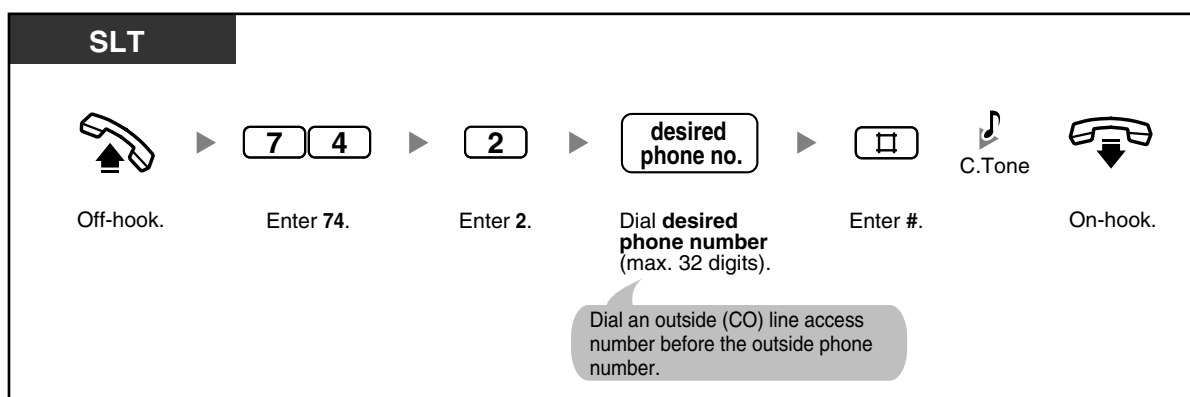

To set/cancel

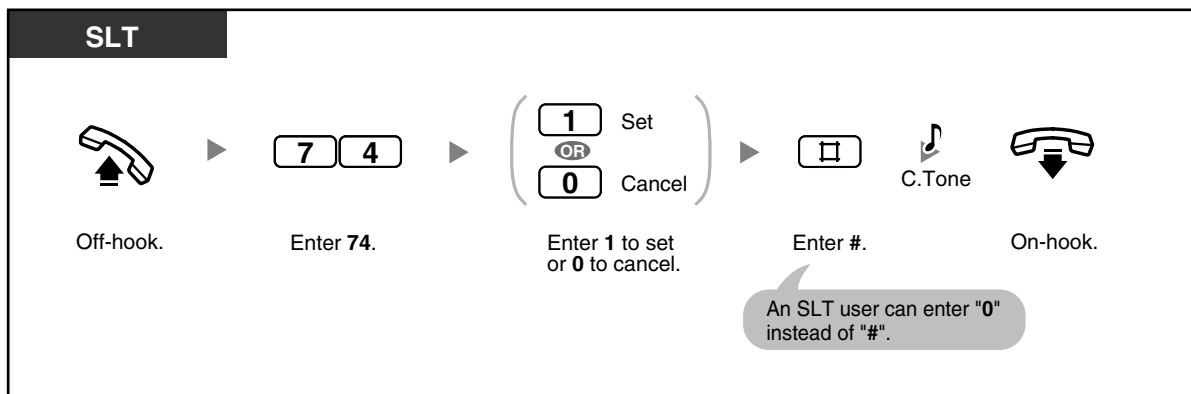


To dial



- **To call another party**, dial the desired party's phone number before the preprogrammed number is dialled.
- Up to 32 digits including "*" can be stored. However, depending on your mode of account code entry, "*" may not be regarded as a pause.
- Rotary SLT users cannot programme this feature.

◆◆ Using a Preprogrammed Number (Quick Dialling)

You can make a call simply by using the preprogrammed code number (50 through 59). For more details, consult your manager or dealer.

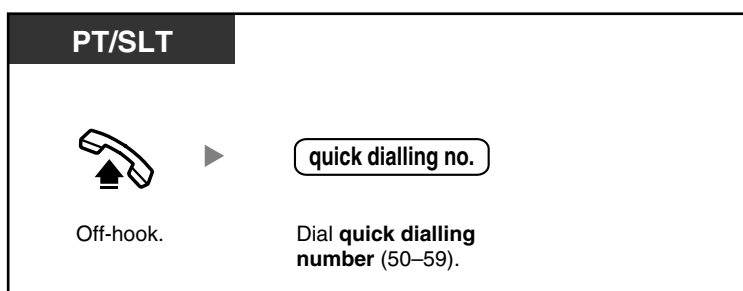

- This feature may be restricted depending on system programming.

1.2.3 Redialling

Redial features make it easy to make consecutive calls to the same outside party.

- Redialling the Last Outside Number You Dialed (Last Number Redial)
- Saving an Outside Phone Number for Redialling (Saved Number Redial)



- Up to 64 digits, "×", "#", PAUSE, and SECRET (INTERCOM) (which stops all or part of the number from being displayed) can be stored and redialled. The outside (CO) line access number is not counted as a digit.
- If you hear a busy tone after pressing the REDIAL or Save button, select another line and then press the REDIAL or Save button or dial the feature number to retry.
- You can confirm the stored number by pressing the REDIAL or Save button while on-hook.




Automatic Redial


To redial automatically (if the called party is currently busy), press the SP-PHONE or MONITOR button and then the REDIAL or Save button. Redialling will be automatically repeated until the called party answers or until a specified time limit is reached. You can perform other tasks while Automatic Redial is being carried out. To cancel, press the FLASH/RECALL button or perform another operation.

◆◆ Redialling the Last Outside Number You Dialed (Last Number Redial)

To dial

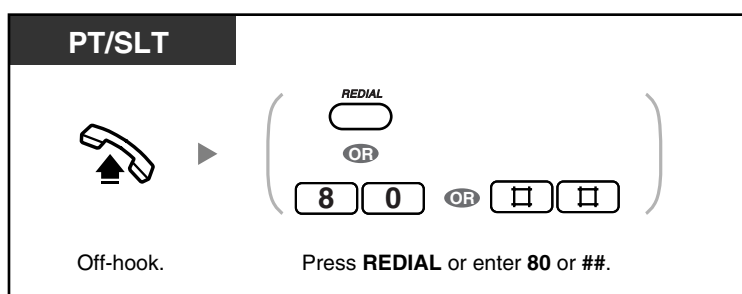

To dial automatically (Automatic Redial)

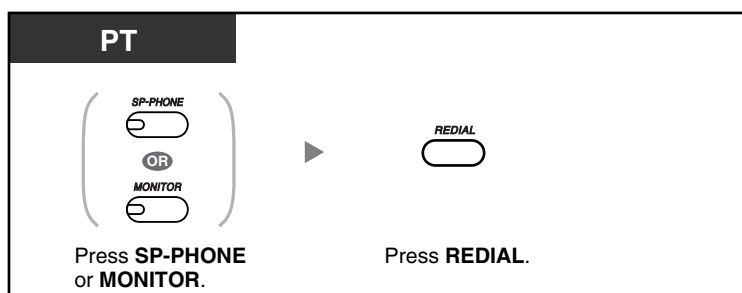

- Pressing the REDIAL button after dialling a telephone number or during a conversation will disconnect the current call and redial the stored number.




◆◆ Saving an Outside Phone Number for Redialling (Saved Number Redial)

The saved number remains available until another number is stored.

To save

PT

During a conversation or while hearing a busy tone



Press **AUTO DIAL/STORE**. Press **Save**.

To dial

PT



Off-hook. Press **Save**.

To dial automatically (Automatic Redial)

PT



Press **SP-PHONE**. Press **Save**.



Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a Save button.

1.2.4 When the Dialed Party is Busy or There is No Answer

- Reserving a Busy Line (Automatic Callback Busy [Camp-on])
- Sending a Call Waiting Tone to a Busy Extension (Busy Station Signalling [BSS])
- Leaving a Message Waiting Indication/Calling Back a Caller Who Left an Indication (Message Waiting)
- Joining an Existing Call (Executive Busy Override)
- Calling an Extension That Is Refusing Calls (DND Override)

◆◆ Reserving a Busy Line (Automatic Callback Busy [Camp-on])

If a dialed extension or a desired outside (CO) line is busy, you can set the Automatic Callback Busy feature. Then, when the extension or outside (CO) line becomes idle, your telephone will ring automatically.

When you answer the callback ring:

- a dialed extension becomes idle.
- a desired outside (CO) line that is in use by another extension becomes idle.

You cannot set Automatic Callback Busy for a busy party outside of the PBX.

 
When you answer the callback ring:

- For an outside (CO) line call: The line is seized.
- For an intercom call: The called extension starts ringing automatically.


To set for both an outside (CO) line call and an intercom call

PT/SLT


While hearing a busy tone



Enter 6.



C.Tone




On-hook.


To answer a callback ring set for a busy extension

PT/SLT


While hearing a callback ring



Off-hook.




R.B.Tone



Talk.

To answer a callback ring set for a busy outside (CO) line

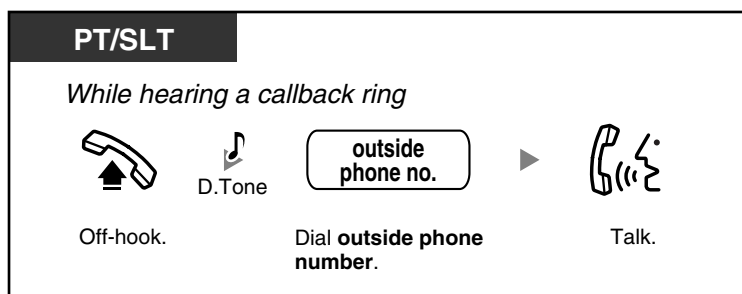


- If you do not answer the callback ring within 10 seconds (4 rings), this feature will be cancelled.

To cancel the callback ring (Automatic Callback Busy Cancel)



◆◆ Sending a Call Waiting Tone to a Busy Extension (Busy Station Signalling [BSS])

If the extension that you want to call is busy, you can send a call waiting tone, to inform the extension user that your call is waiting. When the extension user hears this tone, he or she can choose to put the current party on hold, and talk to you.

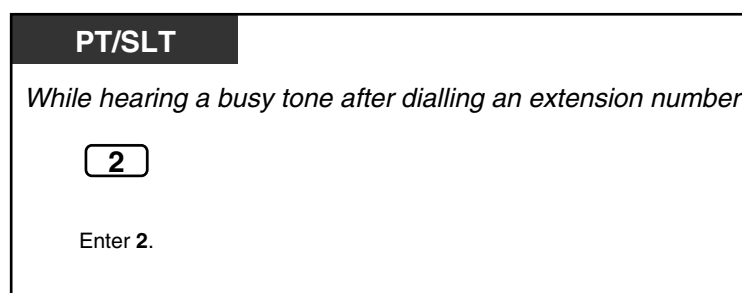

- **If you hear a reorder tone after dialling an extension number**, this feature is not available for the other party's phone. This feature is only available if the called extension has set Call Waiting. To set Call Waiting, refer to "1.7.3 Receiving Call Waiting". To answer a waiting call, refer to "1.4.4 Answering Call Waiting".


◆◆ Leaving a Message Waiting Indication/Calling Back a Caller Who Left an Indication (Message Waiting)

◆ Leaving a Message Waiting Indication

When the called extension is busy or does not answer your call, you can leave a notification so that the called party may call you back.

◆ Calling Back a Caller Who Left an Indication

When you receive a message waiting indication, the MESSAGE/Message for another extension button light or Message/Ringer Lamp will light. You can call back the caller simply by pressing the lit MESSAGE/Message for another extension button.

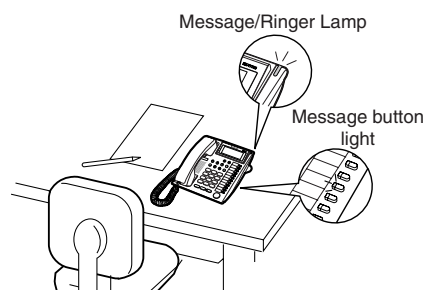


◆ Leaving a Message Waiting Indication


To leave a message waiting indication

PT


When the called extension is busy or does not answer



Press **MESSAGE**.




C.Tone



On-hook.

To leave/cancel a message waiting indication

PT/SLT



Off-hook.

7 0

Enter **70**.

1
Leave

OR

2
Cancel


Enter **1** to leave or **2** to cancel.

desired extension no.


Dial **desired extension number**.

#

Enter **#**.




C.Tone



On-hook.


An SLT user can enter "0" instead of "#".

To cancel a message waiting indication using the MESSAGE button

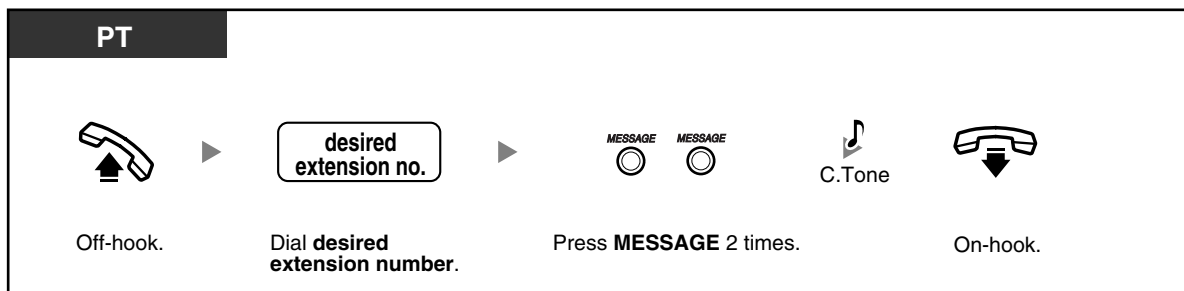


◆ Calling Back a Caller Who Left an Indication


To check a received message and call back

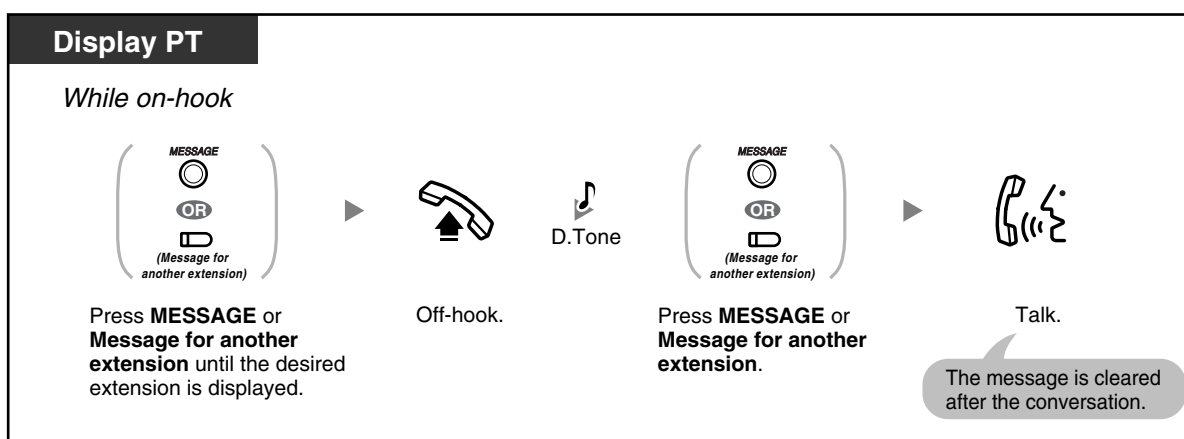


To cancel all message waiting indications left at your extension

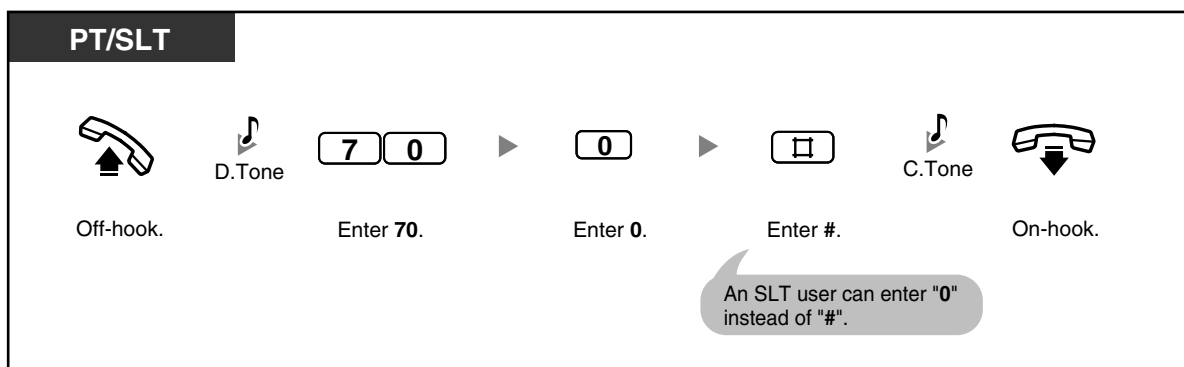

To cancel all message waiting indications left at another extension

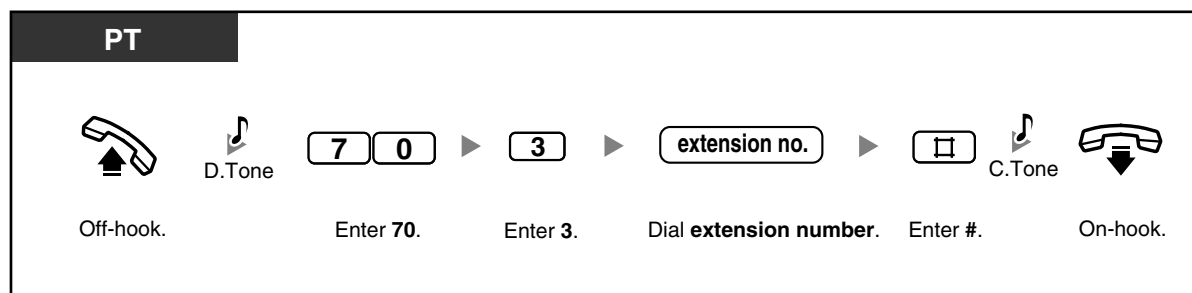

To lock/unlock message waiting indications

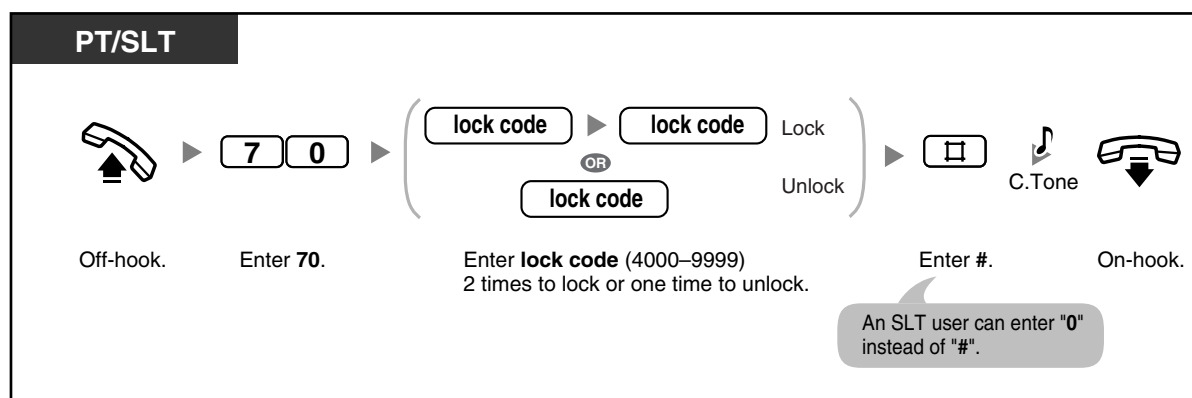

- You can lock message waiting indications so that other extensions cannot confirm, call back, or clear message waiting indications left at your extension (Message Waiting for Another Extension Lock). The operator or manager can cancel this feature for one or all extensions (Extension Lock—CANCEL ALL). Even while this lock is on, you can confirm, call back, or clear message waiting indications left at your own extension.
- On your proprietary telephone (PT), you can establish one or more Message for another extension buttons. These buttons can display message waiting indications left at other telephones.
- To cancel all message waiting indications left at another extension**, it is necessary to first assign the corresponding Message for another extension buttons on your phone.
- The MESSAGE/Message for another extension button light or Message/Ringer Lamp shows the current status as follows:
Off: No messages
Red on: New messages.
- The display shows messages in the order received, starting with the selected message.
<Example>
 5→6→7→8→1→2→3→4
- The MESSAGE button is used to perform operations and display notifications from both the Message Waiting and Built-in Voice Message (BV) features. If a message has also been left in a voice message area, "Voice Message" will be shown on a display PT when the MESSAGE button is pressed. Refer to "1.5.5 Using Voice Messaging (Built-in Voice Message [BV])".
- Each extension can have a maximum of 8 messages waiting when using the Message Waiting feature, or a maximum of 125 voice messages waiting when using the BV feature.



Customising Your Phone


- 3.1.3 Customising the Buttons
Create or edit a Message button or Message for another extension button.




Joining an Existing Call (Executive Busy Override)

You can join an ongoing conversation, establishing a 3-party conference call, if your extension is permitted through system programming.


To join an outside (CO) line call

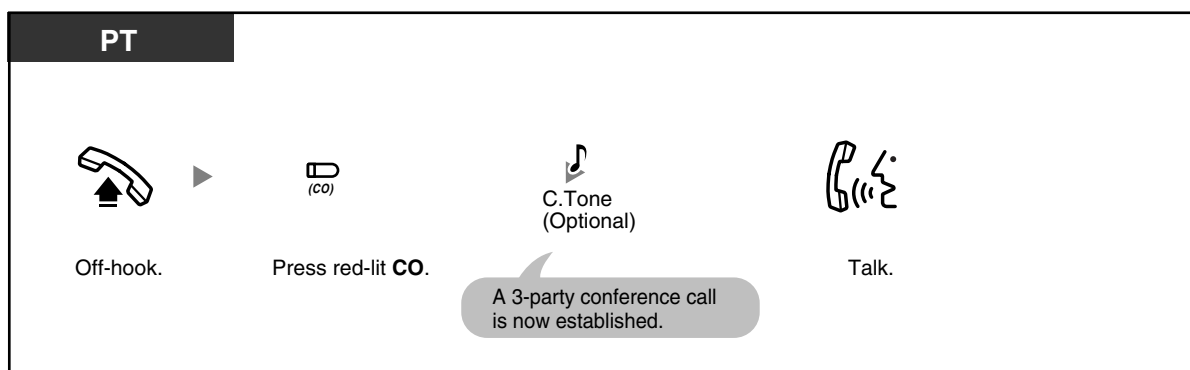


To join an intercom call

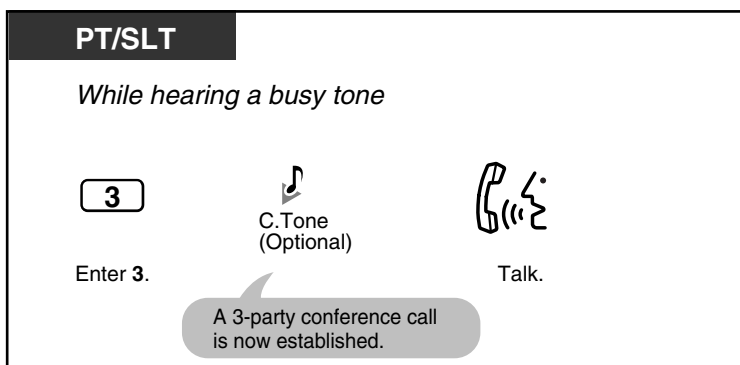

To disconnect one party and talk with another when one of the parties is an outside party

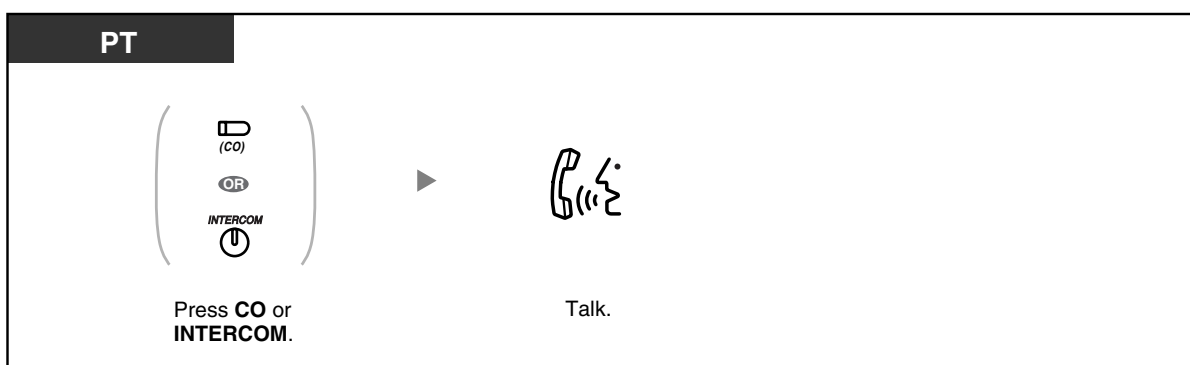


To leave the conference call

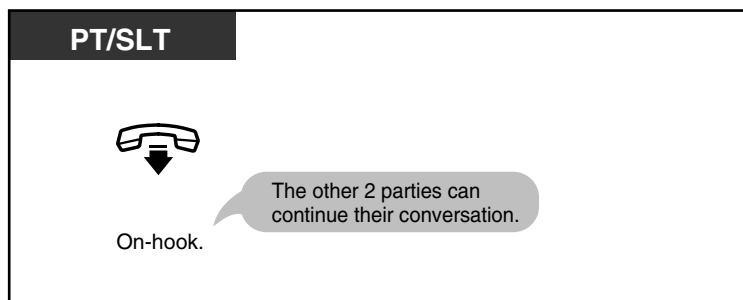

- You can also prevent others from joining your conversations. Refer to "1.7 Setting the Telephone According to Your Needs".

◆◆ Calling an Extension That Is Refusing Calls (DND Override)

You can call users who have set the Do Not Disturb (DND) feature, if your extension is permitted through system programming.

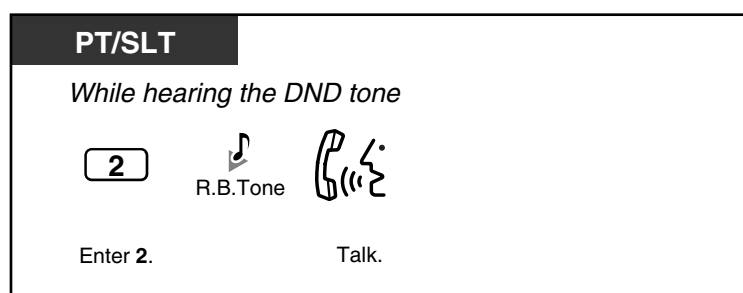


- If you hear the DND tone, enter "2", and then hear a busy tone, the called extension is busy. You can use the Automatic Callback Busy feature.

1.2.5 Switching the Calling Method (Alternate Calling—Ring/Voice)




Extension users can choose whether to be alerted to incoming calls by ringing or by the caller's voice. The calling extension can override this choice and use the alternate method.

Ringring (Default): You can call the other party with a ring tone. You will hear a ringback tone.

 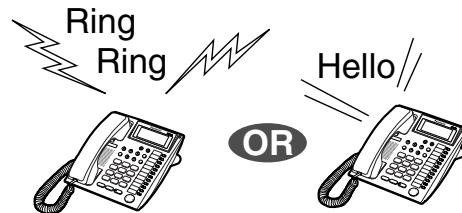Voice-calling: You can talk to the other party immediately after hearing a confirmation tone. You will not hear a ringback tone. You will not be able to hear the other party's voice until he or she answers the call.



To switch the calling method

| PT/SLT | | |
|---|--|--|
| <i>After dialling an extension number</i> | | |
|  |  |  |
| Enter *. | C.Tone or R.B.Tone | Talk. |



- If the called party uses a single line telephone (SLT), Voice-calling is not available.
- Rotary SLT users cannot use this feature.




Customising Your Phone

- 3.1.2 Changing Settings Using Programming Mode—**Alternate Receiving—Ring/Voice**
Select the alerting method, either ring or the other party's voice.

1.2.6 Using Your Calling Privileges at Another Extension (Walking COS)

You can use your calling privileges (class of service [COS]) at another extension, to override calling restrictions that have been set at that extension. To use this feature, a preprogrammed extension password is required. Ask your manager for the extension password.

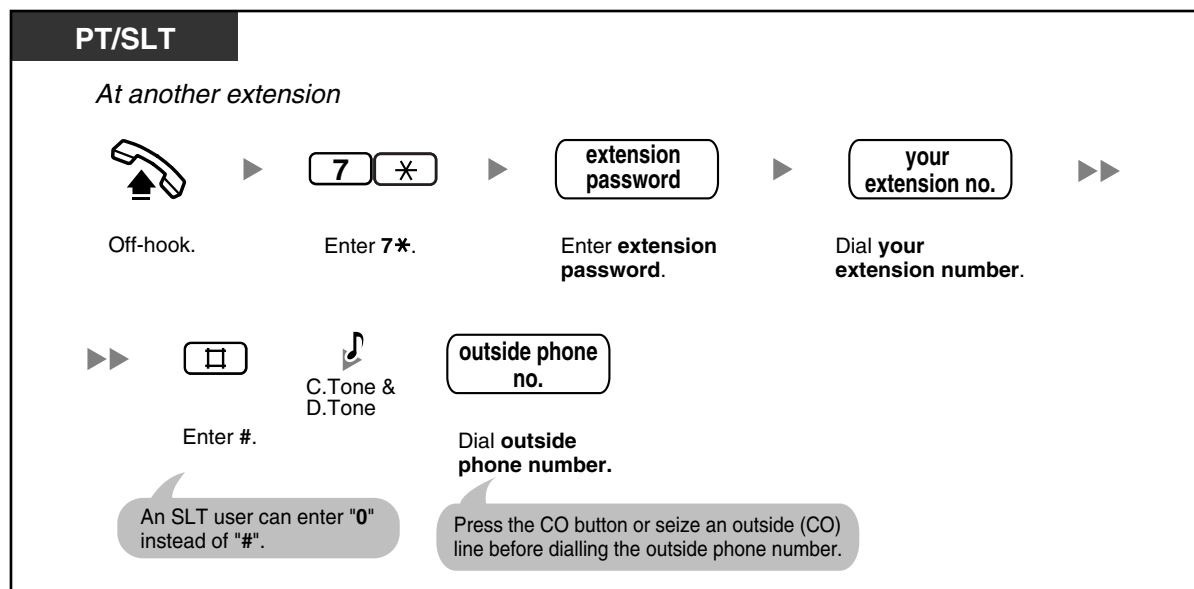


- Rotary single line telephone (SLT) users cannot use this feature.

1.2.7 Accessing Another Party Directly from Outside (Direct Inward System Access [DISA])

When an outside caller dials a specified telephone number of the PBX, a prerecorded Direct Inward System Access (DISA) outgoing message (OGM) can greet the caller and give information about how to access an extension. The operator does not need to be involved. If there is no recorded message, the caller will hear a short beep instead of the DISA OGM.

The caller may also be able to access system features or call an outside party by using the caller's password (DISA security code), depending on the security mode. Ask your manager about the mode assigned to your PBX.

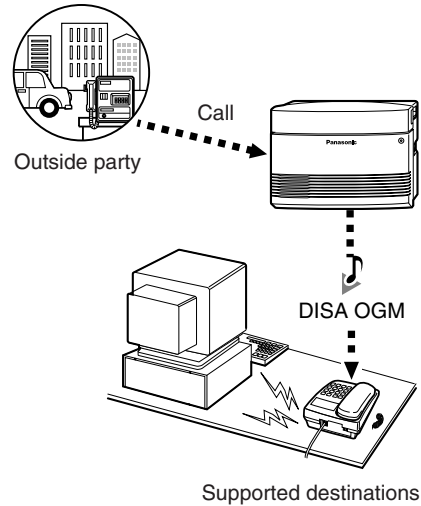

To call an extension



From an Outside Telephone

● In No Security Mode/Trunk Security Mode




You can dial the preprogrammed AA number instead.

● In All Security Mode

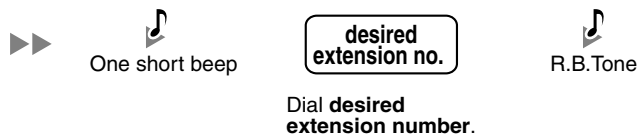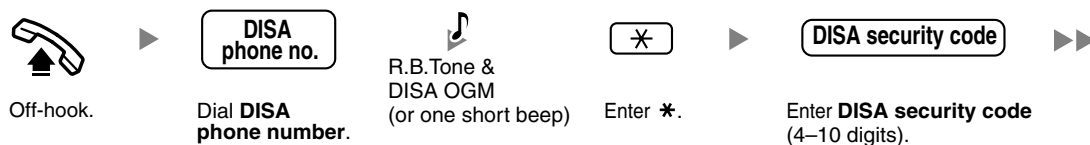

You can dial the preprogrammed AA number instead.

To call an outside party

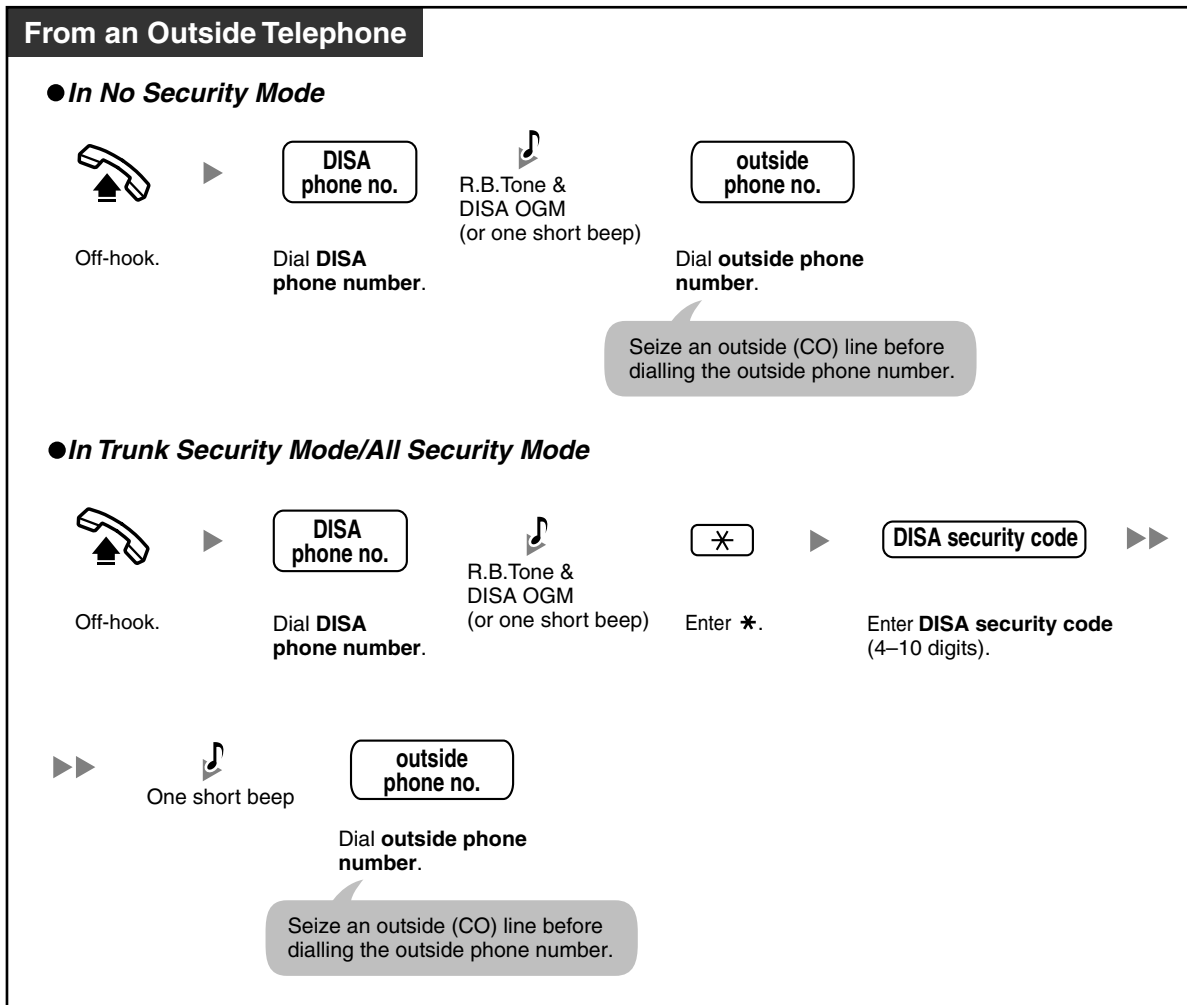



- **WARNING**
There is a risk that fraudulent telephone calls will be made using the Outside-to-Outside (CO-to-CO) Line Call feature of DISA.
The cost of such calls will be billed to the owner/renter of the PBX.
To protect the PBX from this kind of fraudulent use, we strongly recommend:
 - a) Enabling DISA security (Trunk Security or All Security).
 - b) Keeping DISA security codes secret.
 - c) Selecting complex, random codes that cannot be easily guessed.
 - d) Changing codes regularly.
- **CO-to-CO Line Call Duration**
The length of outside-to-outside (CO-to-CO) line calls may be limited through system programming.
Both the outside caller and the outside destination will hear a warning tone 15 seconds before a specified time limit. When the timer expires, the call is disconnected.
- If the DISA Automated Attendant (AA) service is used, you can access the desired party simply by pressing a preprogrammed single-digit number (DISA AA number) after or while hearing a DISA OGM or a short beep. AA menus can be up to 3 levels deep.
- If you enter an invalid security code 3 times consecutively, the call will be disconnected automatically. If you enter a DISA security code a second and third time, dialling * is not necessary.



Customising Your System



- 3.3.2 System Programming—**DISA Security Code [512]**

1.3 Receiving Calls

1.3.1 Answering Calls

PT/SLT

When your telephone rings, either the CO/INTERCOM button or the Message/Ringer Lamp flashes.


▶


Off-hook.
Talk.

Select one of the following methods:

- Lift the handset to receive the call on the preferred line.
(Default: Ringing line is selected.)
- Press the SP-PHONE button.
- Press the flashing CO or INTERCOM button directly.



- **Hands-free operation**

You can receive a call and have a conversation in hands-free mode using the SP-PHONE button. Refer to "1.4.8 Talking to Another Party without Lifting the Handset (Hands-free Operation)".



Customising Your Phone

- 3.1.2 Changing Settings Using Programming Mode—
 - Line Preference—Incoming**
Select the seized line when going off hook.
 - Alternate Receiving—Ring/Voice**
Select the Calling method, either ring or the other party's voice.

1.3.2 Answering Hands-free (Hands-free Answerback)

You can set your proprietary telephone (PT) to answer incoming intercom calls without going off-hook. When an intercom call arrives, you will hear the caller talking without the phone ringing.



To set/cancel

PT

While on-hook

AUTO ANS

MUTE

Press **AUTO ANS/MUTE**.



- The AUTO ANS/MUTE button light shows the current status as follows:
Off: Not set
Red on: Set
- This feature is not available for incoming outside (CO) line calls and doorphone calls.

1.3.3 Answering a Call Ringing at Another Telephone (Call Pickup)

- Answering a Call from Another Telephone (Call Pickup)
- Preventing Other People from Picking Up Your Calls (Call Pickup Deny)

◆◆ Answering a Call from Another Telephone (Call Pickup)



Without leaving your desk, you can answer an incoming call that is ringing at another extension or your extension group, or that was received by a preprogrammed Telephone Answering Machine (TAM) extension from your phone.

The following types of call pickup are available:

Group Call Pickup: Picks up a call within your group.

Directed Call Pickup: Picks up a specific extension's call.


Call Retrieving from a TAM: Retrieves a call on a TAM.

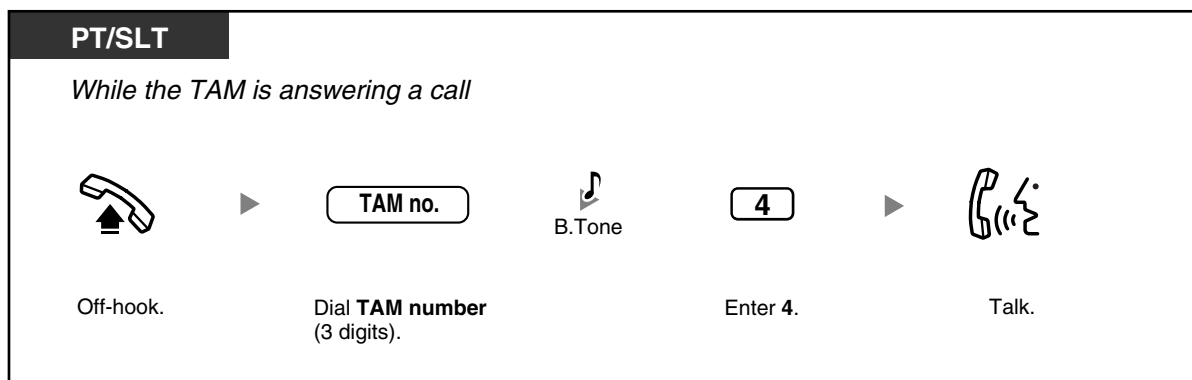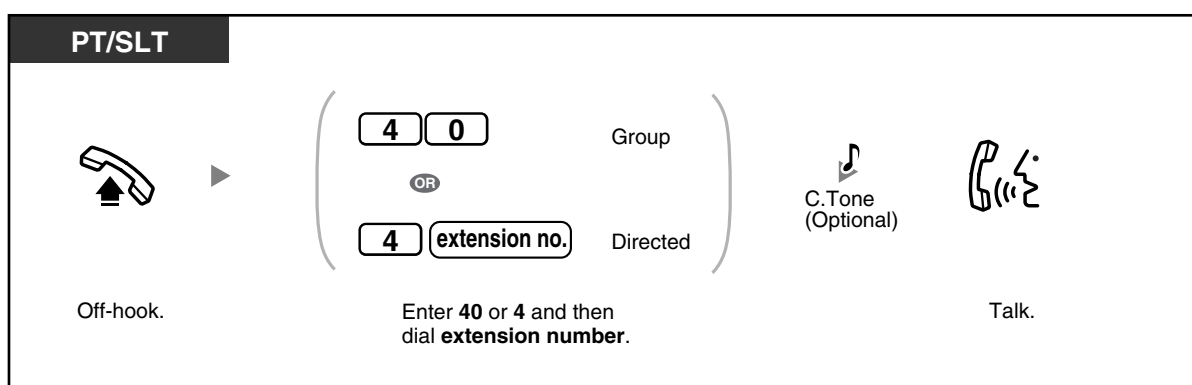

- If you hear a reorder tone when trying to retrieve a call from a TAM, the dialled extension is not the TAM extension, or the TAM cannot answer the call because it is performing another operation.

◆◆ Preventing Other People from Picking Up Your Calls (Call Pickup Deny)

You can prevent other extension users from picking up your calls.

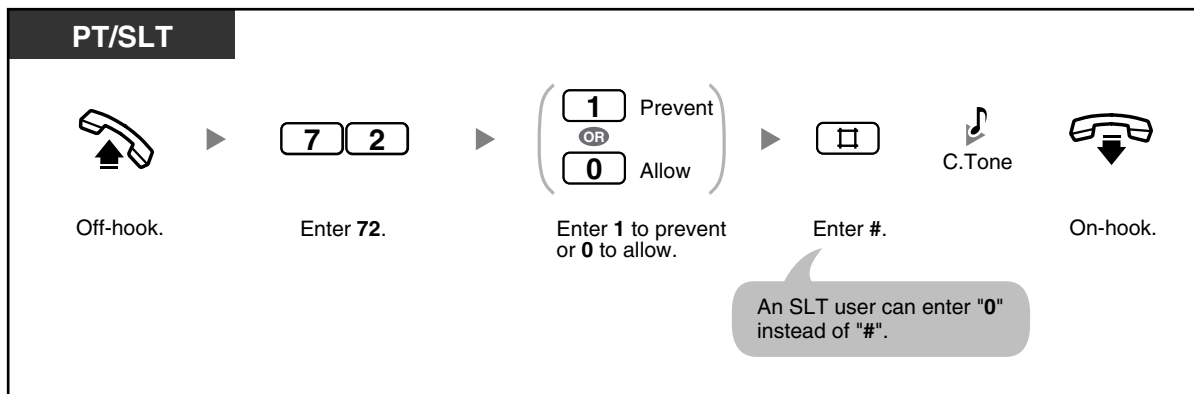

1.4 During a Conversation


1.4.1 Transferring a Call (Call Transfer)

- Transferring to an Extension within the PBX
- Transferring to an Outside Destination


◆◆ Transferring to an Extension within the PBX

You can transfer incoming calls to another extension. Depending on the setting of your PBX, proprietary telephone (PT) users may also be able to transfer incoming outside (CO) line calls to another extension simply by pressing the corresponding Direct Station Selection (DSS) button (One-touch Transfer).

To transfer

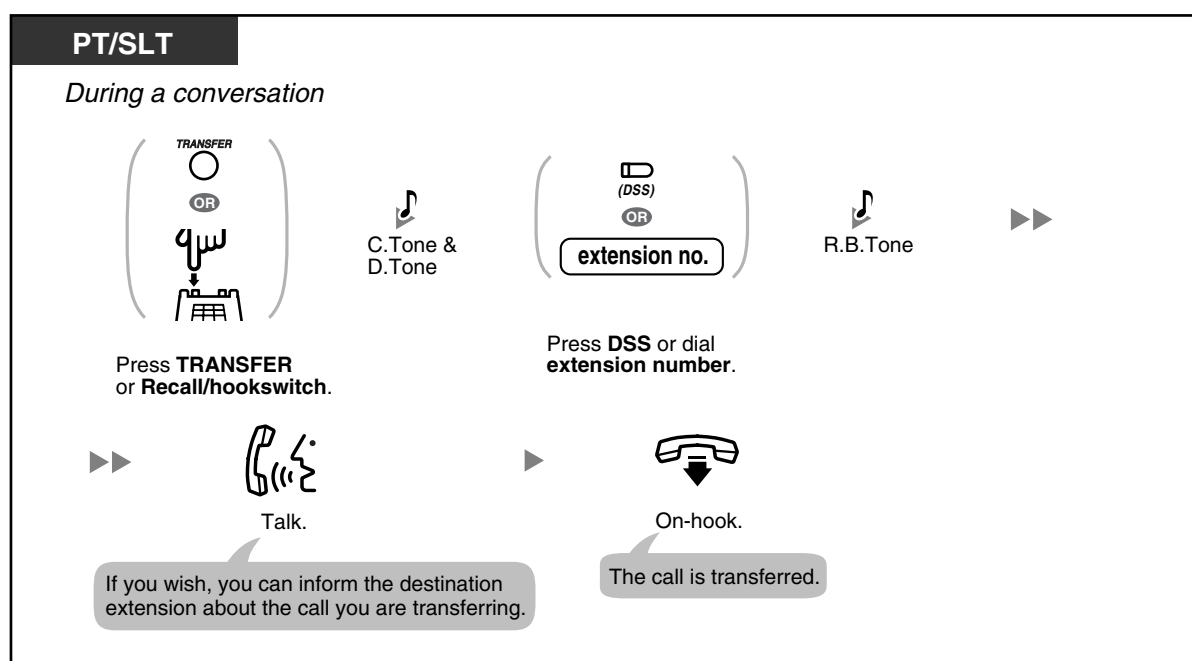

To transfer with a one-touch operation (One-touch Transfer)

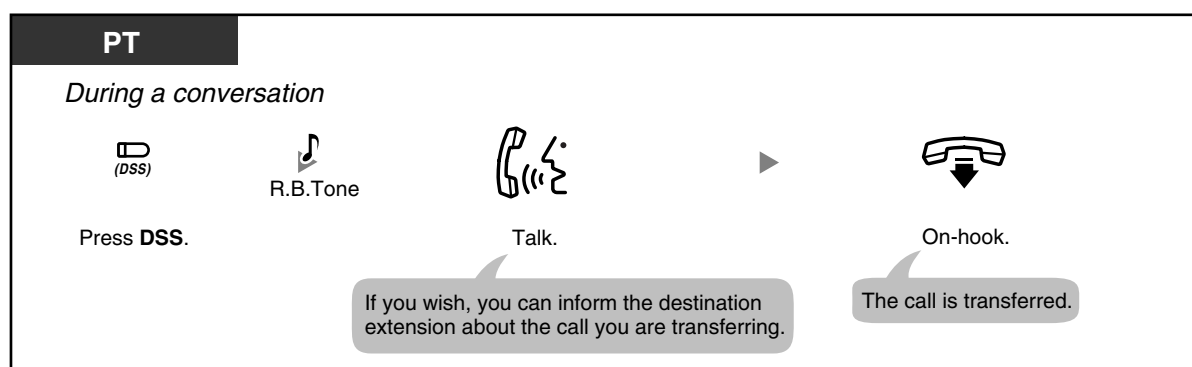

1.4 During a Conversation




- You can go on-hook before the destination extension answers the call. If the destination extension does not answer the call within a specified time period, you will hear an alarm tone, and the call will return to you. If you do not answer the call within 30 minutes after it returns to you, the call will be disconnected.
- When the dialled extension is busy, you may access the extension by entering "2" (Busy Station Signalling [BSS]) or "3" (Executive Busy override) and then going on-hook.



- You may have to enter the Call Hold feature number after pressing the Recall/hookswitch on your single line telephone (SLT), depending on the SLT Hold Mode of your PBX. Ask your manager or dealer about the mode assigned to your PBX.

◆◆ Transferring to an Outside Destination

You can transfer incoming calls to outside destination when your extension is permitted through system programming.

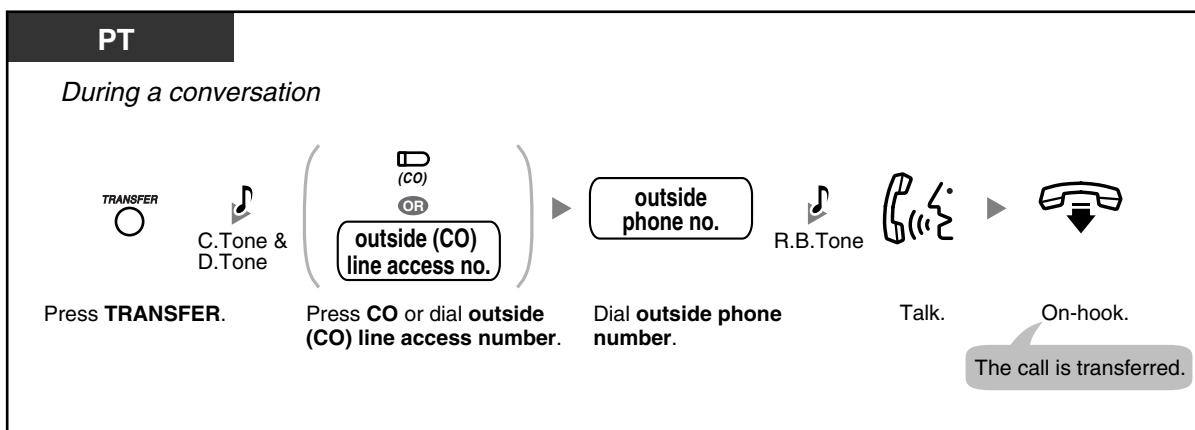

- CO-to-CO Line Call Duration**
The length of outside-to-outside (CO-to-CO) line calls may be limited through system programming. Both the outside caller and the outside destination will hear a warning tone 15 seconds before a specified time limit. When the timer expires, the call is disconnected.
- To return to the held call before the destination answers**, press the TRANSFER button or corresponding CO/INTERCOM button.
- After transferring the call to an outside party, you can join the call by pressing the CO button that you used to transfer the call. A 3-party conference call is established (Conference).
- To change the transfer destination before going on-hook, press the CO button whose indicator is flashing slowly to retrieve the call, then repeat the Call Transfer procedure.




Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a Direct Station Selection (DSS) button.

1.4.2 Holding a Call

- Holding
- Holding in a System Parking Zone (Call Park)

-  **If a call is not retrieved within a specified time period**, you will hear a ring tone. If you are having a conversation with another party at that time, you will hear an alarm tone. If an outside (CO) line call is not retrieved within 30 minutes of being put on hold, it will be automatically disconnected.




Holding

There are 2 types of Call Hold mode. The difference between them is whether other people can retrieve the held call (General Call Hold) or not (Exclusive Call Hold).

To hold (General Call Hold)

PT/SLT

During a conversation

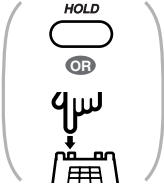






Press **HOLD** or **Recall/hookswitch**.

To hold (Exclusive Call Hold)


PT

During a conversation



Press **HOLD**. Press **HOLD** again. On-hook.

To retrieve a call (Call Hold Retrieve)

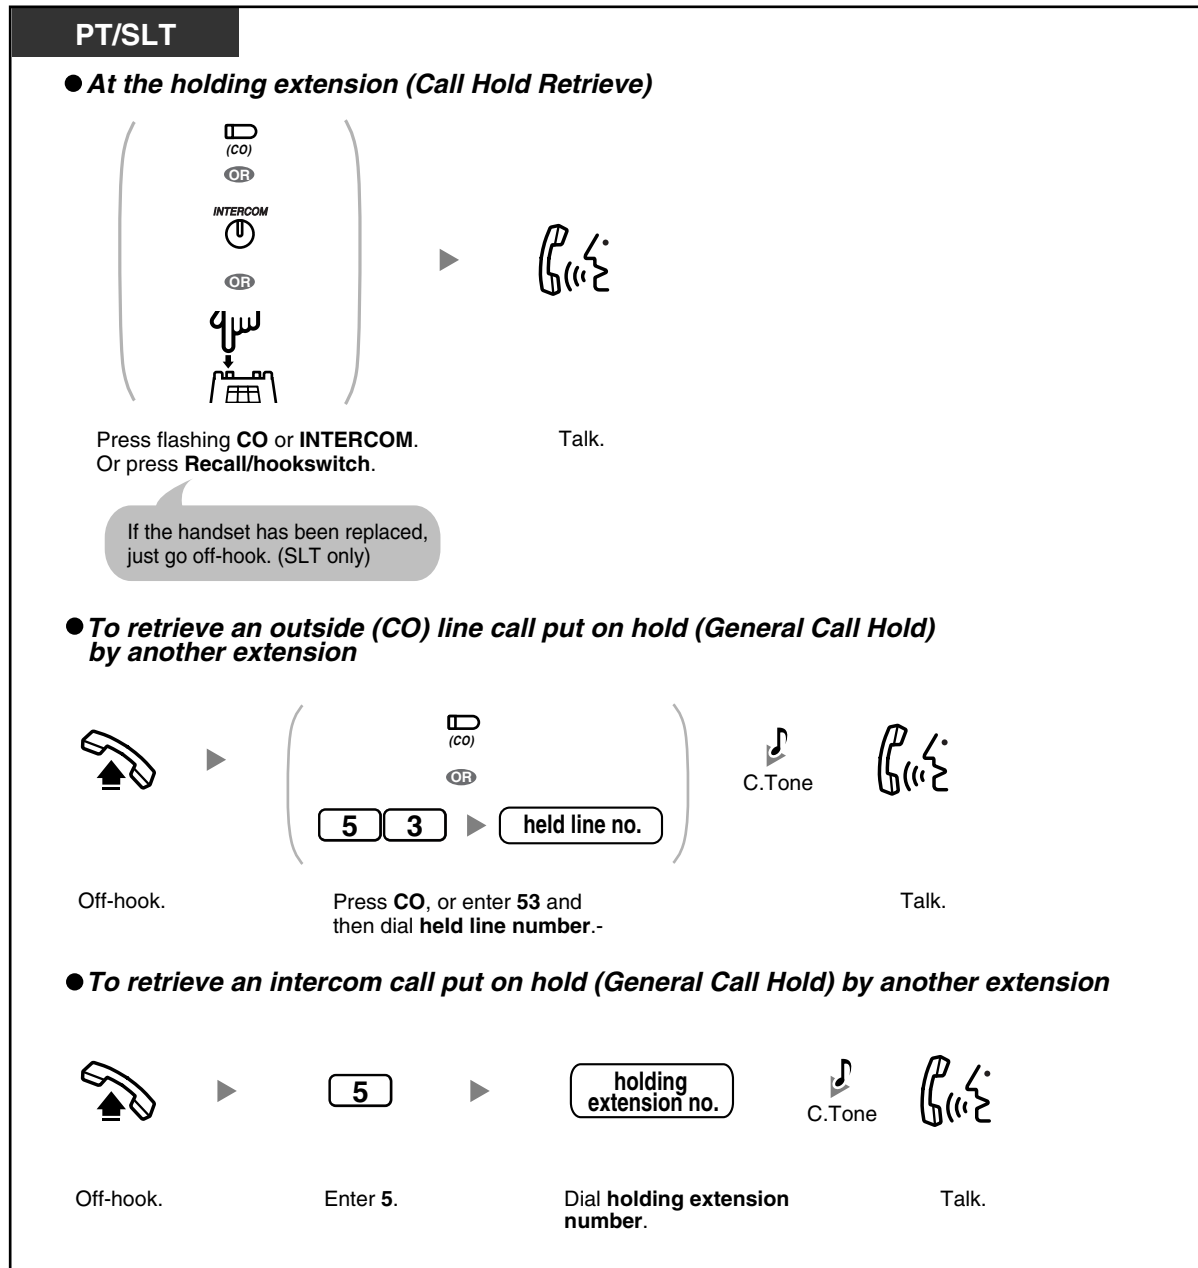

- The CO or INTERCOM button light shows the current status as follows:
 - General Call Hold mode
 - Flashing green slowly:** You have a call on hold.
 - Flashing red slowly:** Another extension has a call on hold.
 - Exclusive Call Hold mode
 - Flashing green at moderate speed:** You have a call on hold.
 - Red on:** Another extension has a call on hold.
- Hold Mode Change (proprietary telephone [PT] only)**
Pressing the HOLD button again while a call is on hold switches the status from General Call Hold mode to Exclusive Call Hold mode, or vice versa.
- You cannot hold doorphone calls.




- A single line telephone (SLT) user can hold either one intercom call or one outside (CO) line call at a time, while a PT user can hold one intercom call and multiple outside (CO) line calls. To hold multiple intercom calls, use the Call Park feature.
- You may have to enter the Call Hold feature number after pressing the Recall/hookswitch on your SLT, depending on the SLT Hold Mode of your PBX. Ask your manager or dealer about the mode assigned to your PBX.



Holding in a System Parking Zone (Call Park)


You can put a call on hold in a common parking zone of the PBX so that any extension can retrieve the parked call. Up to 10 calls can be parked in the PBX.

To park a call

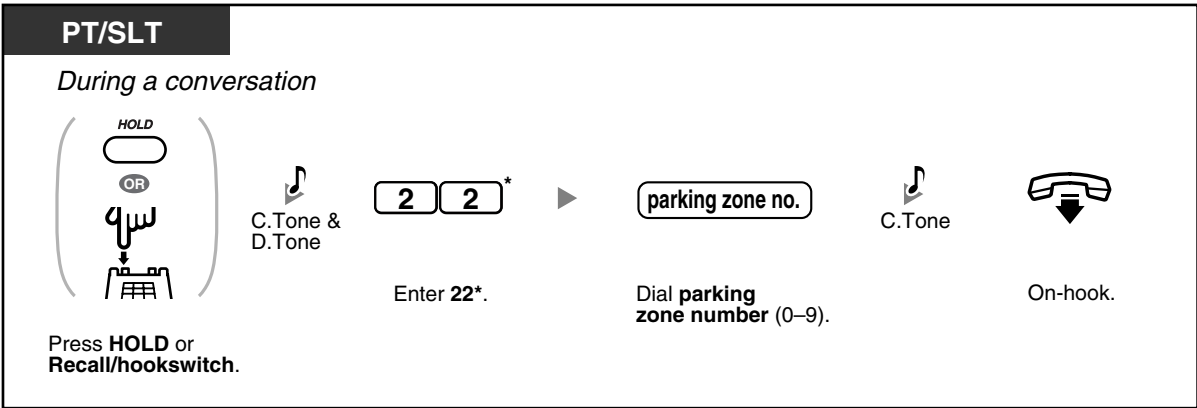

* For United Kingdom and New Zealand: 36

To retrieve (Call Park Retrieve)

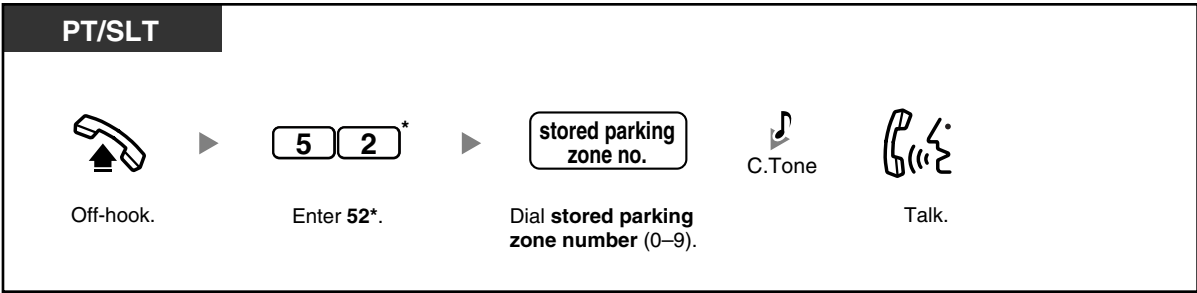


* For United Kingdom and New Zealand: 56



- **If you hear a busy tone when parking a call**, the parking zone is unavailable. Dial another parking zone number directly.
- **If you hear a reorder tone when retrieving a parked call**, there is no held call in that location. Confirm the stored parking zone number.
- After you park a call, you can perform other operations.

1.4.3 Talking to 2 Parties Alternately (Call Splitting)

When talking to one party with another party on hold, you can switch between the 2 parties.

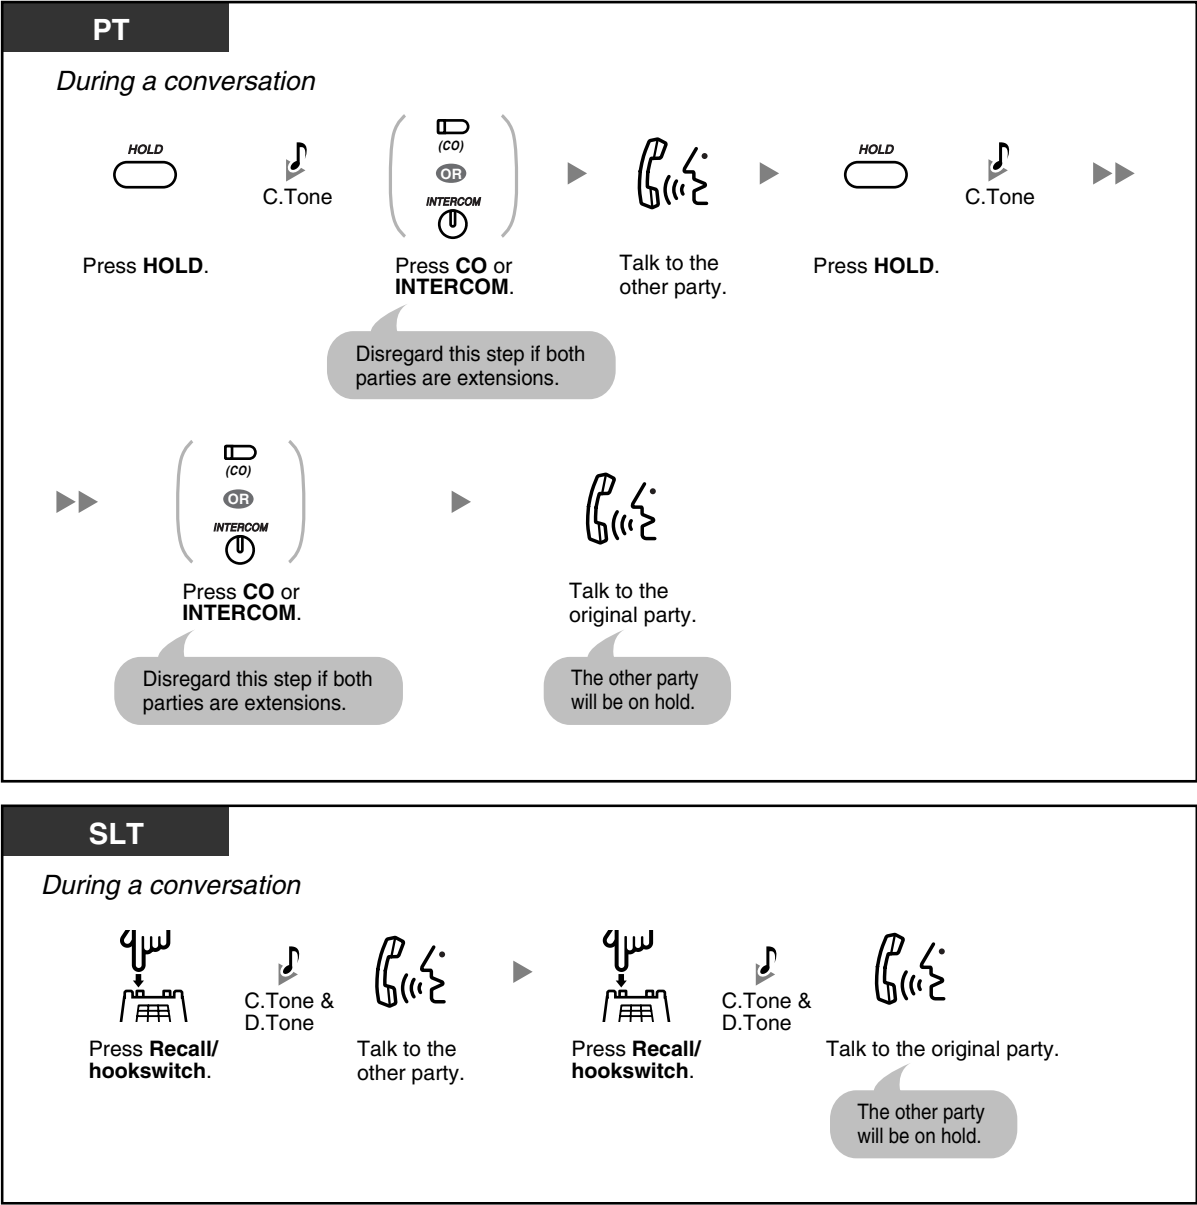

1.4.4 Answering Call Waiting

- Answering Call Waiting in the PBX
- Answering Call Waiting from the Telephone Company


◆◆ Answering Call Waiting in the PBX

During a conversation, a call waiting tone is heard through the speaker or handset when either an outside (CO) line call is received, or another extension is letting you know that a call is waiting. You must activate this feature to be able to use it (Default: Disable). To set Call Waiting, refer to "1.7.3 Receiving Call Waiting".



You can answer the second call by

- 1) disconnecting the current call;**
- 2) placing the current call on hold.**

1. To disconnect the current call and then talk to the new party

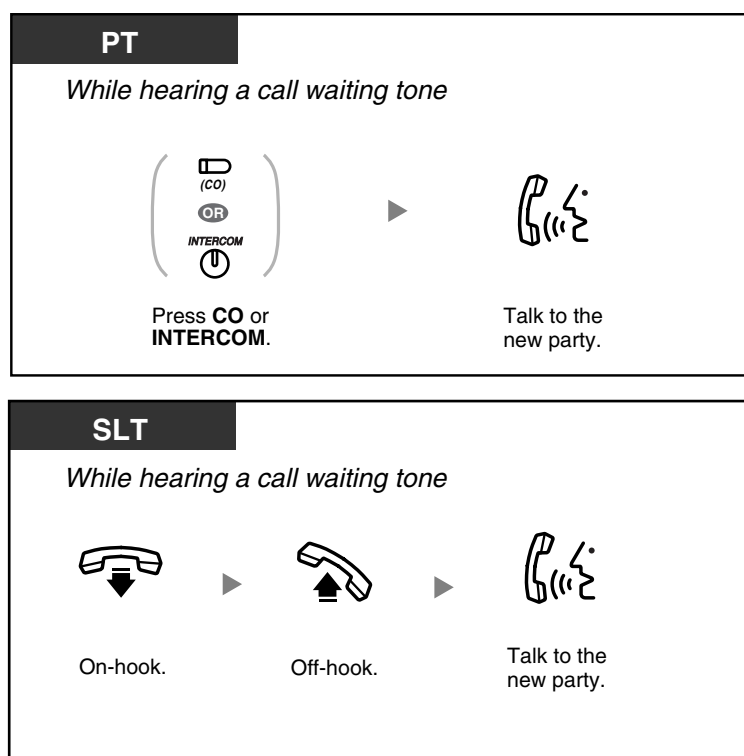

2. To hold the current call and then talk to the new party

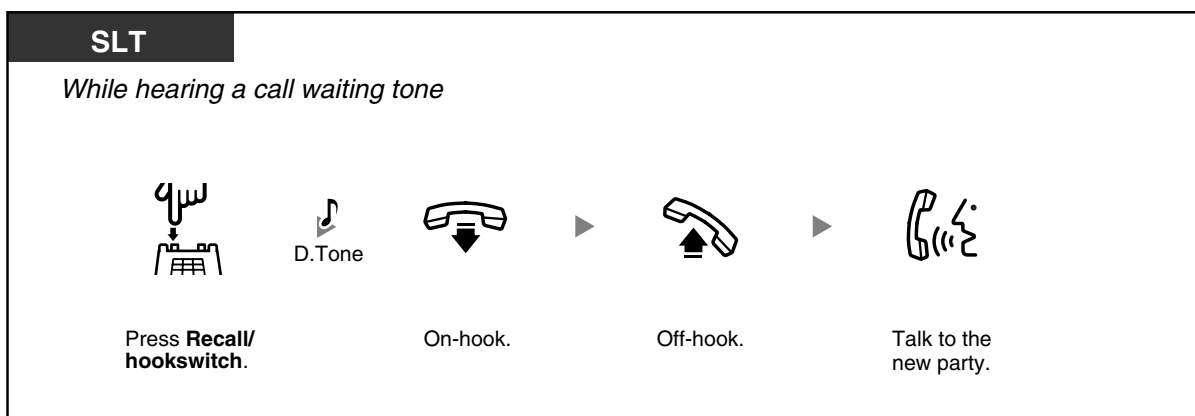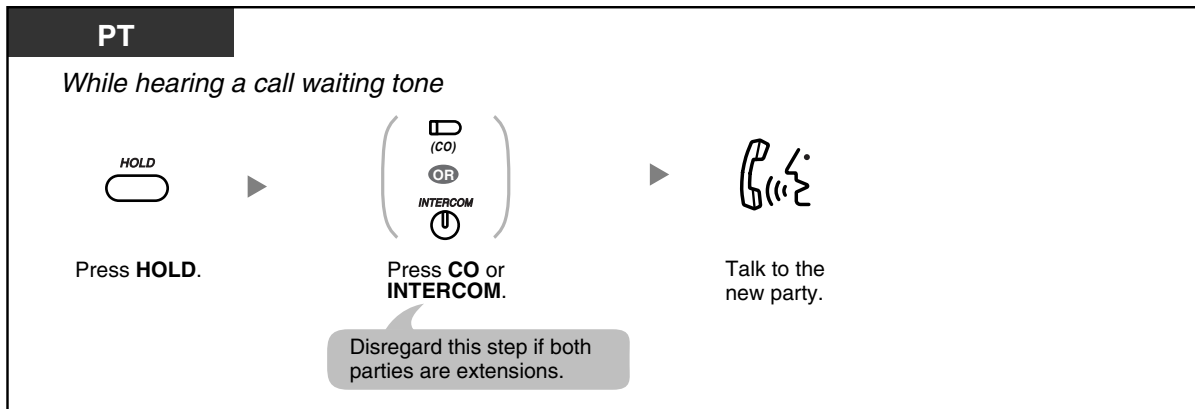

- A single line telephone (SLT) user cannot transfer a new call while holding the current call. To transfer the new call, first park the original call using the Call Park feature, then go on-hook and off-hook.




- You may have to enter the Call Hold feature number after pressing the Recall/hookswitch on your SLT, depending on the SLT Hold Mode of your PBX. Ask your manager or dealer about the mode assigned to your PBX.






 
Customising Your Phone

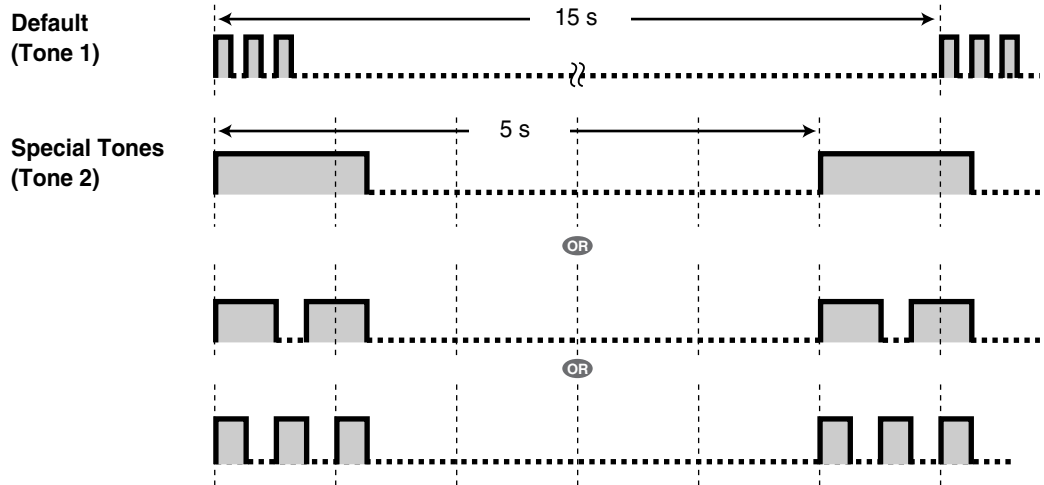- 3.1.2 Changing Settings Using Programming Mode—**Call Waiting Tone Type Selection**



Answering Call Waiting from the Telephone Company

Your telephone company may also offer an optional call waiting service, which can inform you that you have another call on the same outside (CO) line. For more details, consult your telephone company.

| PT | SLT |
|--|--|
| <p>While hearing a call waiting tone</p> <p>FLASH/RECALL </p> <p>Press FLASH/RECALL.</p> | <p>While hearing a call waiting tone</p> <p>  </p> <p>Press Recall/hookswitch. Enter 6.</p> |


1.4.5 Talking to Multiple Parties (Conference)

- Adding a Third Party During a Conversation (3-party Conference)
- Leaving a Conference Call (Unattended Conference)
- Originating a 5-party Conference Call (5-party Conference)


◆◆ Adding a Third Party During a Conversation (3-party Conference)

You can add a third party to your conversation.

To establish a 3-party conference call

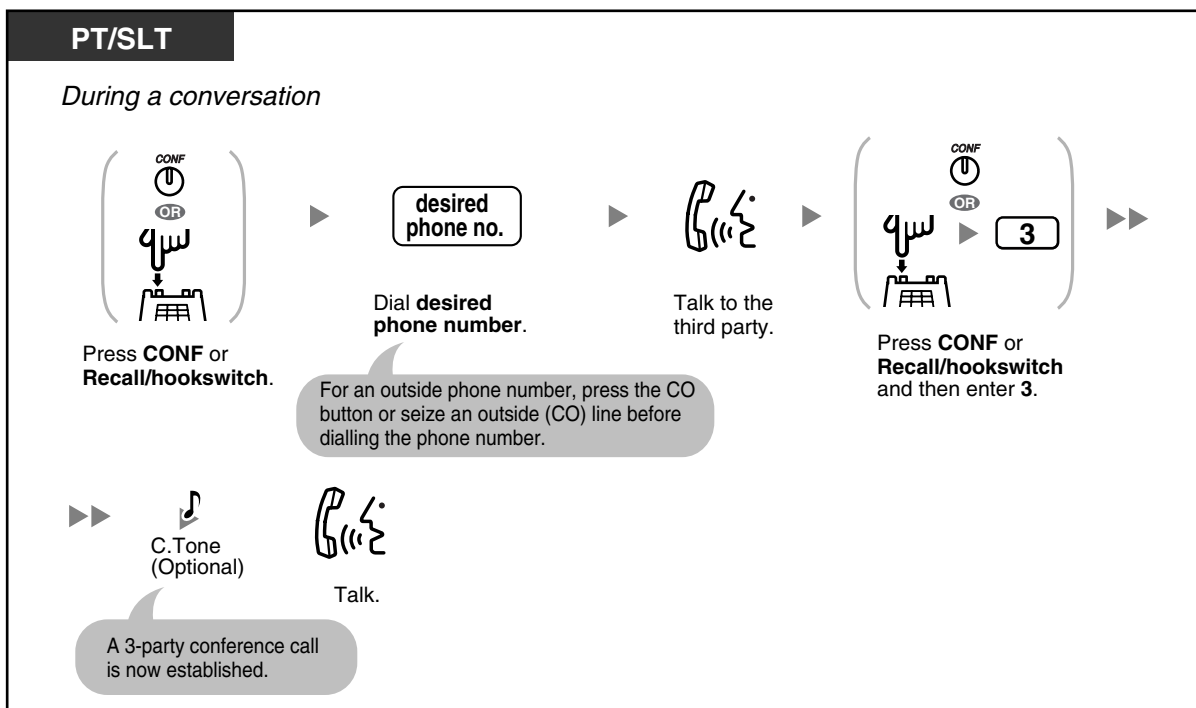


To disconnect one party and then talk to the other

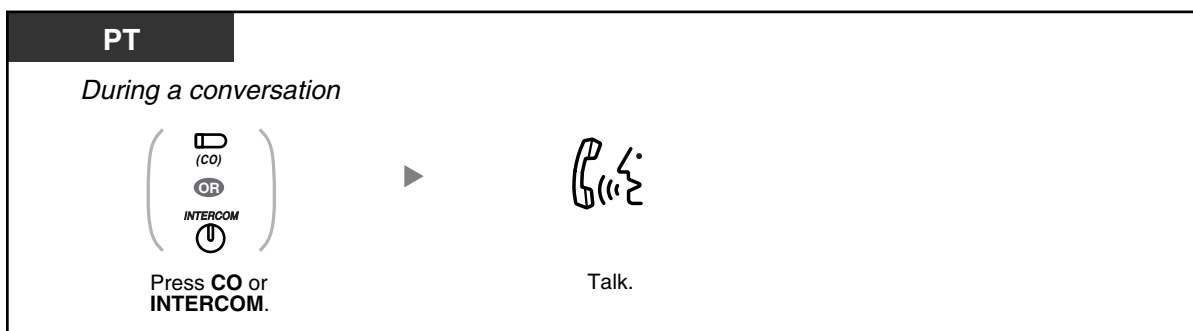


To put the third party on hold and talk to the original party


SLT



Press **Recall/hookswitch**.



C.Tone
(Optional)




Talk.

To leave a 3-party conference call

PT/SLT

When you are talking with 2 extensions or one extension and one outside party



On-hook.

The other 2 parties can continue their conversation.



- **To return to the held call before the third party joins**, press the corresponding CO or INTERCOM button or press the Recall/hookswitch.
- By pressing the CO button corresponding to an outside (CO) line that is not being used by the conference, a proprietary telephone (PT) user can exit from the conference, leaving the other 2 parties connected unless they are both on outside (CO) lines. If the other parties are both on outside (CO) lines, they will be disconnected.



- You may have to enter the Call Hold feature number after pressing the Recall/hookswitch on your single line telephone (SLT), depending on the SLT Hold Mode of your PBX. Ask your manager or dealer about the mode assigned to your PBX.

◆◆ Leaving a Conference Call (Unattended Conference)


The PT user who originated a conference with 2 outside parties can leave the conference and allow the other parties to continue the conversation. Certain extensions may be restricted from executing this feature through system programming.



To leave a conference call and establish an unattended conference call

PT

When you are talking with 2 outside parties



Press **CONF**.

To return while others are talking



- **CO-to-CO Line Call Duration**

The length of outside-to-outside (CO-to-CO) line calls may be limited through system programming.

Both outside parties will hear a warning tone 15 seconds before a specified time limit. When the timer expires, the call is disconnected.


The originating extension will hear a ring tone or an alarm tone before the time limit. If the originating extension does not return to the conference within a specified time period, the unattended conference call will be disconnected.

◆◆ Originating a 5-party Conference Call (5-party Conference)


A PT user can originate a 5-party conference call with 5 extensions or a combination of 3 extensions and 2 outside parties, if the PT is permitted through system programming.



To establish a 5-party conference call

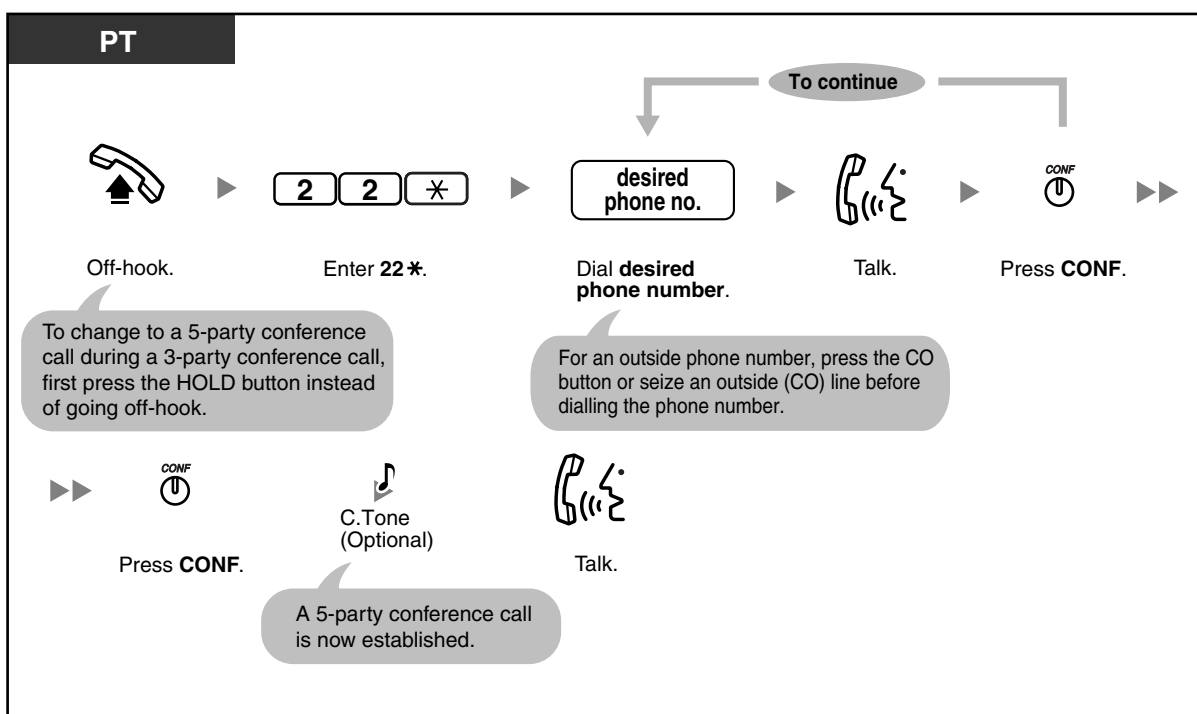

To disconnect a 5-party conference call

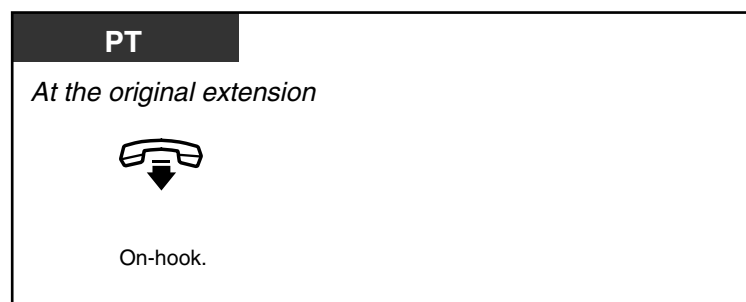

- Only one 5-party conference call can be in progress at a time.
- You cannot change to a 5-party conference call during a 3-party conference call among 3 extensions.
- **If a parked call is not retrieved within 5 minutes while you are trying to establish a 5-party conference call**, you will hear a ring tone. If you are having a conversation with another party at that time, you will hear an alarm tone.



- 3.1.3 Customising the Buttons
Create or edit a Conference button.

1.4.6 Muting a Microphone (Microphone Mute)

You can disable the microphone to consult privately with others in the room while listening to the other party on the phone through the speaker.



To set/cancel




- The AUTO ANS/MUTE button light shows the current status as follows:
Off: Normal
Flashing red slowly: Mute
- This feature is only available during a hands-free conversation.

1.4.7 Using the Headset (Headset Operation)

Connecting an optional headset allows for hands-free conversations. This feature is also known as Handset/Headset Selection.



To talk using the headset

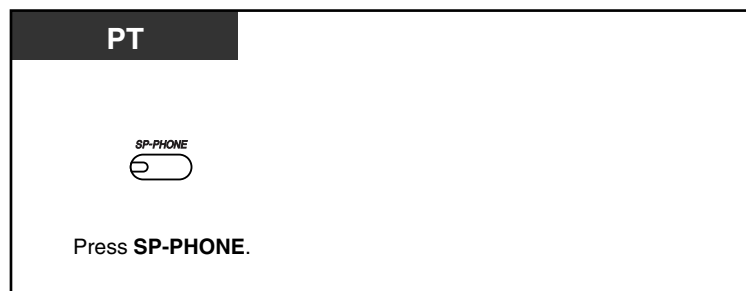

1.4.8 Talking to Another Party without Lifting the Handset (Hands-free Operation)




You can have a conversation in hands-free mode using the SP-PHONE button.



To switch from the handset to hands-free mode

PT

During a conversation using the handset




Press **SP-PHONE**. On-hook.

Do not go on-hook without pressing the SP-PHONE button first, or the call will be disconnected.

To switch from hands-free mode to the handset

PT

During a conversation in hands-free mode




Off-hook.



- **Helpful hints for hands-free operation:**
 - **If it is difficult to hear the other party's voice:**
Increase the volume using the Navigator Key or Volume Key.
 - **If the other party has difficulty hearing you:**
Decrease the volume.
 - **If the other party reports that your voice echoes:**
Use the telephone in a room that has curtains, carpeting or both.
 - **If parts of the conversation cannot be heard:**
If you and the other party speak at the same time, parts of your conversation may be lost. To avoid this, try to speak alternately.

1.4.9 Changing the Dialling Mode (Pulse to Tone Conversion)


If you are using a pulse-type outside (CO) line, you can temporarily change the dialling mode from pulse to tone to access computer telephone services that require tone dialling such as Voice Mail.

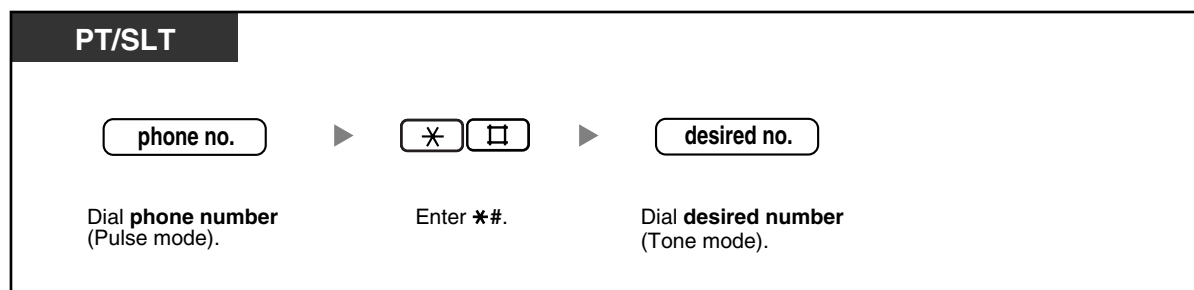

- You cannot change from tone to pulse dialling mode.

1.5 Before Leaving Your Desk

1.5.1 Forwarding Your Calls (Call Forwarding [FWD])

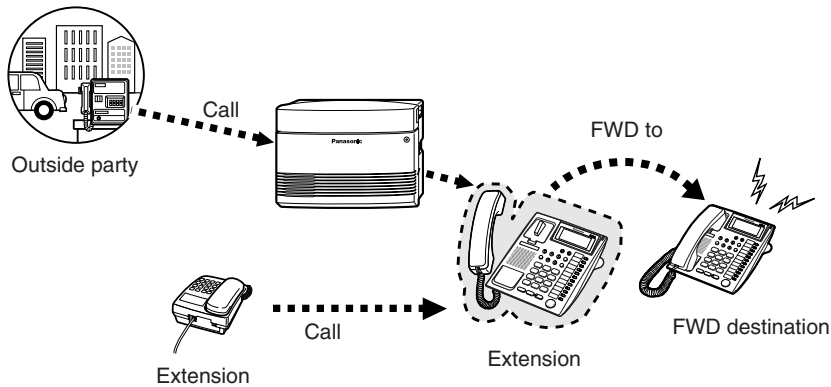

You can have your incoming calls forwarded to a specified destination. The following methods are available:

All Calls:

All calls are forwarded to a specified extension regardless of the status of your extension.

Busy/No Answer (BSY/NA):

All calls are forwarded when you do not answer within a specified time period or when your extension is busy.

To Outside (CO) Line:


All calls are forwarded to an outside party if your extension is permitted through system programming. The call duration is limited.

Follow Me (From):


If you fail to set the above-mentioned "All Calls" to forward before you leave your desk, you can set your calls to be forwarded from the destination extension.




- You can set the voice mail extension number as the Call Forwarding (FWD) destination to receive calls into your mailbox.
- You can set the Built-in Voice Message (BV) feature number as the FWD destination to receive calls into one of the voice message areas.
- The destination of an extension's forwarded calls can call or transfer calls to the original extension.

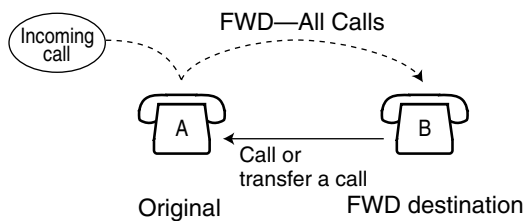

To set/cancel

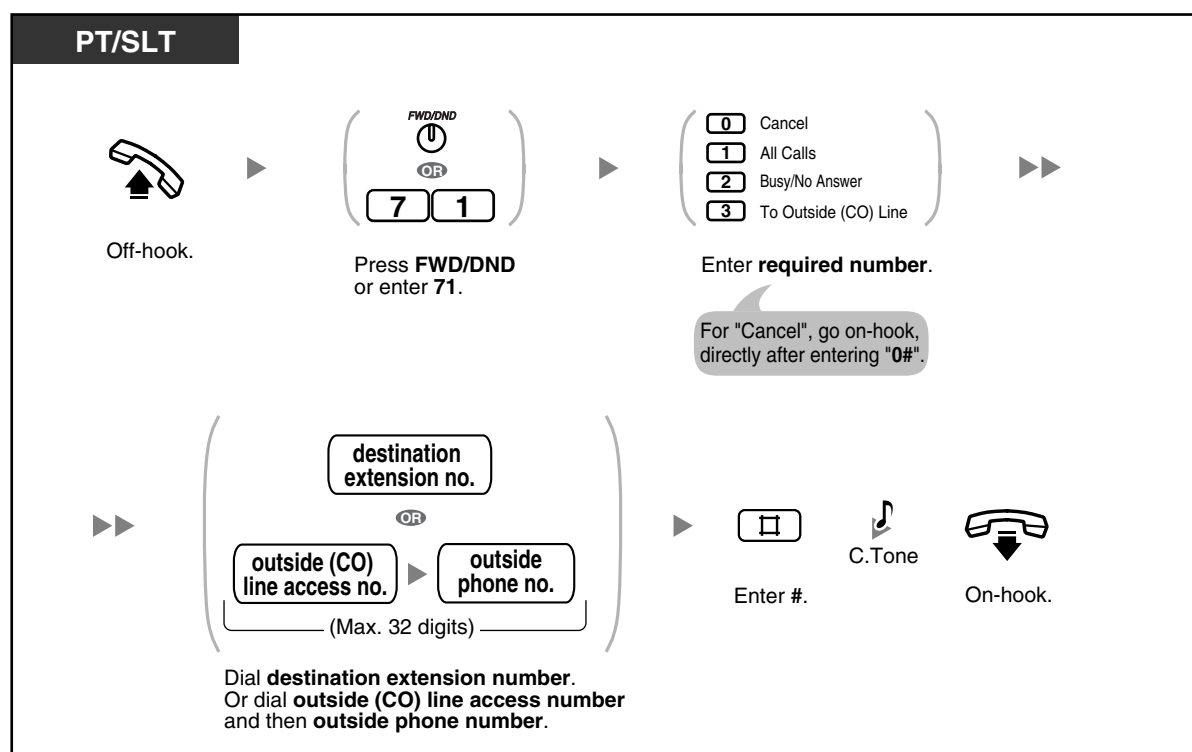


To set/cancel from another extension

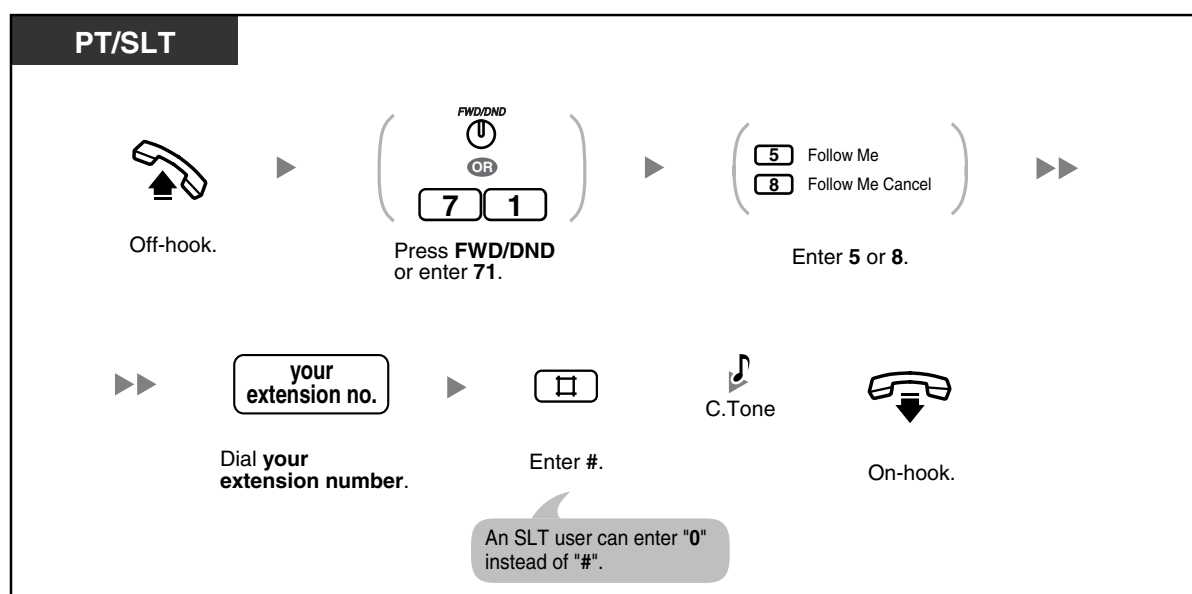

1.5 Before Leaving Your Desk



- The FWD/DND button light shows the current status as follows:
Off: Neither feature is set.
Red on: Do Not Disturb (DND) mode
Flashing red slowly: FWD mode
- If a proprietary telephone (PT) user sets the FWD—Busy/No Answer feature, the FWD/DND button light will keep flashing while on-hook. To stop the button from flashing, go off-hook and enter "716#".
- A call can only be automatically forwarded one time.
In the example below, extension A's calls are being forwarded to extension B. If extension B tries to set FWD to extension C, the extension B user hears a reorder tone and the setting is denied. If extension B has already set FWD to extension C, and extension A tries to set FWD to extension B, the setting is also denied.

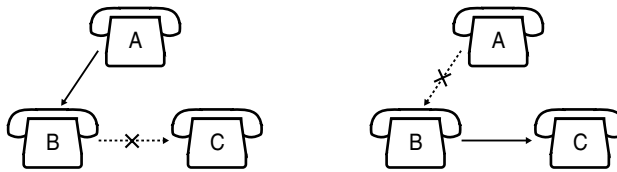

- You can confirm the current forward destination by pressing the FWD/DND button while on-hook.



Customising Your Phone


- 3.1.3 Customising the Buttons
Create or edit an FWD/DND (Call Forwarding/Do Not Disturb).

1.5.2 Showing a Message on the Caller's Telephone Display (Absent Message)


If you are unable to answer calls, you can select a brief message that will be shown on the displays of Panasonic display proprietary telephone (PT) users when they call you. The message you select can explain the reason for your absence, and is also shown on the display of your PT every time you go off-hook.

| Message no. | Message |
|-------------|---------------------------------------|
| 1 | Will Return Soon |
| 2 | Gone Home |
| 3 | At Ext %%% (Extension number) |
| 4 | Back at %:%% (Hour:Minute) AM (or PM) |
| 5 | Out Until %/%% (Month/Day) |
| 6 | In a Meeting |

To set

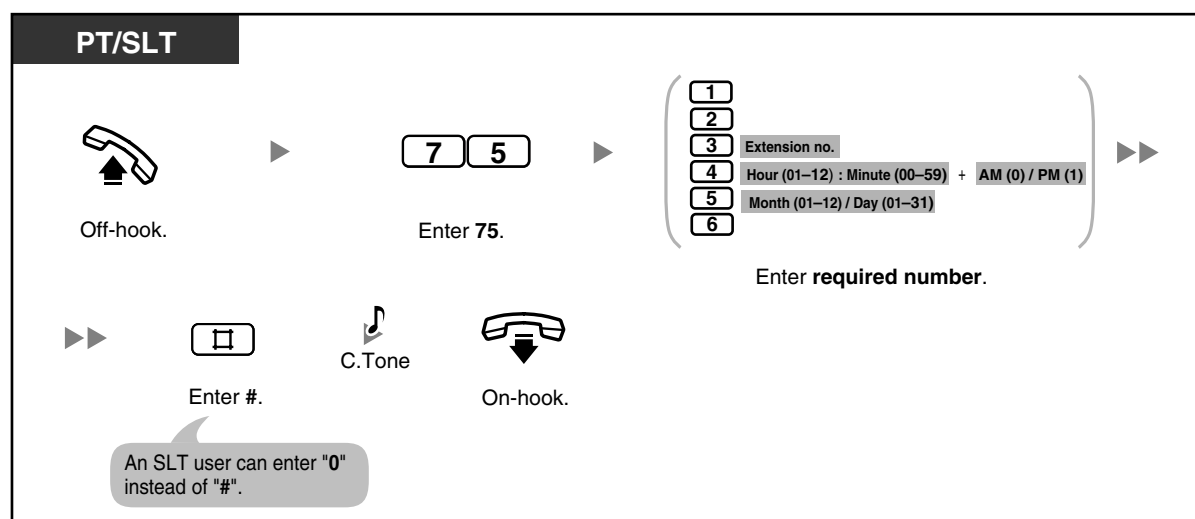

To cancel

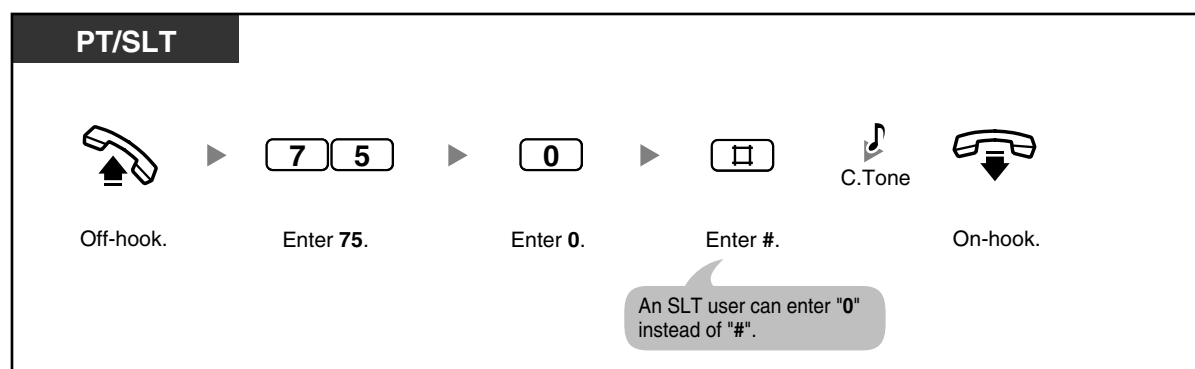

To confirm




- Enter the desired value in the "%" positions. You must enter the number of digits represented by the number of "%" symbols.

1.5.3 Preventing Other People from Using Your Telephone (Extension Lock)

You can lock your extension so that outside (CO) line calls cannot be made. This can be useful to prevent other people from making inappropriate calls using your extension. This feature is also known as Electronic Station Lockout.

To lock/unlock

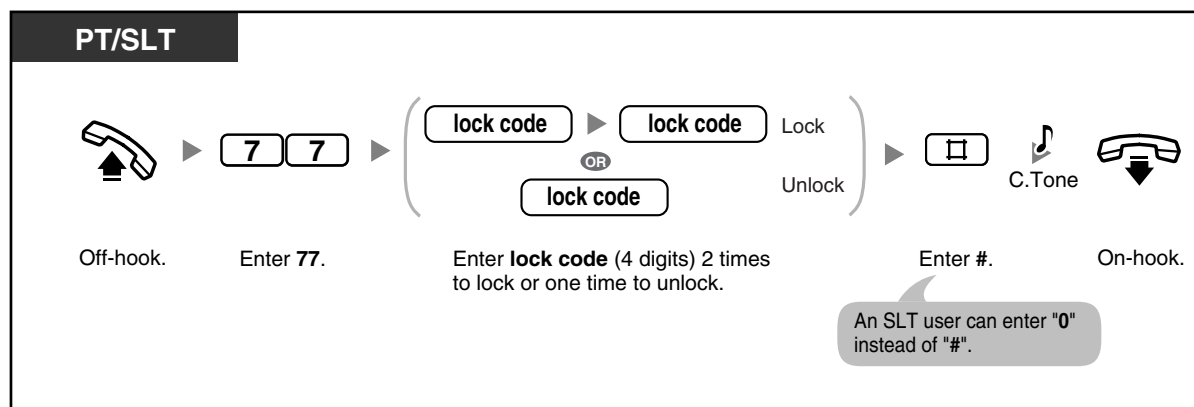


- If your extension is locked, it cannot be used to perform the following operations:
 - Making outside (CO) line calls
 - Accessing logged information

However, you may be able to make outside (CO) line calls depending on system programming.



- If you forget the code or cannot unlock your phone**, ask your operator or manager. He or she can unlock your extension (Remote Extension Lock).
- The lock code must be 4 digits and must not include the "#" or "*" characters.
- The operator or manager can cancel this feature for all extensions (Extension Lock—CANCEL ALL).
- This feature also functions as Incoming Call Log Display Lock.

1.5.4 Leaving a Group (Log-in/Log-out)

You can change your status in an extension group. When you log out, incoming calls to the group will not ring at your extension. When you log back in, calls will again ring at your extension. (Default: Log-in)

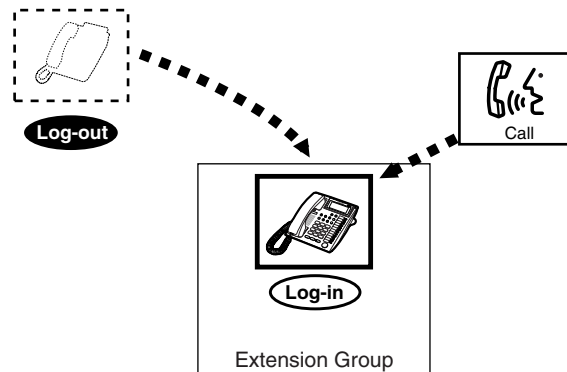

To set Log-in/Log-out

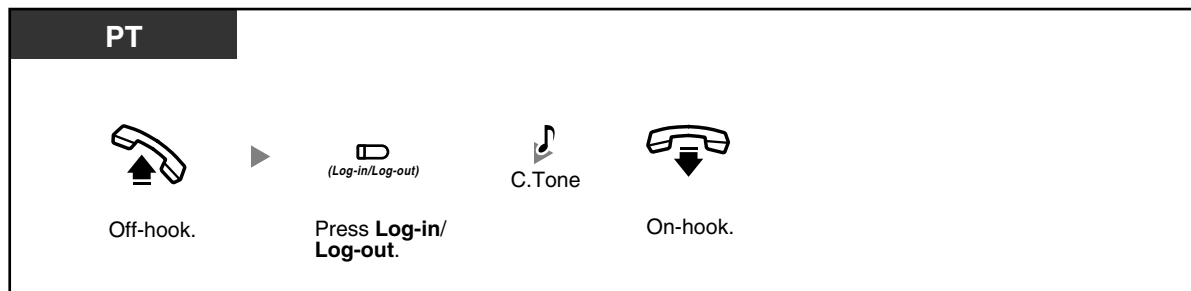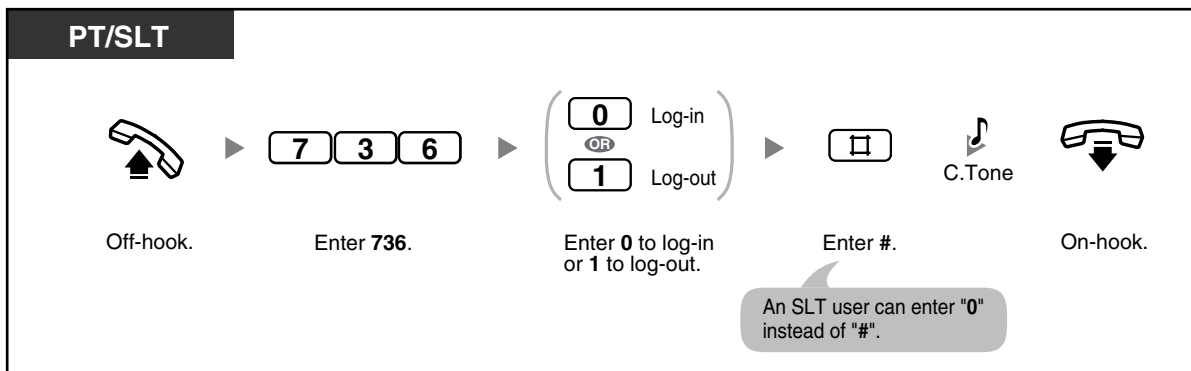

- The Log-in/Log-out button light shows the current status as follows:
Off: Log-in mode
Red on: Log-out mode
- The last member of a group cannot log out.




Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a Log-in/Log-out button.

1.5.5 Using Voice Messaging (Built-in Voice Message [BV])

- Recording, Playing, or Erasing Personal BV Outgoing Messages
- Forwarding Your Calls to Built-in Voice Message
- Leaving, Playing, or Erasing Voice Messages

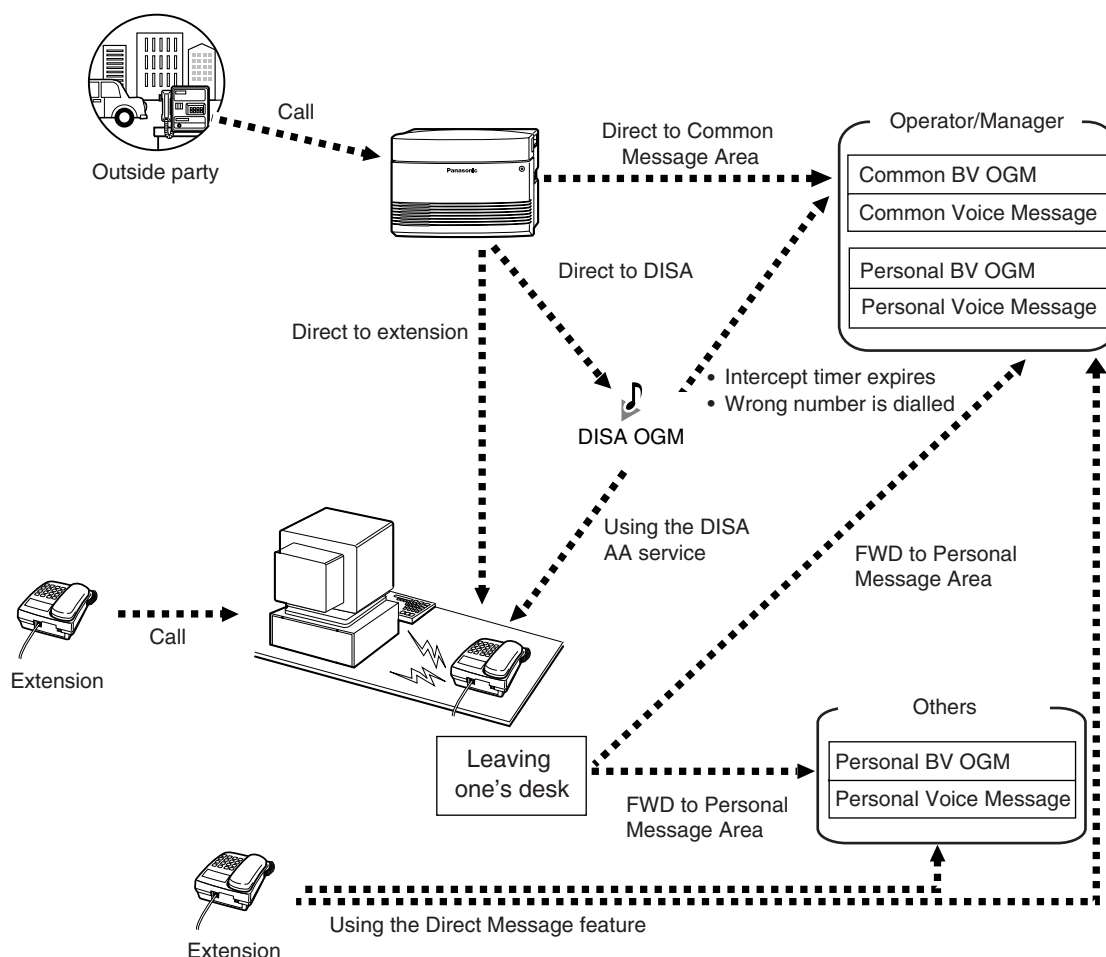

If an optional voice message card is installed in the PBX, a caller can leave a voice message in one of the voice message areas. There are 2 types of voice message area: personal message area and common message area.

A personal message area is where callers can leave messages directly for you. When an incoming call (a call direct to your extension, or a call using the Direct Inward System Access [DISA] Automated Attendant [AA] service) is forwarded to your personal message area, the caller will hear a personal Built-in Voice Message (BV) outgoing message (OGM) and can leave a voice message. You can access your personal message area to play back or erase caller messages.

A common message area is where callers can leave messages for the company. When an outside (CO) line call is automatically directed to the common message area, or when a DISA call is redirected to the common message area via Intercept Routing, the caller will hear a common BV OGM and can leave a voice message. Only the operator or manager can access the common message area to play back or erase caller messages.

If there are new voice messages in your personal message area or the common message area (if accessible), you will hear dial tone 4 when going off-hook. Additionally, if your telephone has a MESSAGE

1.5 Before Leaving Your Desk

button or Message/Ringer Lamp, the corresponding button or lamp turns on when a message has been left. You can also perform the following operations:

- You can record, play, or erase a personal BV OGM for your personal message area.
- The operator or manager can record, play, or erase a common BV OGM for the common message area. Refer to "2.1.6 Recording, Playing, or Erasing Common BV Outgoing Messages".
- You can set incoming calls to be forwarded to your personal message area, when you cannot answer them.
- You can leave a voice message in the personal message area of another extension, even if the extension has not been set to forward incoming calls to its personal message area, or even if no personal/common BV OGM has been recorded (Direct Message).
When a caller leaves a voice message using the Direct Message feature, the voice message is automatically linked to the caller information recorded in the corresponding call log.
- You can access the personal/common message area from an outside telephone by using a preprogrammed voice message access code. The code to enter differs depending on whether you are calling directly to an extension (that is forwarded to the extension's message area) or to the common message area, or you are calling with DISA.

Call Log


When viewing caller information, you can see whether the caller left a voice message. For more details, refer to "1.9.1 Calling with the Incoming Call Log".

Notes


- If you set the Voice Mail Integration feature, the BV feature will not function.
- When another extension user is recording or erasing a personal/common BV OGM, you cannot perform any operations using the BV feature. When another extension user or an outside caller is performing operations other than those mentioned above, you may not be able to use the BV feature. In this case, wait a few minutes and try again.

◆◆ Recording, Playing, or Erasing Personal BV Outgoing Messages


To record

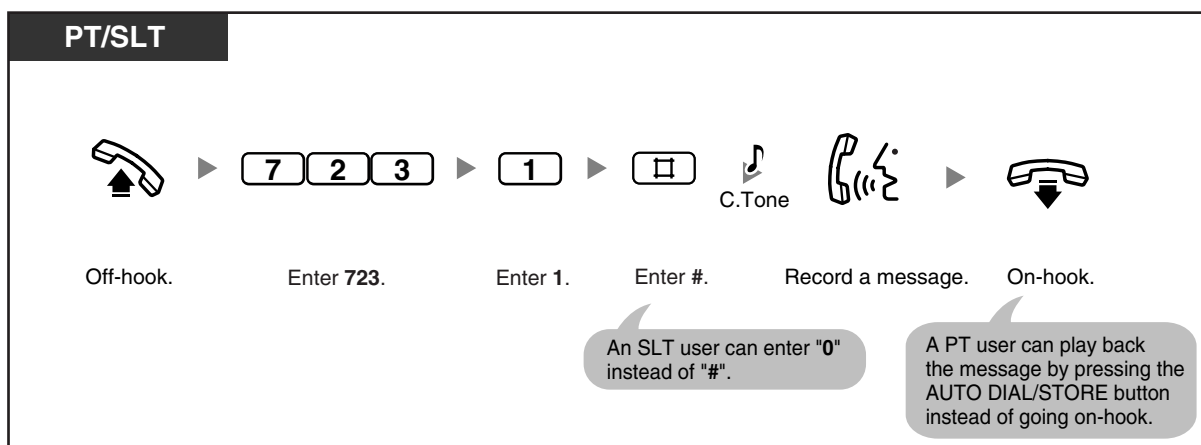

To play back

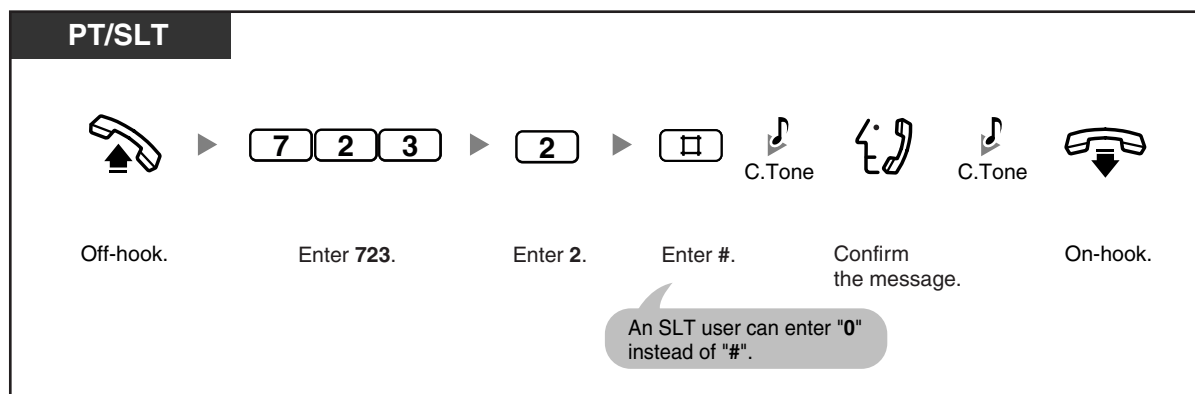


To erase

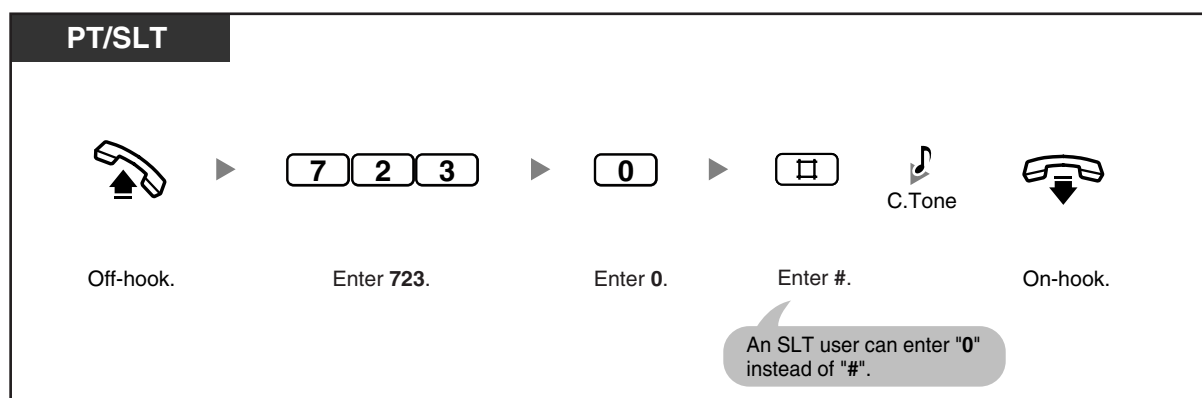

- The AUTO DIAL/STORE button light shows the current status as follows:
Off: You are recording a message, or a message has finished playing.
Red on: A message is playing.
- You can stop playback by pressing the AUTO DIAL/STORE button.

◆◆ Forwarding Your Calls to Built-in Voice Message

To set/cancel

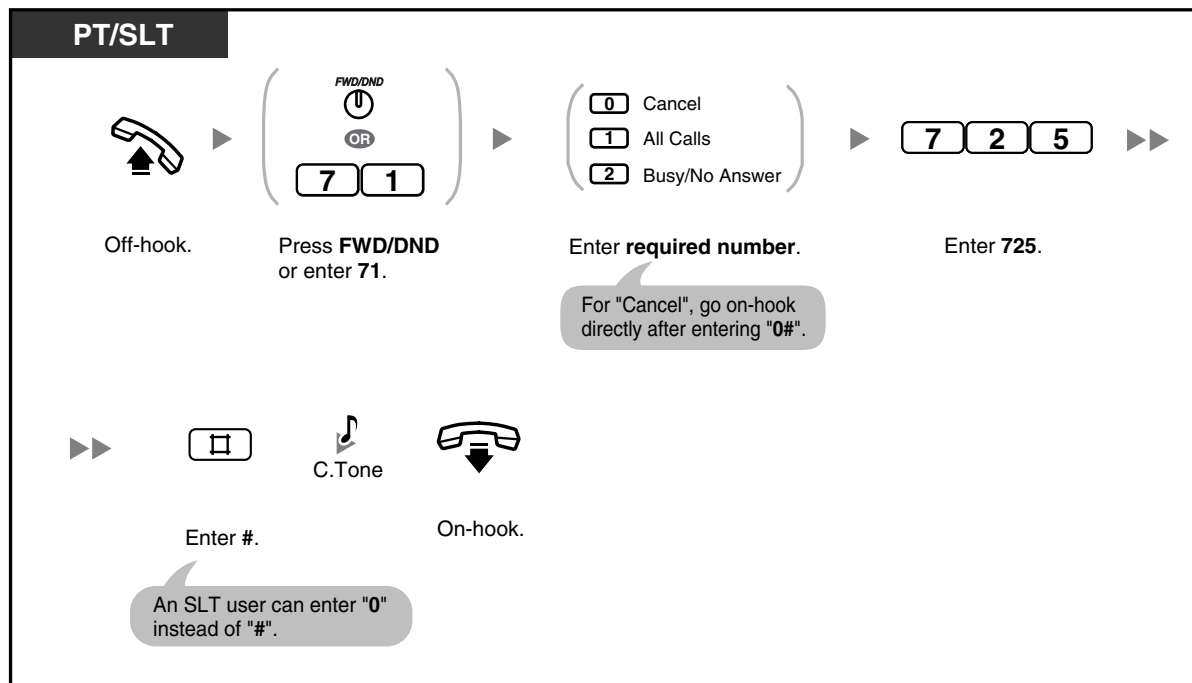

- Setting this feature also cancels other types of Call Forwarding (FWD)/Do Not Disturb (DND).




Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit an FWD/DND (Call Forwarding/Do Not Disturb).


◆◆ Leaving, Playing, or Erasing Voice Messages

To leave a voice message in a user's personal message area

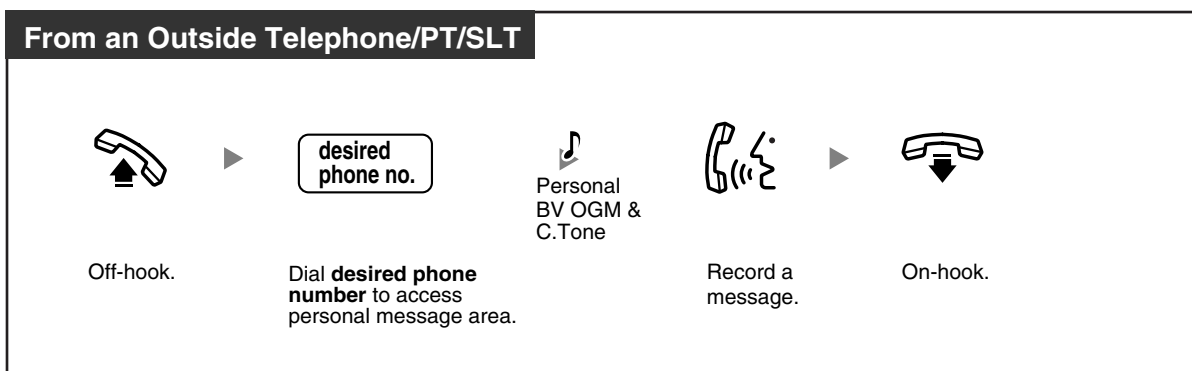

To leave a voice message in the common message area


From an Outside Telephone

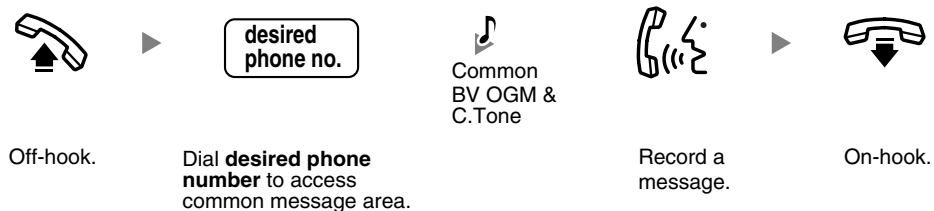

DISA calls are transferred to the common message area when a wrong number is dialed, or when a specified intercept timer expires.

To leave a voice message using Direct Message

PT/SLT

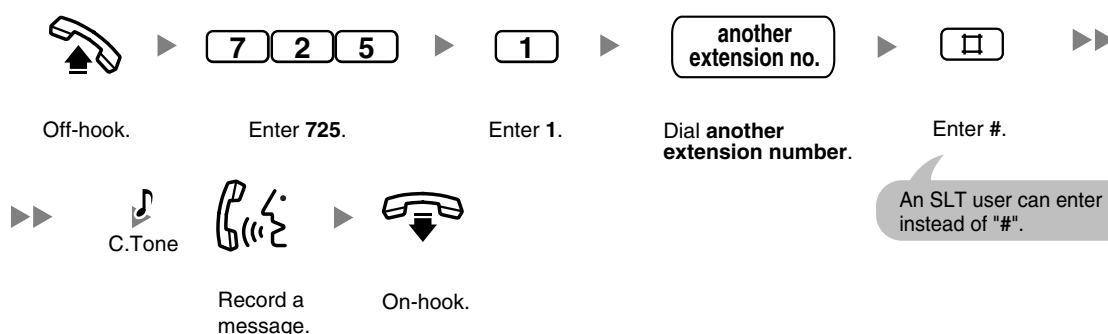



An SLT user can enter "0" instead of "#".


To view and play back a voice message in a voice message area


Display PT


When the Message/Ringer Lamp or MESSAGE button is lit
(the Caller ID Indication—Personal/Common button will be lit, if assigned)



Press **MESSAGE**
until the desired
message is displayed.


Off-hook.


Press **MESSAGE**.


C.Tone


Listen to the message.


Voice
Message

1

To play back the message from
the beginning

2


To go to the next message

3

To erase the message*1

9


To go back to the previous message


On-hook.

Enter 1–3 or 9 while confirming the message or
within 5 s of playback ending.

To play back all voice messages in a voice message area

PT/SLT


Off-hook.

7

2

5


Enter **725**.


2


Enter **2**.

#

Enter **#**.


C.Tone


Listen to the messages.


Voice
Message

1

To play back the message from
the beginning

2


To go to the next message

3

To erase the message*1

9


To go back to the previous message


On-hook.


Enter 1–3 or 9 while confirming the message or
within 5 s of playback ending.

An SLT user can enter "0"
instead of "#".The messages are played
in the recorded order.

To erase all voice messages in a voice message area

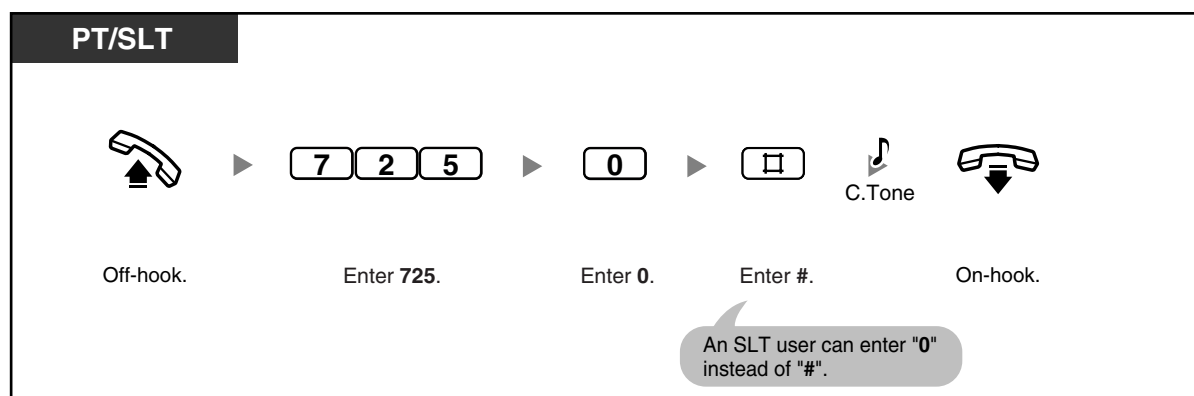

To play back and/or erase voice messages from an outside telephone

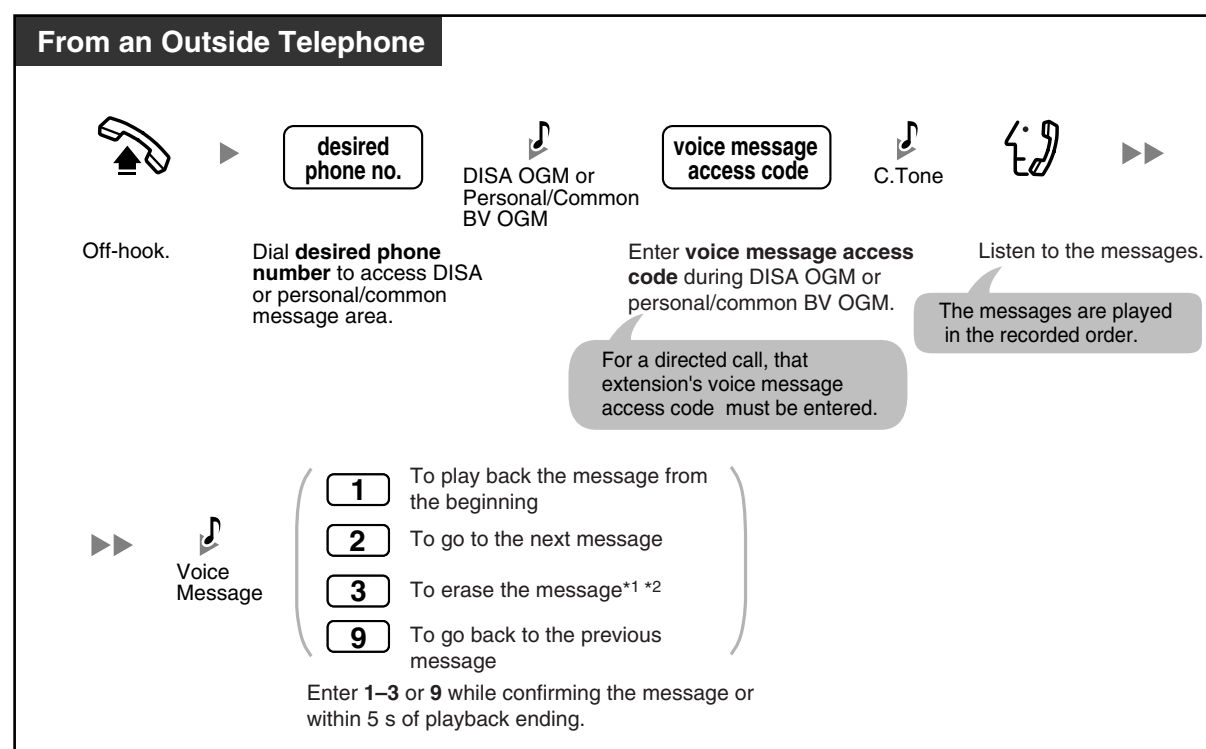

- *1 To erase a voice message while listening to the message, enter "3". You will hear dial tone 3. Enter "3" again to erase the message. If you change your mind and decide not to erase the message, dial another number ("1", "2", or "9") or go on-hook while hearing dial tone 3.
- *2 When you are calling from an outside telephone, after hearing dial tone 3 for 5 seconds, the next message is automatically played back. You can dial any function number ("1", "2", "3", or "9") while confirming any message.




- Callers cannot put a call on hold by pressing the TRANSFER or HOLD button while recording a voice message.
- If you enter a wrong voice message access code, when trying to play back voice messages from an outside telephone, the call will be disconnected after 10 seconds. When playback is complete, or you have no voice messages recorded, the call will be disconnected after 5 seconds.
- When you erase voice messages, the caller's information is erased simultaneously.
- The MESSAGE button light or Message/Ringer Lamp shows the current status of the voice message area as follows:
Off: No voice messages, or old voice messages only
Red on: New voice messages
If your telephone has no MESSAGE button or Message/Ringer Lamp, you cannot tell by looking whether there are new voice messages.
- If a new voice message has been recorded, you will hear dial tone 4 when going off-hook. If no voice messages are recorded, you will hear a confirmation tone and then a dial tone.

Dial Tone 4



- When the remaining recording time for the PBX is less than 5 minutes or when 125 voice messages have been recorded, the display informs you that the voice message area is full, and you hear dial tone 5 when going off-hook. If the remaining recording time goes back to being 5 minutes or more, for example, when messages are erased, the display returns to the idle status display and you will hear dial tone 1 instead of dial tone 5 when going off-hook.

Dial Tone 5

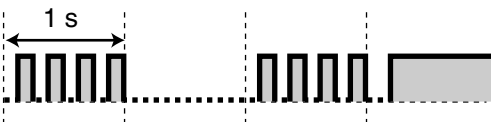

Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a Message button, Caller ID Indication—Personal button, or Caller ID Indication—Common button.

1.6 Making/Answering a Paging Announcement

1.6.1 Paging

- Paging
- Paging and then Transferring a Call

◆◆ Paging

You can make a paging announcement to several people at once. Your paging announcement can be heard through an external speaker and through the built-in speakers of proprietary telephones (PTs). An extension user can answer your paging announcement and establish an intercom call. There are 4 types of paging as shown below:

All Extensions:

Paging through the built-in speakers of all PTs.

Group:


Paging to a certain extension group through the built-in speakers of PTs.

External:

Paging through an external speaker.

All Extensions & External:


Paging through both the built-in speakers of all PTs and an external speaker.

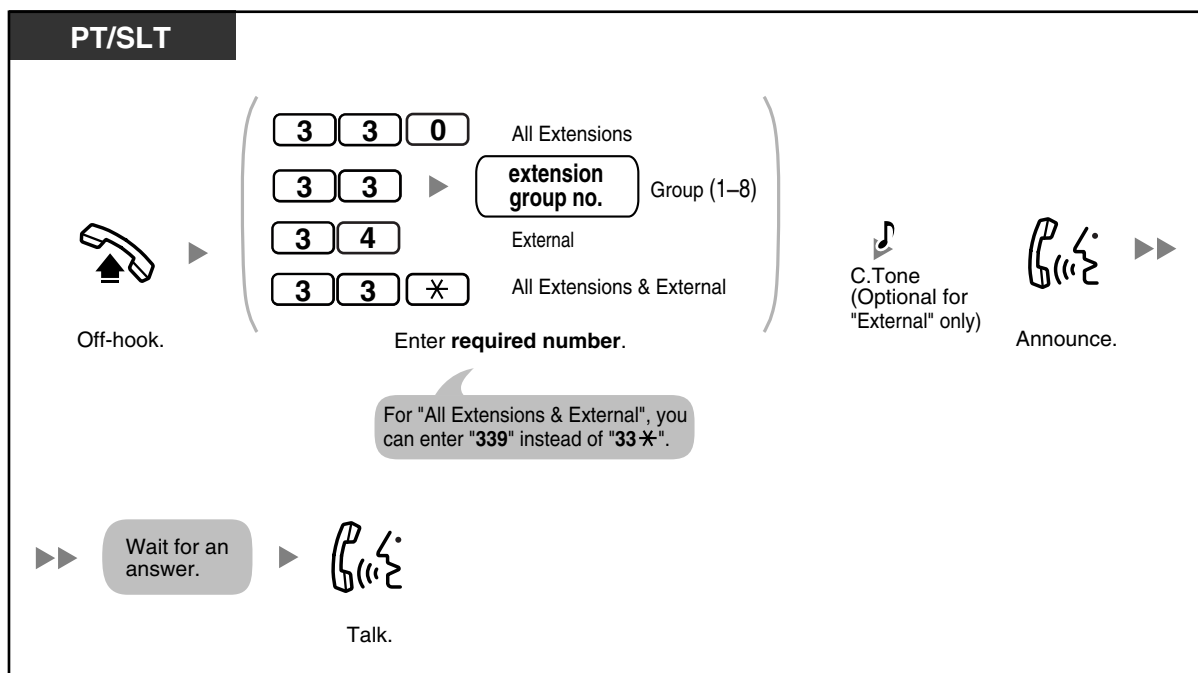

- Only one person can use the Paging feature at a time. If someone is already using the Paging feature when you try to make a paging announcement, you will hear a busy tone.

◆◆ **Paging and then Transferring a Call**

You can transfer a call after making a paging announcement.

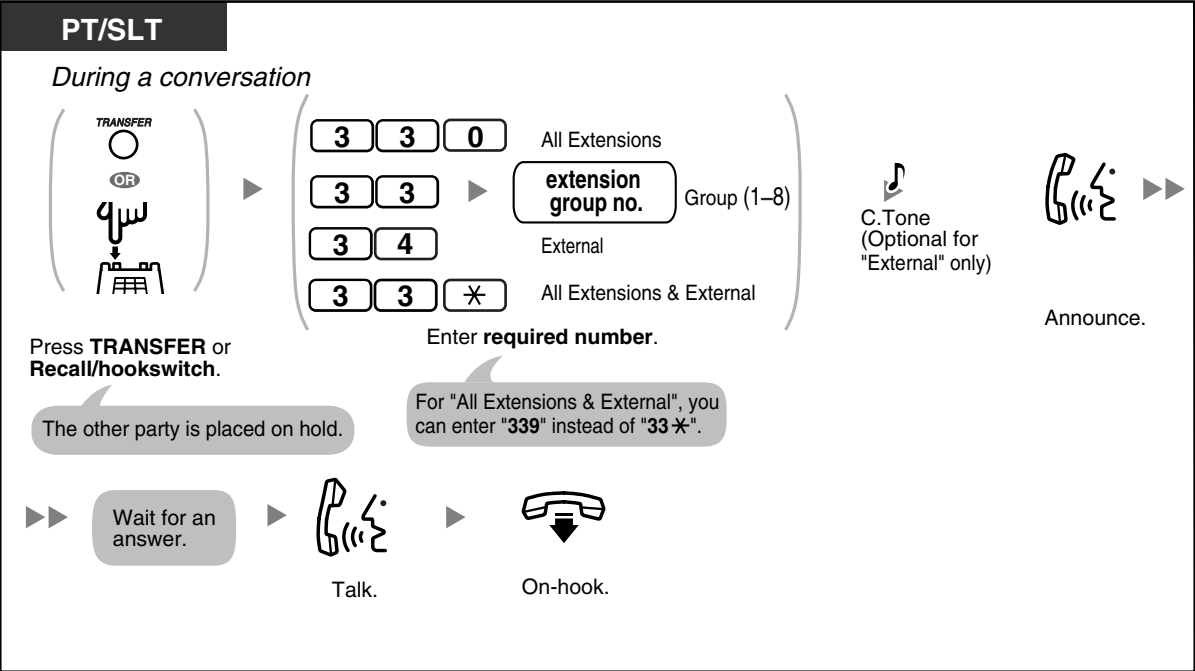

- After you go on-hook, the party on hold can talk to the person who answers the page.




- You may have to enter the Call Hold feature number after pressing the Recall/hookswitch on your single line telephone (SLT), depending on the SLT Hold Mode of your PBX. Ask your manager or dealer about the mode assigned to your PBX.


1.6.2 Answering/Denying a Paging Announcement

You can answer a paging announcement from any extension. You can also set your proprietary telephone (PT) to not receive paging announcements.

To answer

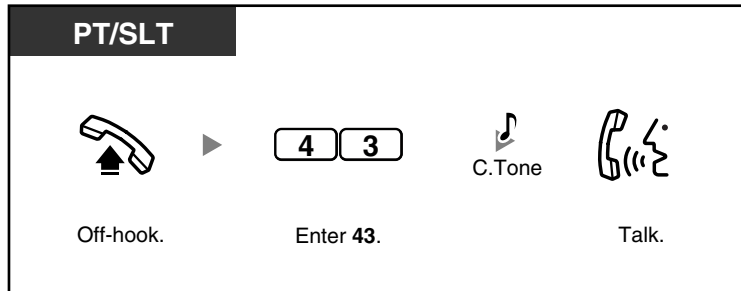

To refuse/accept paging announcements (Paging Deny)

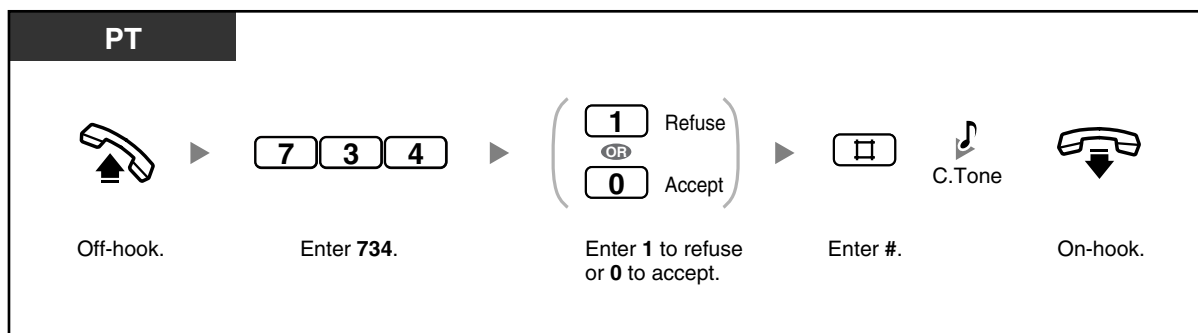


- When an outside (CO) line call is paged and transferred, you can answer the call by pressing the corresponding CO button whose indicator is flashing slowly.
- The following are extensions that cannot receive paging announcements:
 - a PT that is ringing or busy
 - a PT in Paging Deny mode
 - a PT in Do Not Disturb (DND) mode

1.7 Setting the Telephone According to Your Needs


1.7.1 Setting the Alarm (Timed Reminder)



You can set your telephone to ring at a set time, to remind you of a meeting, appointment, or as a wake-up call. The alarm can occur either one time or daily (every day until cancelled) at a preset time. When you go off-hook to answer, you hear a special dial tone (dial tone 3).

To set

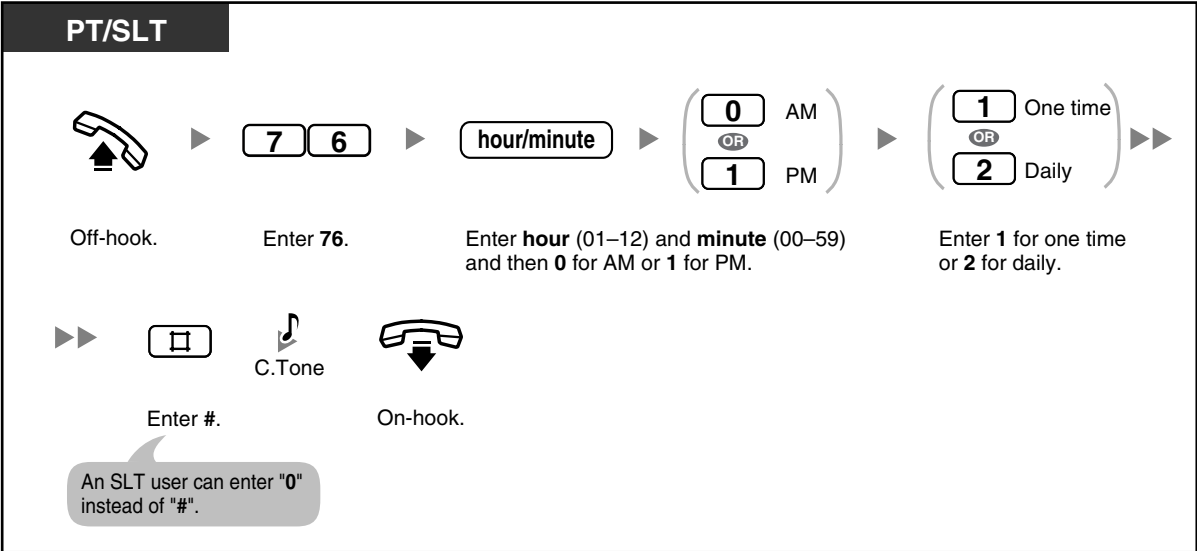

To cancel

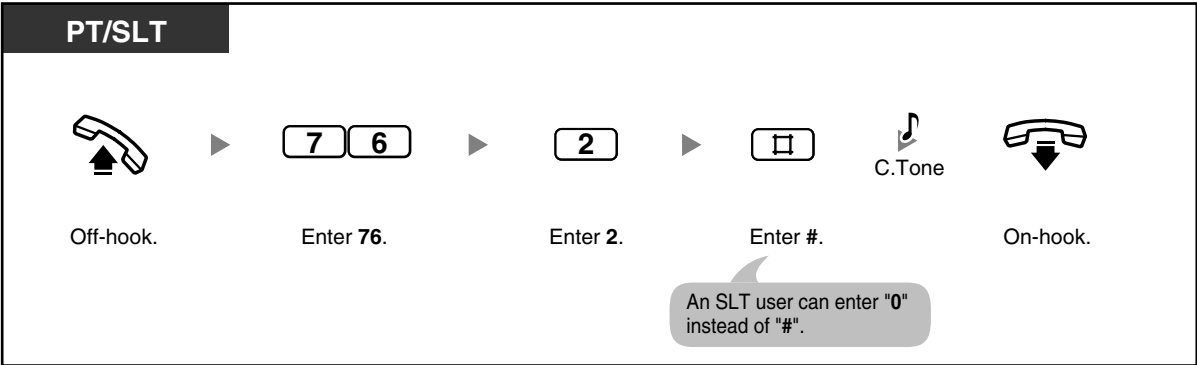

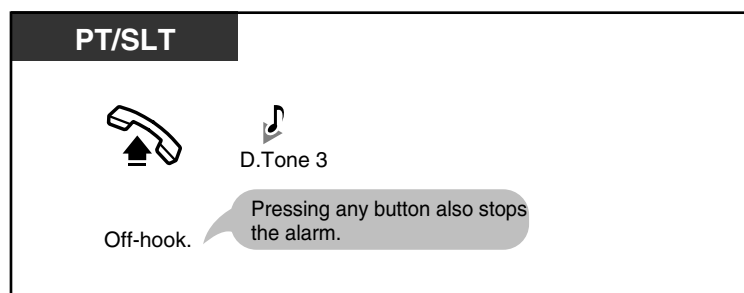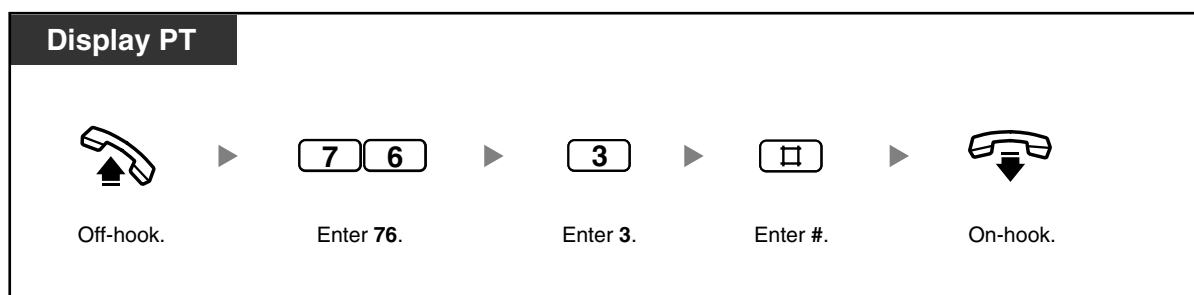
To stop the alarm**To confirm**

- The alarm rings for 30 seconds.
- **If you receive an incoming call during an alarm**, the ringing for that call will start after the alarm stops ringing.
- If the telephone is off-hook at the time an alarm is scheduled to ring, the alarm will start after the telephone goes on-hook again.

1.7.2 Refusing Incoming Calls (Do Not Disturb [DND])

You can set your telephone to prevent incoming calls from ringing at your telephone. This can be useful in situations where you do not want to be disturbed, for example during a meeting.

To set/cancel

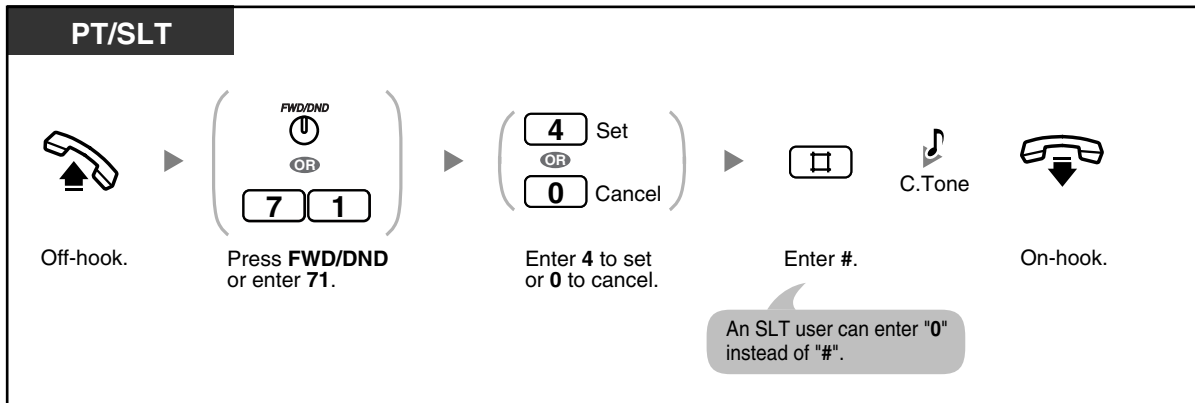

- The FWD/DND (Call Forwarding/Do Not Disturb) button light shows the current status as follows:
Off: Neither feature is set.
Red on: DND mode
Flashing red slowly: FWD mode
- If your extension has set this feature, calling extensions will hear a DND tone.
- If this feature is set, the FWD feature does not function.
- Extensions can override this feature and call extensions in DND mode (DND Override) if they are allowed to do so through system programming.
- Outside (CO) line calls can be received at your extension, but the telephone will not ring. The corresponding CO button will flash when an outside (CO) line call is received, and you can answer the call by pressing this button.
- Even if this feature is set, timed reminder alarms and hold recall tones (ring tones or alarm tones) will still ring.




Customising Your Phone

- 3.1.3 Customising the Buttons
 Create or edit an FWD/DND (Call Forwarding/Do Not Disturb) button.


1.7.3 Receiving Call Waiting

During a conversation, you can be informed of a waiting call by a tone through the built-in speaker of your proprietary telephone (PT) or the handset of your single line telephone (SLT) (Default: Disable). To change the call waiting tone using your PT, refer to "3.1.2 Changing Settings Using Programming Mode". To answer a waiting call, refer to "1.4.4 Answering Call Waiting".

To set/cancel for outside (CO) line calls

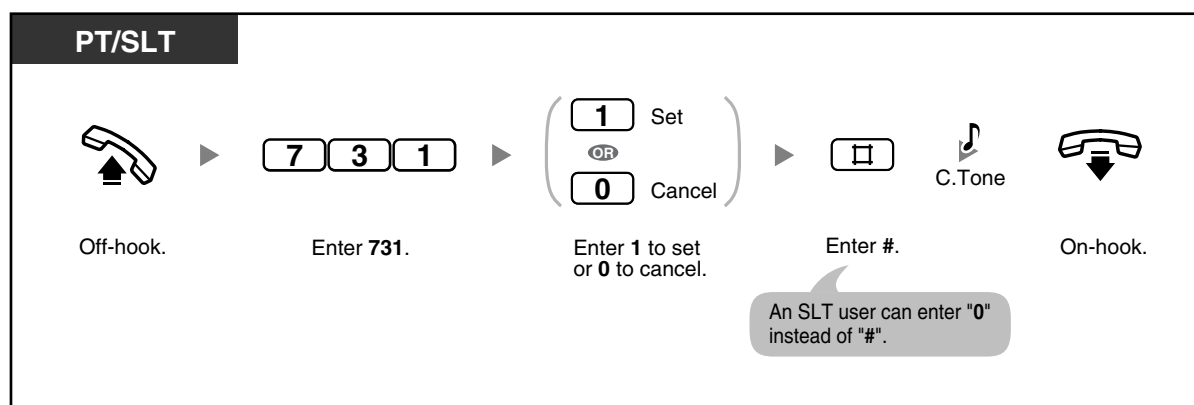


To set/cancel for intercom/doorphone calls

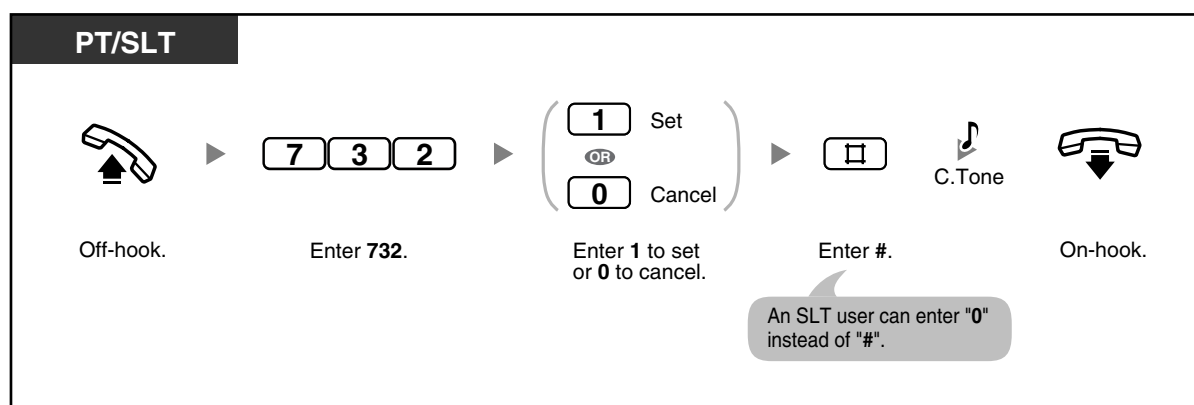

1.7.4 Preventing Other People from Joining Your Conversation (Executive Busy Override Deny)

You can prevent other extension users from using the Executive Busy Override feature to join an ongoing call.

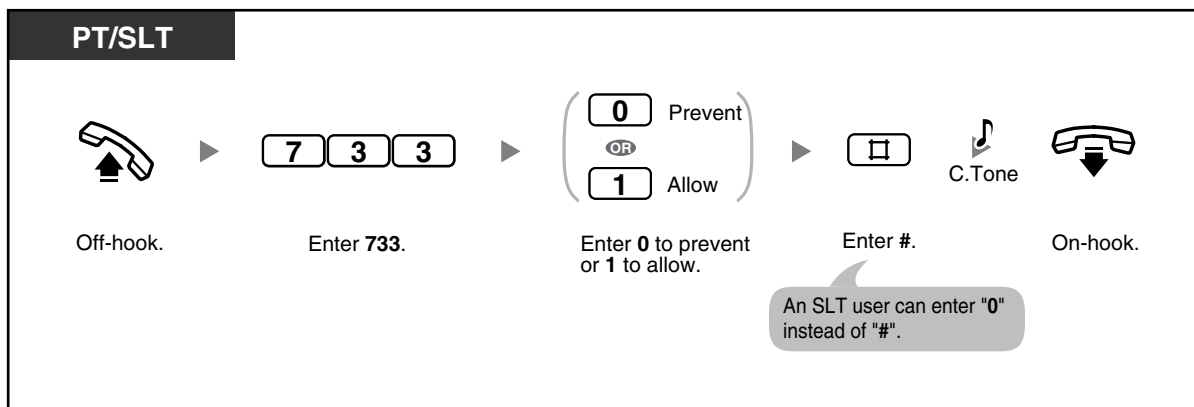

1.7.5 Turning on the Background Music (BGM)

You can listen to background music (BGM) through your telephone speaker while on-hook. If your extension becomes busy (off-hook, making or receiving a call etc.), the music will stop. When you go back on-hook, the music starts again.



To set/cancel

| PT |
|----------------------|
| <i>While on-hook</i> |
| <div>1</div> |
| Enter 1. |




- Your PBX can be programmed not to play music when "1" is entered while on-hook. Ask your manager or dealer.

1.7.6 Protecting Your Line against Notification Tones (Data Line Security)


You can protect the line against audible notification tones, such as call waiting tones or hold alarm tones during a conversation. Set this feature if your extension has a data communication device such as a computer or fax machine connected, to ensure secure data transmission.

To set/cancel

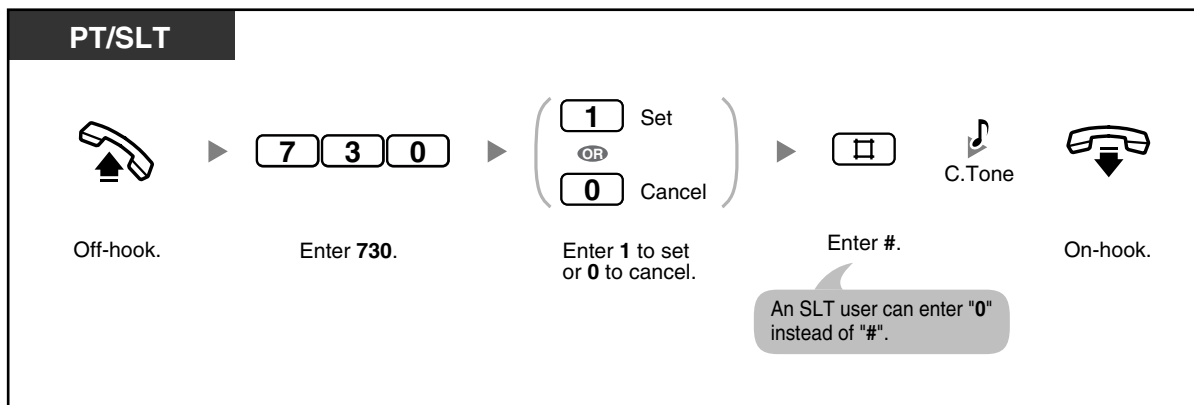

1.7.7 Checking the Time Service Mode


The PBX can be programmed to make and receive calls differently in day/night/lunch modes. You can confirm the current time service mode (day, night, or lunch) on the display.

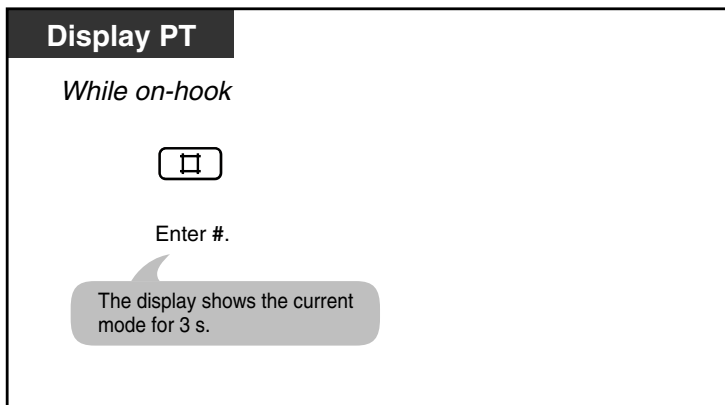

1.7.8 Clearing Features Set at Your Extension (Extension Feature Clear)

You can reset the settings of the following features on your extension to the default settings. This feature is also known as Station Feature Clear or Station Programme Clear.


| Feature | Value after Extension Feature Clear |
|------------------------------|--|
| Absent Message | Off |
| Automatic Callback Busy | Off |
| Background Music (BGM) | Off |
| Call Forwarding (FWD) | Off |
| Call Pickup Deny | Allow |
| Call Waiting | Disable |
| Data Line Security | Off |
| Do Not Disturb (DND) | Off |
| Executive Busy Override Deny | Allow |
| Hot Line | The stored telephone numbers will be cleared. |
| Log-in/Log-out | Log-in |
| Message Waiting | All messages left by other extensions will be cleared. |
| Paging Deny | Allow |
| Room Monitor | Off |
| Timed Reminder | Cleared |
| Voice Mail Integration | Off |

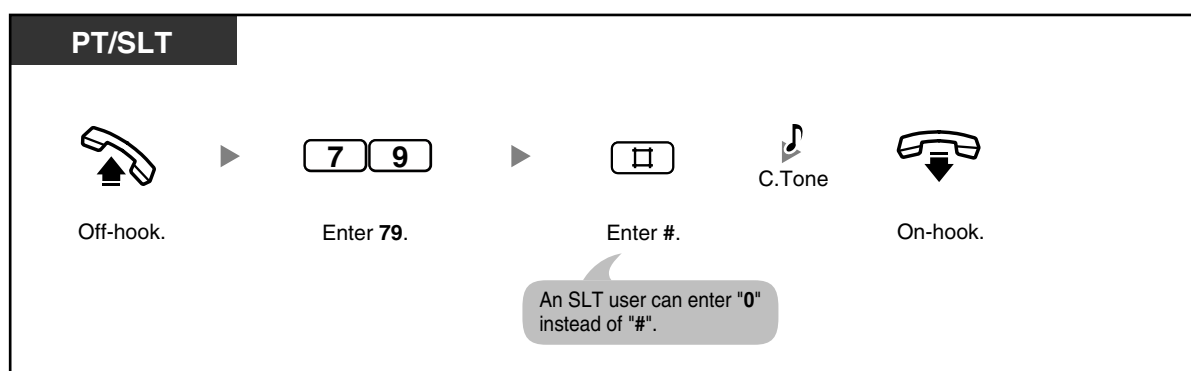


1.7.9 Monitoring a Room (Room Monitor)

You can monitor a room through another proprietary telephone (PT), or monitor a door through a doorphone. The PT you want to monitor should be set in advance to allow monitoring.


To set

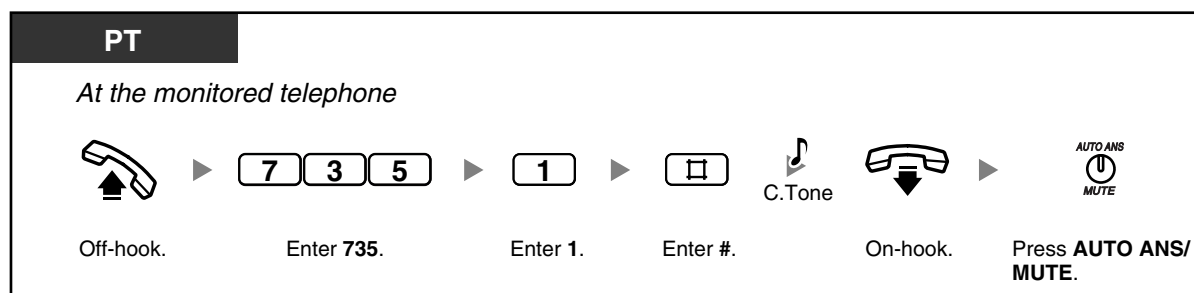


To monitor

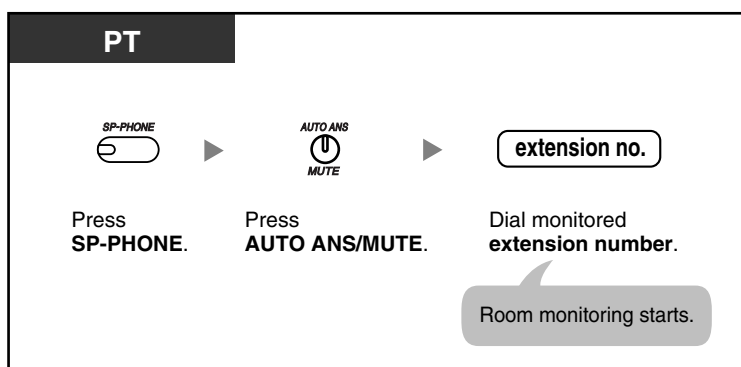


To monitor through a doorphone

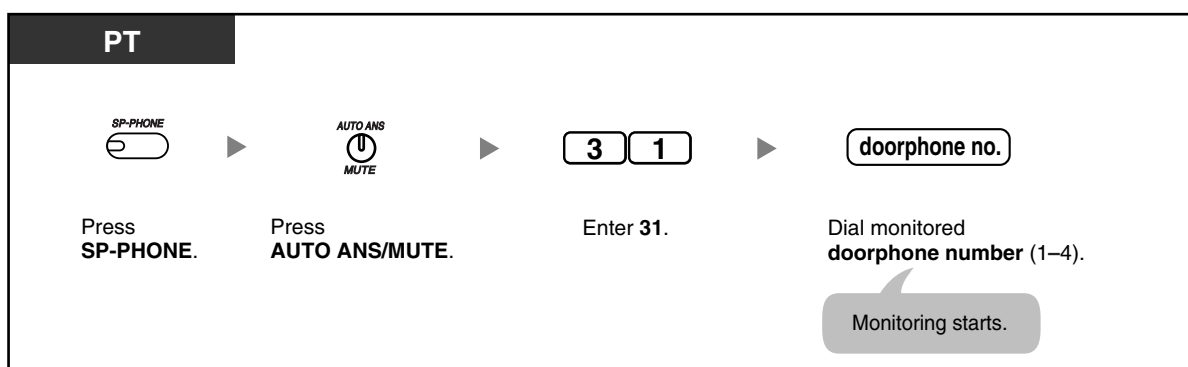


To talk with a person in the monitored room

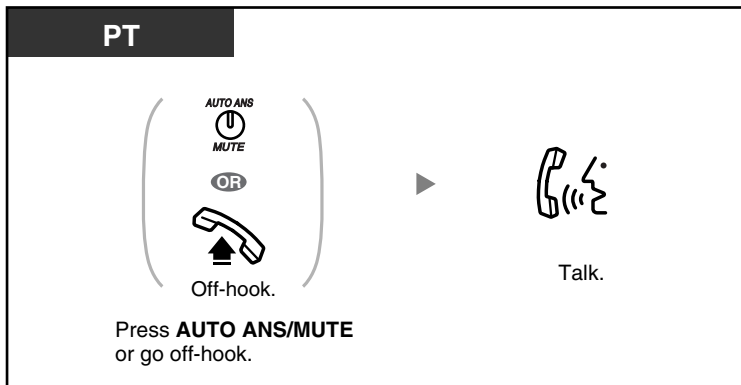

To cancel a monitor

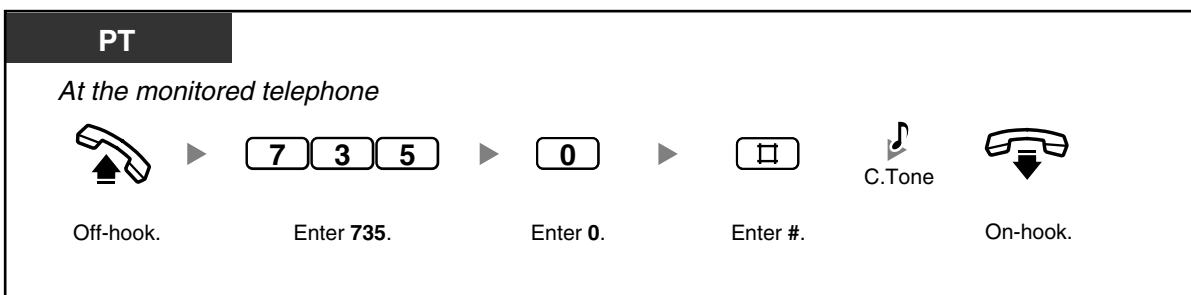

To stop a monitor temporarily while on-hook

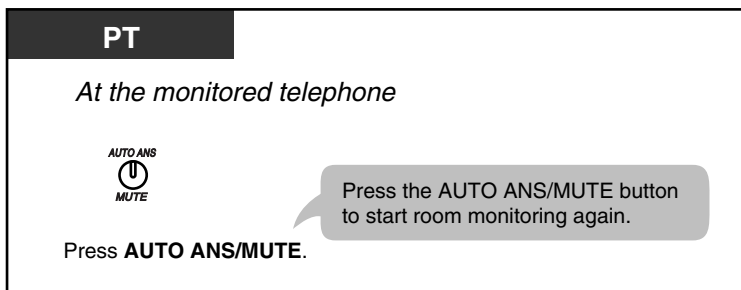

- You can monitor using a PT with an AUTO ANS/MUTE button or a single line telephone (SLT) with a MUTE button.
- The AUTO ANS/MUTE button light shows the current status as follows:
Off: Not set
Flashing red: Set (Ready for monitoring)

1.8 Using User-supplied Equipment


1.8.1 If a Doorphone/Door Opener is Connected

- Calling to and from a Doorphone (Doorphone Call)
- Opening a Door (Door Open)

◆◆ Calling to and from a Doorphone (Doorphone Call)

You can talk to a person at the door through the doorphone. The extensions that are permitted to be called when a visitor presses the Call button on a doorphone are determined through system programming.


To call from the doorphone

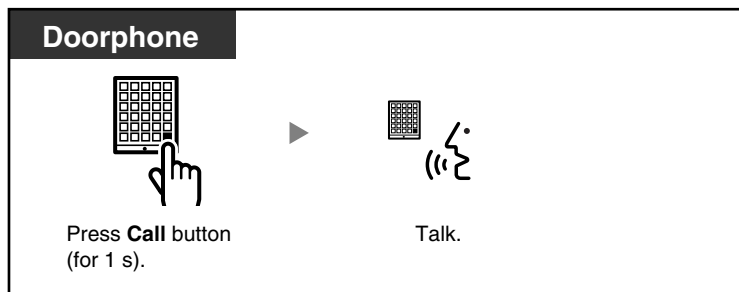

To answer a call from a doorphone



To call a doorphone

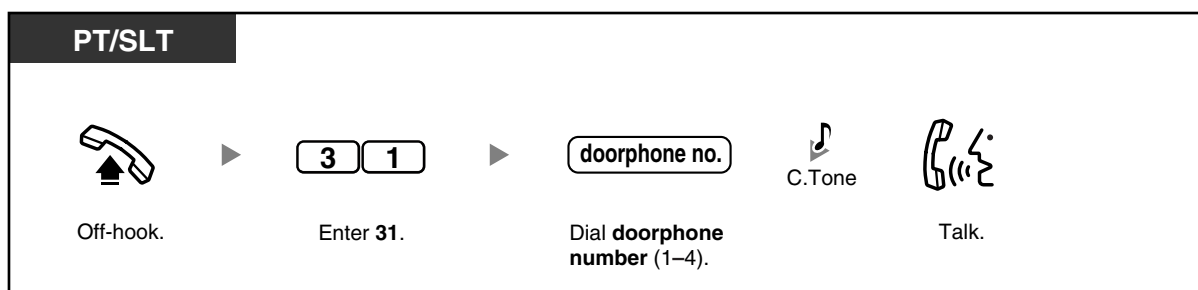




- If no one answers a doorphone call within a specified time period, ringing stops and the call is cancelled.
- Doorphones 1 and 2 (or doorphones 3 and 4) cannot be used at the same time. When one is in use, you cannot have a conversation with the other.


◆◆ Opening a Door (Door Open)

You can unlock a door from your extension, if enabled through system programming.

From an enabled extension

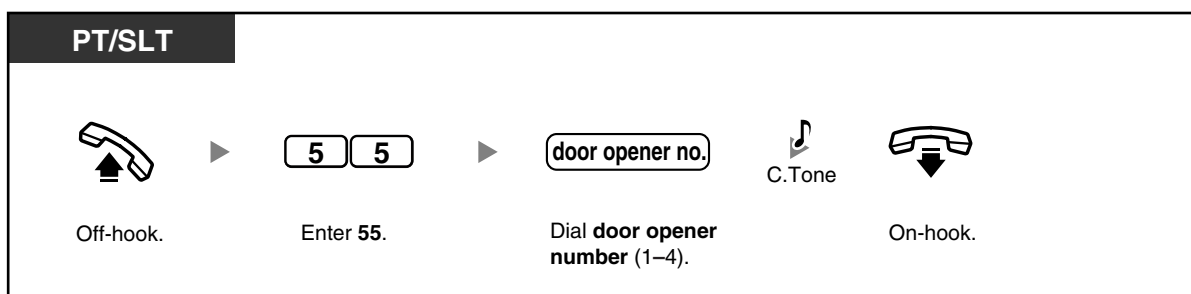

From an extension that is on a call with a doorphone

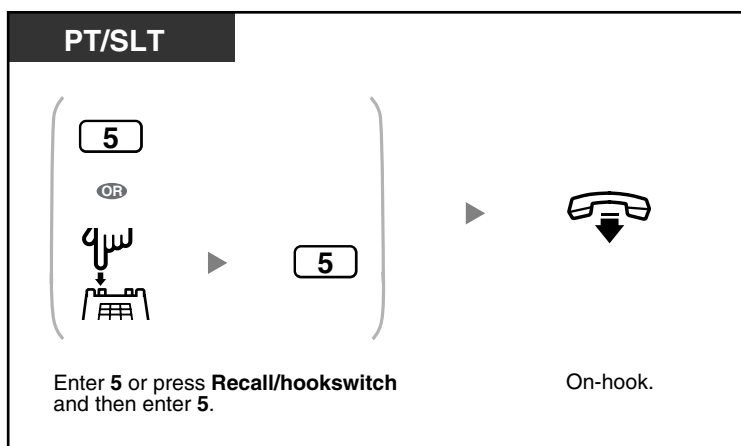

- The door will stay open for a specified time period.
- **To keep the door open longer**, enter "5" again using a Panasonic proprietary telephone (PT).


1.8.2 If a Host PBX is Connected

- Accessing External Services (External Feature Access [EFA])

◆◆ Accessing External Services (External Feature Access [EFA])

You can access special features such as Call Waiting offered by another PBX or a telephone company. This feature is only effective for outside (CO) line calls.

<Example> To hold the current call and then talk to the new party

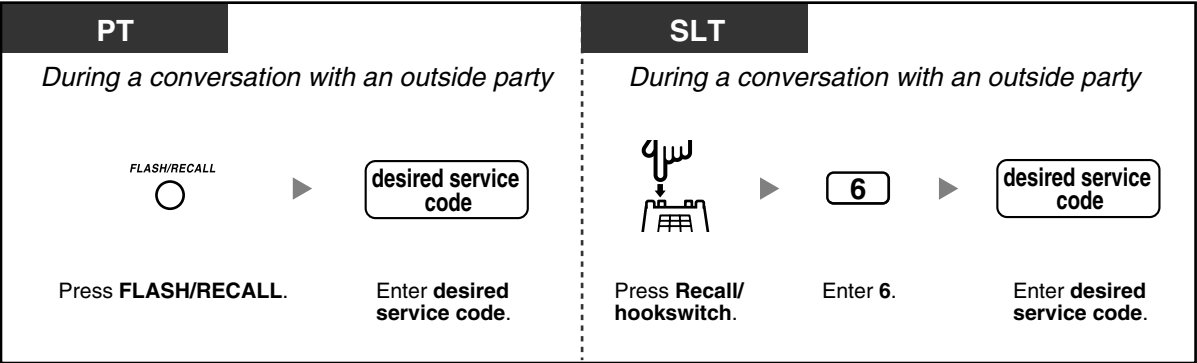

- Consult your dealer for the appropriate service codes.

1.8.3 If a Voice Processing System is Connected

You or an outside party can access the Voice Processing System (VPS) from a telephone.

- Forwarding Your Calls to a Voice Processing System (Voice Mail Integration)


If your PBX has a Panasonic VPS connected using APT Integration, the following features are also available:

- Screening Calls (Live Call Screening [LCS])
- Recording a Conversation (2-way Record)

◆◆ Forwarding Your Calls to a Voice Processing System (Voice Mail Integration)

If you cannot answer calls, you can set them to be forwarded to your mailbox in a Panasonic VPS that supports either Inband (DTMF) Integration (e.g., KX-TVP series VPS) or APT Integration (e.g., KX-TVP50 series VPS). If your telephone has a MESSAGE button or Message/Ringer Lamp, the corresponding button or lamp turns on and lets you know you have messages. A single line telephone (SLT) user will hear dial tone 3 when going off-hook if there are any messages in his or her mailbox.


To set/cancel

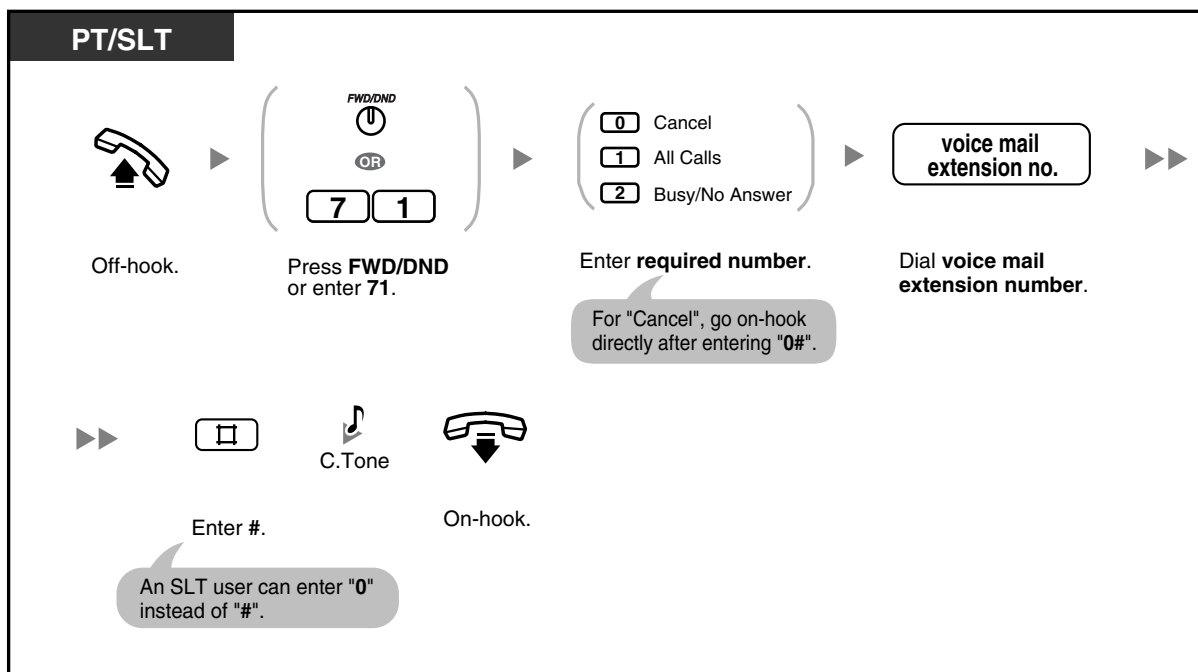




- If your PBX has a Panasonic VPS connected using Inband (DTMF) integration, your PBX automatically sends a special signal to the Voice Mail port before connecting the caller. To enable this feature, it may be necessary to set the signal format required by your VPS before setting the Call Forwarding (FWD) destination to Voice Mail as follows:
 - Setting A: only sends the extension number to the Voice Mail port. To set or cancel, enter "91#" or "90#" respectively after pressing the FWD/DND button or entering "71".
 - Setting B (default): sends "#6" followed by the extension number. "#6" is used by a Panasonic KX-TVP series VPS to force the VPS port into voice mail service. To set or cancel, enter "92#" or "90#" respectively after pressing the FWD/DND button or entering "71".
 For more details, ask your manager or dealer.

To listen to messages

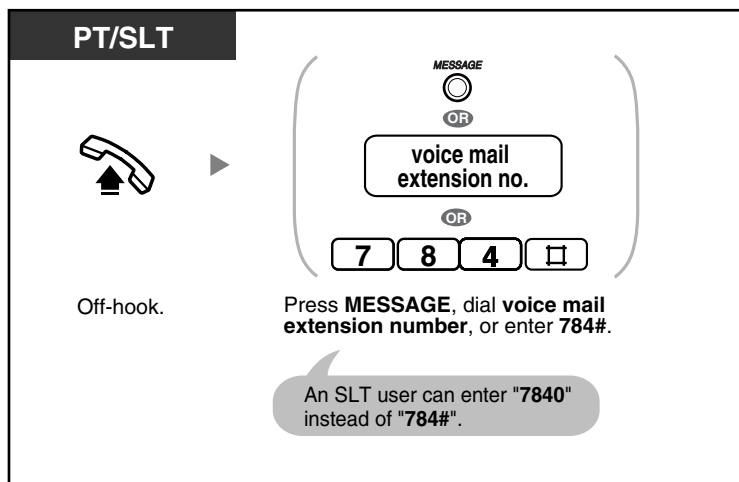

To transfer a call to a mailbox (APT Integration only)

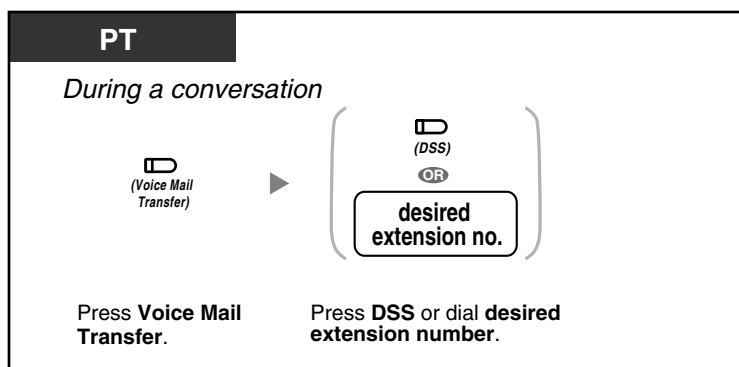

- If your VPS supports APT Integration, you can also transfer received outside (CO) line calls to a mailbox so that calling parties can leave messages. If you create a Voice Mail Transfer button on your phone, you can transfer calls to a desired extension without having to enter the mailbox number (Voice Mail Transfer). The maximum recording time for caller messages depends on the VPS.



- If a proprietary telephone (PT) user sets the FWD—Busy/No Answer feature, the FWD/DND button light will keep flashing while on-hook. To stop the button from flashing, go off-hook and enter "716#".



Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit an FWD/DND (Call Forwarding/Do Not Disturb) button, Message button, Voice Mail (VM) Transfer button, or Direct Station Selection (DSS) button.

◆◆ Screening Calls (Live Call Screening [LCS])


While a caller is leaving a message in your mailbox, you can monitor the call, and choose whether to answer or not. There are 2 methods available. (Default: Hands-free mode)

Hands-free mode:

You can monitor the message automatically, live through the telephone speaker.

Private mode:


You will hear the following alert tone while the caller is leaving a message.

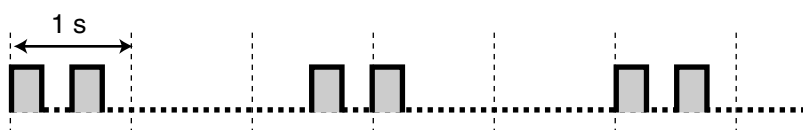

Before operating

- Create a Live Call Screening (LCS) button.
- Select the mode, either Hands-free or Private.
- Set the LCS password.
- Set the LCS feature.


To set/cancel the LCS password

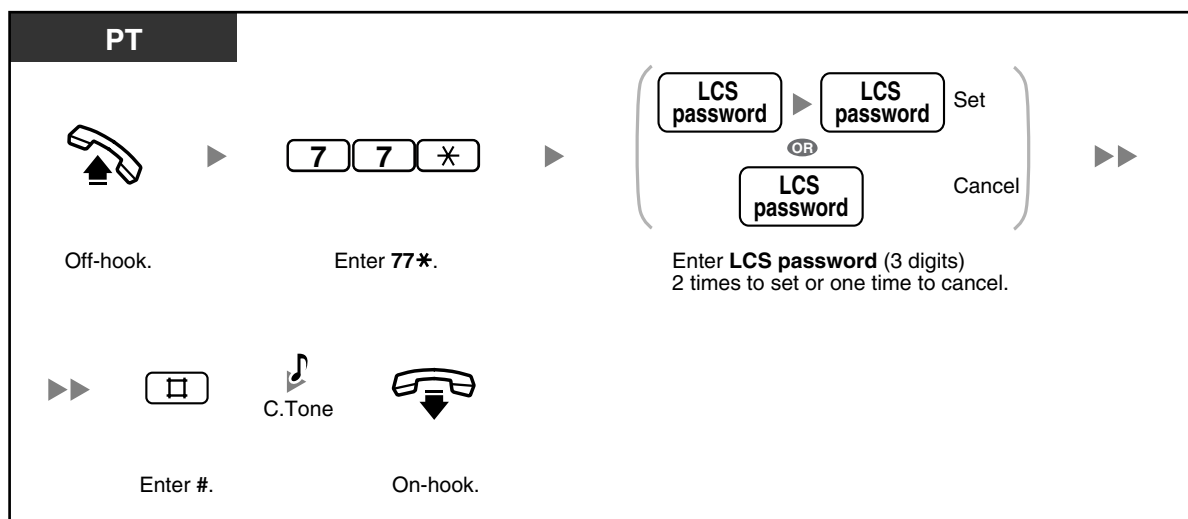

To set LCS

PT

 While on-hook


(Live Call Screening)

▶

 
LCS password

Press **Live Call Screening**. Enter **LCS password**.

To cancel LCS

PT


While on-hook


(Live Call Screening)

Press red **Live Call Screening**.

Operation Flowchart

The operations in the shaded areas can be performed in hands-free mode.

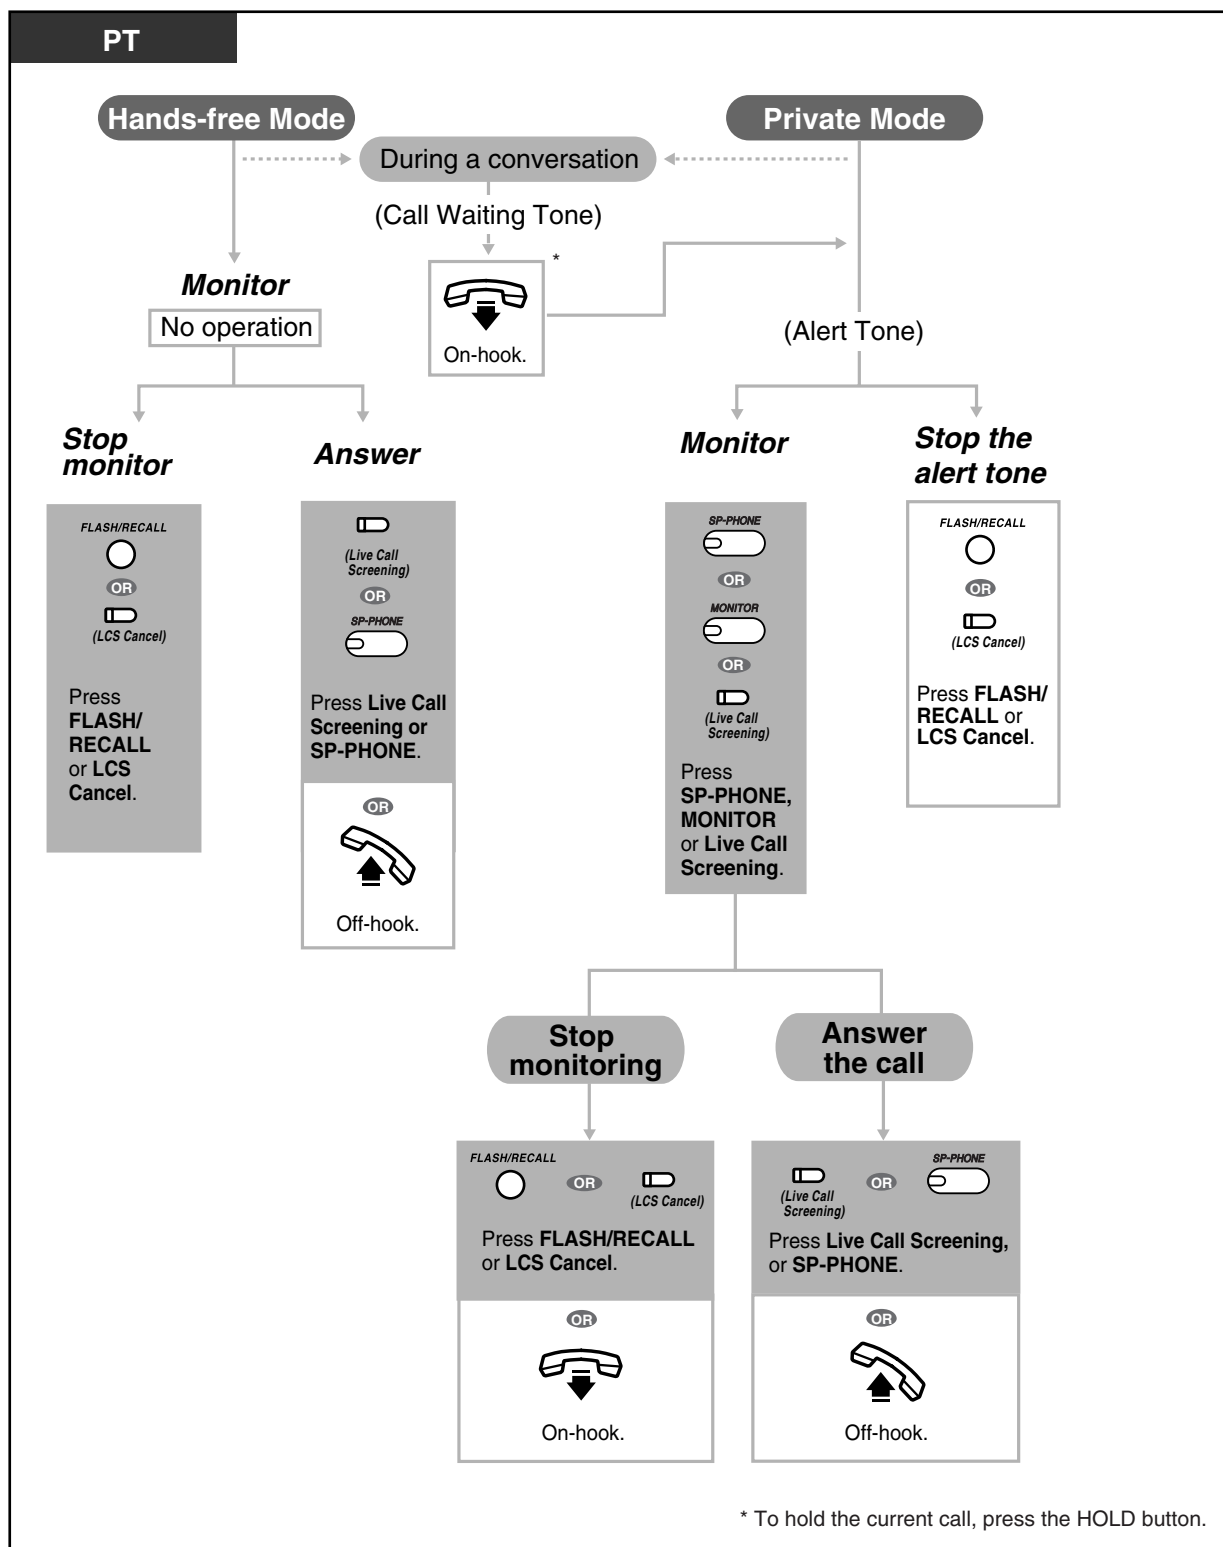



- The Live Call Screening (LCS) button light shows the feature status as follows:
Off: LCS is off.
Flashing green rapidly: An alert tone is ringing (Private mode only).^{*1}
Flashing green slowly: Monitoring.^{*2}
Red on: LCS is on.
^{*1} The Direct Station Selection (DSS) button light flashes red slowly while monitoring.
^{*2} The DSS button light flashes red at moderate speed while an alert tone is ringing.
- The operator or manager can clear the LCS password at any extension.



Customising Your Phone

- 3.1.2 Changing Settings Using Programming Mode—**Live Call Screening [LCS] Mode Set**
 Select the mode, either monitoring the message through the speaker automatically or receiving an alert tone, while the caller leaves a message.
- 3.1.3 Customising the Buttons
 Create or edit a Live Call Screening (LCS) button or LCS Cancel button.

Recording a Conversation (2-way Record)

You can record a conversation into a mailbox while talking on the phone.
 You can select the mailbox each time you record a conversation.



To record into your mailbox

PT

During a conversation




(2-way Record)

Press **2-way Record**.

To stop recording,
press this button again.

To record into another mailbox (2-way Transfer)

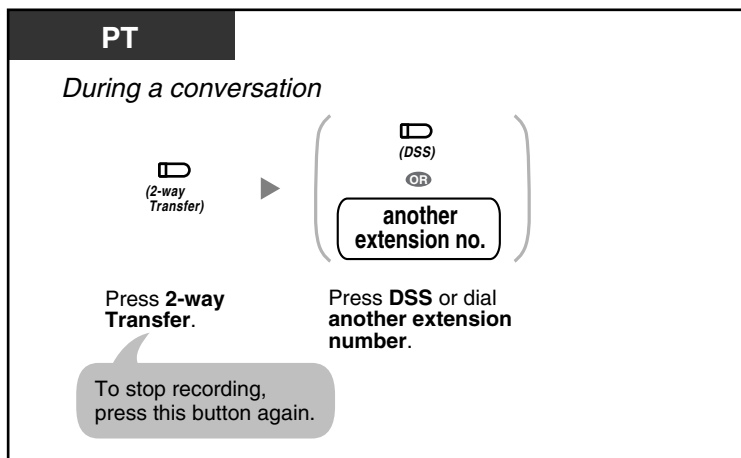

- The 2-way Record button light or 2-way Transfer button light shows the current status as follows:

Off: Not recording.

On: Recording the conversation.



- Note:**

When you record your 2-way telephone conversations, you should inform the other party that the conversation is being recorded.



Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a 2-way Record button, 2-way Transfer button, or Direct Station Selection (DSS) button.

1.9 Using a Display Proprietary Telephone

1.9.1 Calling with the Incoming Call Log

If your PBX receives caller information from the telephone company (phone number and/or caller name), the PBX automatically logs this information each time you do not answer an outside (CO) line call. You can view a log of unanswered calls later to see who called and when, and use this information to call back the callers.

There are 2 types of call log areas available in the PBX. One is the personal area, which logs calls for each extension separately. The other is the common area, which logs calls to multiple extensions and calls via Direct Inward System Access (DISA) Intercept Routing. Up to 20 calls can be logged in each personal area and up to 300 calls in the common area.

When the call log in the personal area is full, new calls can either be disregarded or can overwrite the oldest calls that have already been viewed in the personal area call log. Similarly, when the call log in the common area is full, new calls can either be disregarded or can overwrite the oldest calls that have already been viewed in the common area call log. For more details, refer to "2.1.5 Disregarding the Newest Call or Overwriting the Oldest Call in the Common Area Call Log (301st Incoming Call Logged in the Common Area)".

Voice messages recorded by Built-in Voice Message (BV) are stored separately from caller information. However, when a caller leaves a voice message, it is automatically linked to the caller information in the Incoming Call Log. Up to 125 voice messages can be logged. For more details, refer to "1.5.5 Using Voice Messaging (Built-in Voice Message [BV])".


You can also set caller information to be automatically logged into your personal area or the common area even when you answer an outside (CO) line call.

Additionally, logged phone numbers can be edited so that you can call callers back without worrying about outside (CO) line access numbers, area codes, etc.

The following information is logged:

- Caller's Phone Number & Name
- Date/Time of receiving call
- Voice Message (if stored)

To check the number of logged calls

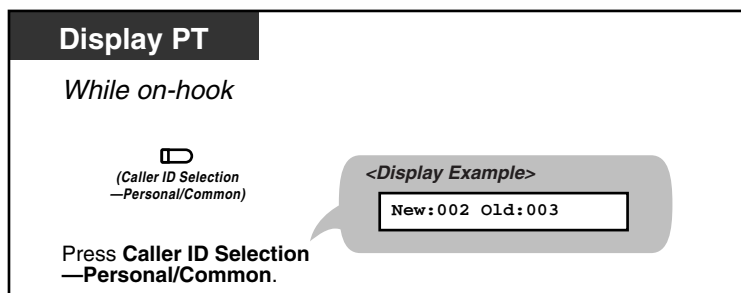


- Since the status of call records is always shown on the bottom of a PT with a 3-line display such as the KX-T7735, pressing the Caller ID Selection—Personal/Common button while on-hook is not necessary. If both a Caller ID Selection—Personal button and a Caller ID Selection—Common button are assigned to a PT, the status of call records of the Caller ID Selection—Common button are shown on the display while on-hook.

1.9 Using a Display Proprietary Telephone




- **New:** Call records that have not previously been viewed
- **old:** Call records that have previously been viewed
- Both new and old call records are stored in each personal and common area.

To view caller information and call back a caller

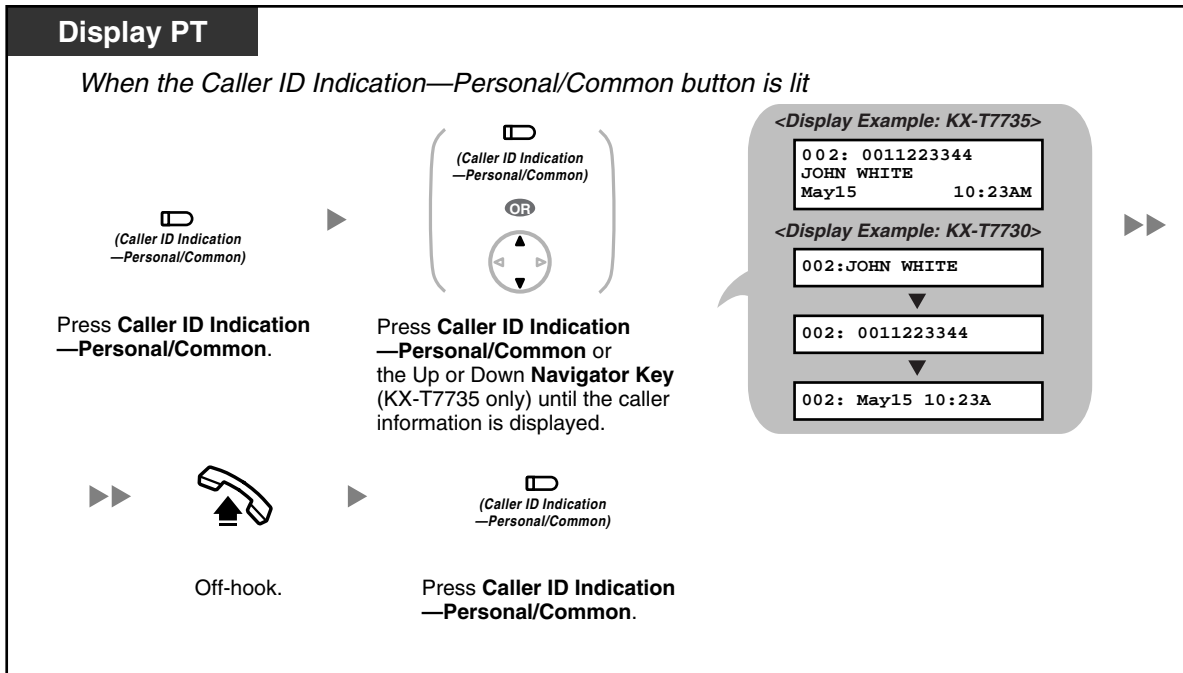

To erase caller information

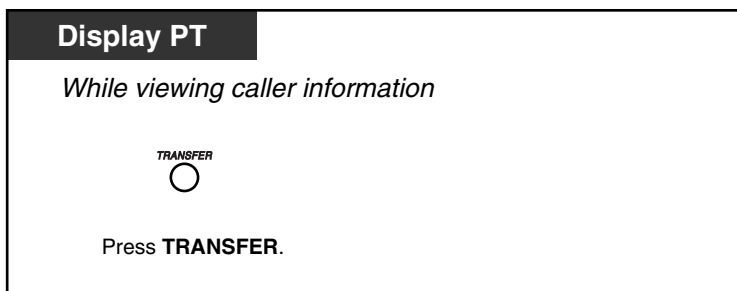

- A proprietary telephone (PT) with a one-line display, such as the KX-T7730, cannot show all of the caller information simultaneously. Either the name, number, or date and time will be shown. The user may change the displayed information by pressing the "#" key or the Caller ID Selection—Personal/Common button.
- Only 12 digits (or characters) of a caller's number (or name) can be displayed even though up to 16 digits (or characters) of information can be received. To scroll the display, press the FWD/DND (Call Forwarding/Do Not Disturb) button.




- To return to the idle status display, go off-hook and then on-hook. The display also returns to the idle status display automatically if no operation is performed for 20 seconds.
- To modify the logged telephone number, press the HOLD button to erase digits and then use 0 to 9, *, and PAUSE to add numbers in front of the first digit.


To view caller information and play back an associated voice message in a voice message area

Display PT


*While viewing caller information with an associated voice message
(When the Message/Ringer Lamp or the MESSAGE button is lit)*



Press **MESSAGE**.



C. Tone




Listen to the message.


To erase caller information, including associated voice message in a voice message area


Display PT

*While viewing caller information or
after playing back the associated voice message*



Press **TRANSFER**.






Press **TRANSFER** again to
confirm the deletion.

The caller information is erased.



- When viewing caller information with the Caller ID Indication—Common button, an extension user other than the operator or manager cannot play back associated voice messages in the common message area. Voice messages in the common message area can be played back or erased by the operator or manager only.
- If voice messages without caller information are recorded, "Voice Message" will be shown on a display PT instead of the caller's phone number while you are viewing caller information.
- Even if there are message waiting indications left at your extension, the Message/Ringer Lamp or the MESSAGE button light that displays notifications from the Message Waiting feature turns off while you are viewing caller information with the Caller ID Indication—Personal/Common button.
- If your telephone has no MESSAGE button, you cannot play back associated voice messages while viewing caller information.

To erase all caller information in the personal area

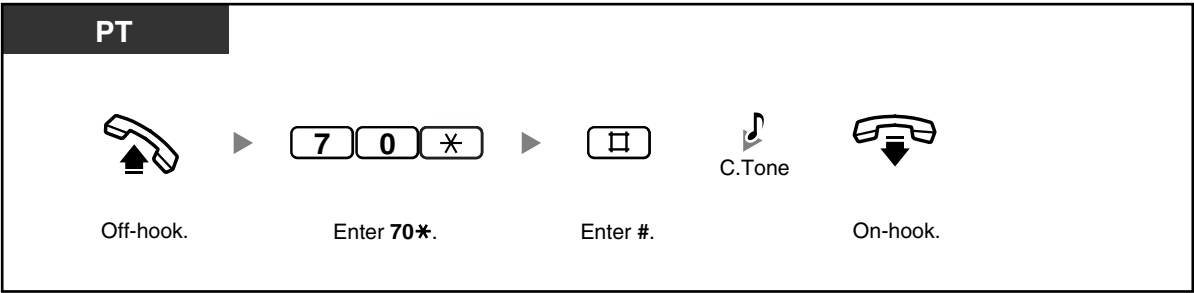


- Caller information with associated voice messages is not erased by this operation.




- To erase all caller information in the common area, refer to "2.1.4 Erasing All Caller Information in the Common Area (Incoming Call Log in the Common Area—CLEAR ALL)".

To disregard the newest call/overwrite the oldest call in the personal area call log

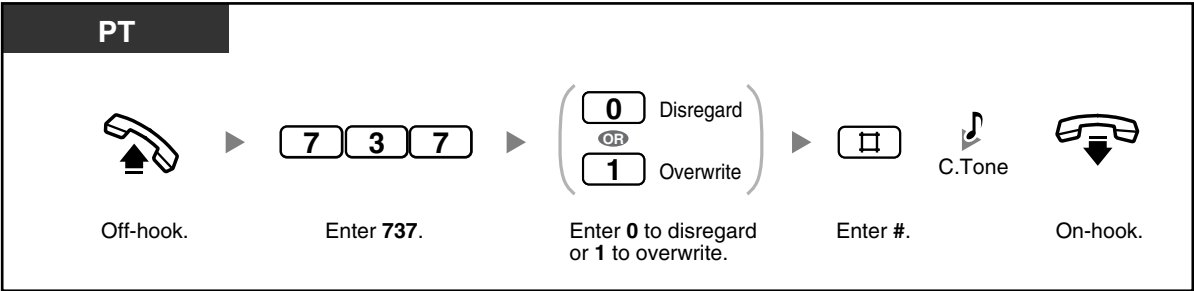

To set/cancel logging of caller information when answering a call

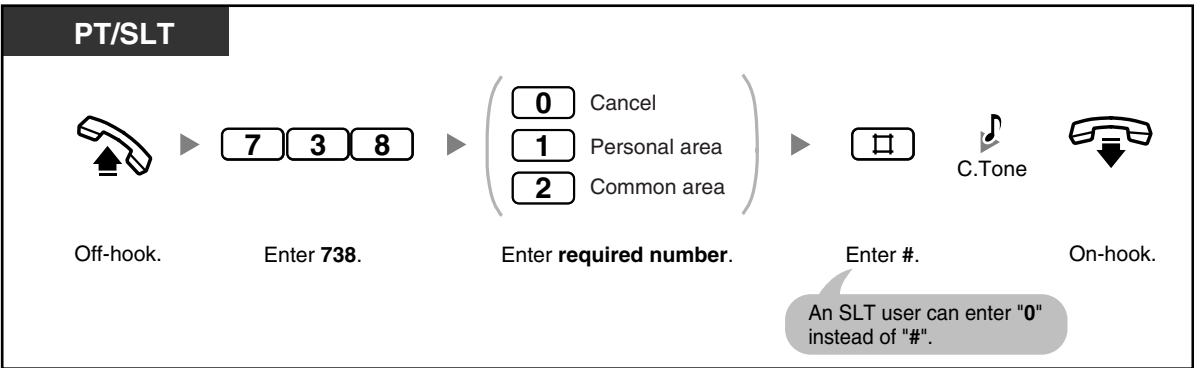

- If you press the Caller ID Indication—Personal/Common button during a conversation, the caller's information is logged regardless of this setting.
- You can set logging of caller information in both the personal area and the common area at the same time.



- New information of calls that you did not answer will be displayed first.
- Information of answered calls is logged as old (already viewed) information.



- A Caller ID Indication—Personal/Common button can be used to:
 - Inform you of calls logged in your personal area or the common area,
 - Store the information of an incoming call during a conversation, and
 - View caller information while on-hook and call back a caller whose information is stored in your personal area or the common area.
- A Caller ID Selection—Personal/Common button can be used to:
 - Display and cycle through the information of an incoming call during a conversation, while receiving a call, or while viewing caller information,
 - Display the number of logged calls while on-hook, and
 - Inform you that the personal or common area call log is full.
- If a Caller ID Indication—Common button is not assigned to any PT when calls arrive at multiple PTs or via the DISA Intercept Routing feature, caller information will be logged in the personal area of the PT that is connected to the lowest-numbered jack on the PBX, and a Caller ID Indication—Personal button will light.
- Even if you answer a call, you can log the caller's information by pressing the Caller ID Indication button during the conversation.
- You can lock your personal area call log (including caller information with associated voice messages) so that other extensions cannot access your logged information. Refer to "1.5.3 Preventing Other People from Using Your Telephone (Extension Lock)".
- Caller information is also logged for unscreened transferred calls, even if not answered. In this case, the caller information will be logged in the final destination's personal area.



Customising Your Phone

3.1.3 Customising the Buttons

Create or edit a Caller ID Indication—Personal button, Caller ID Indication—Common button, Caller ID Selection—Personal button, Caller ID Selection—Common button, or Message button.

Section 2

Operator/Manager Operation

This chapter shows the operator and the manager extension how to control the other extensions or the PBX. Your PBX supports one manager (extension jack 01) and one operator.


2.1 Control Features

2.1.1 Locking Other Extensions (Remote Extension Lock)

The operator or manager can lock or unlock an extension.
This feature is also known as Remote Station Lock Control.



To lock/unlock

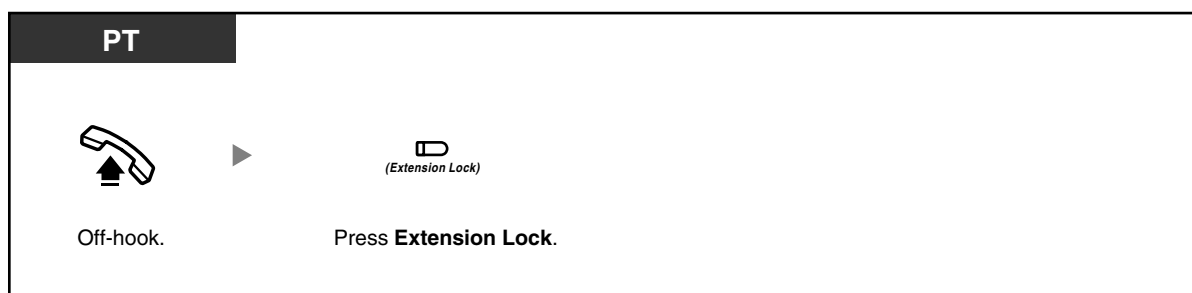

- This feature overrides the Extension Lock feature. If Extension Lock has already been set by the extension user and this feature is set afterwards, the extension user cannot cancel the lock. Only the operator or manager can cancel the lock.
- The Extension Lock—CANCEL ALL feature can cancel all locks placed on extensions using this feature. Refer to "2.1.7 Changing System Settings Using Programming Mode".
- This operation can be performed only if the operator or manager has set the extension password of the corresponding extension. Refer to "2.1.7 Changing System Settings Using Programming Mode".



Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit an Extension Lock button.


2.1.2 Switching the Time Service Mode (Time Service)

The PBX can be programmed to make and receive calls differently in each time service mode (day, night, and lunch).


The time service mode can be set to be changed manually (manual mode) or automatically at preprogrammed times (automatic mode) through system programming. Even if automatic mode has been selected, the operator or manager can change the current time service mode manually.




To change the time service mode manually

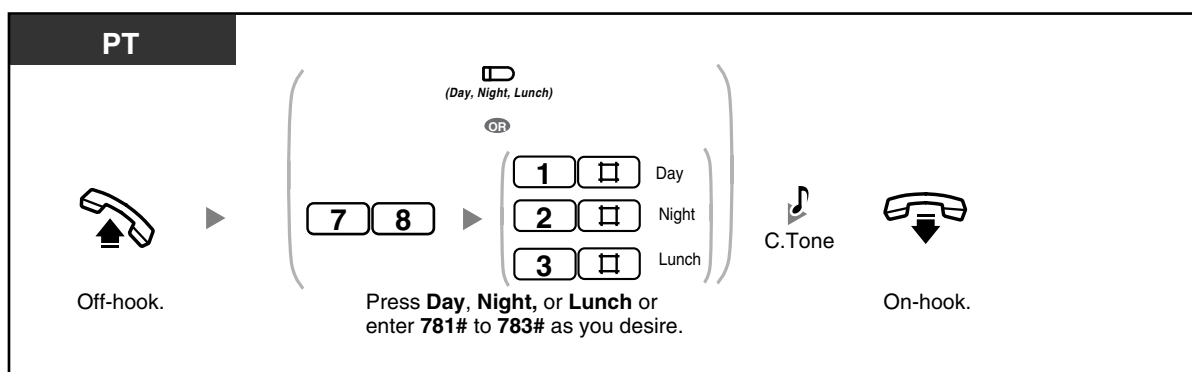

To return to automatic mode after changing the time service mode manually

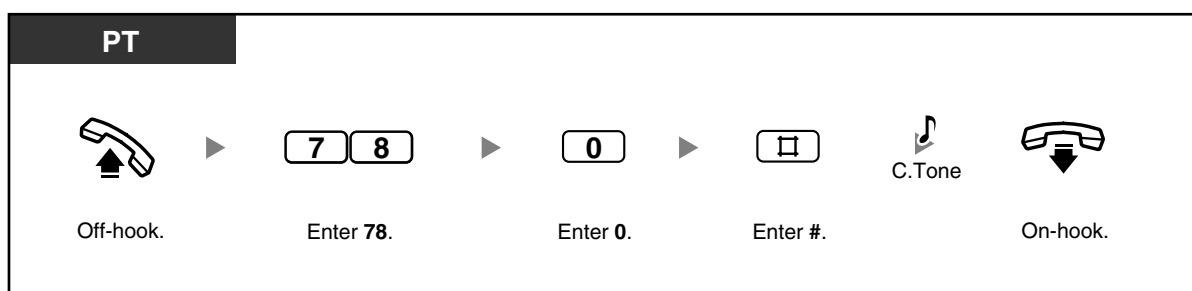

To confirm the current time service mode

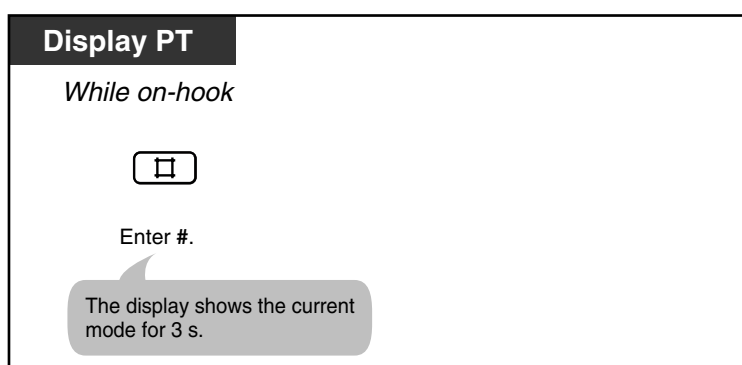

2.1 Control Features



- The Day, Night, and Lunch button lights show the current status as follows:
Off: Not set
Red on: Set
- If lunch mode is set manually by entering "783#" while in automatic mode, the time service mode will not change automatically until you return to automatic mode by entering "780#". However, if day mode or night mode is set manually, the mode will still change automatically as programmed.
- It is not possible to cancel the current time service mode while in manual mode. Instead, enter the feature number corresponding to the time service mode you wish to set.



Customising Your Phone


- 3.1.3 Customising the Buttons
Create or edit a Day button, Night button, or Lunch button.

2.1.3 Setting an Alarm for Other Extensions (Remote Timed Reminder [Wake-up Call])


The operator or manager can remotely set or cancel the Timed Reminder feature for any extension.




To set

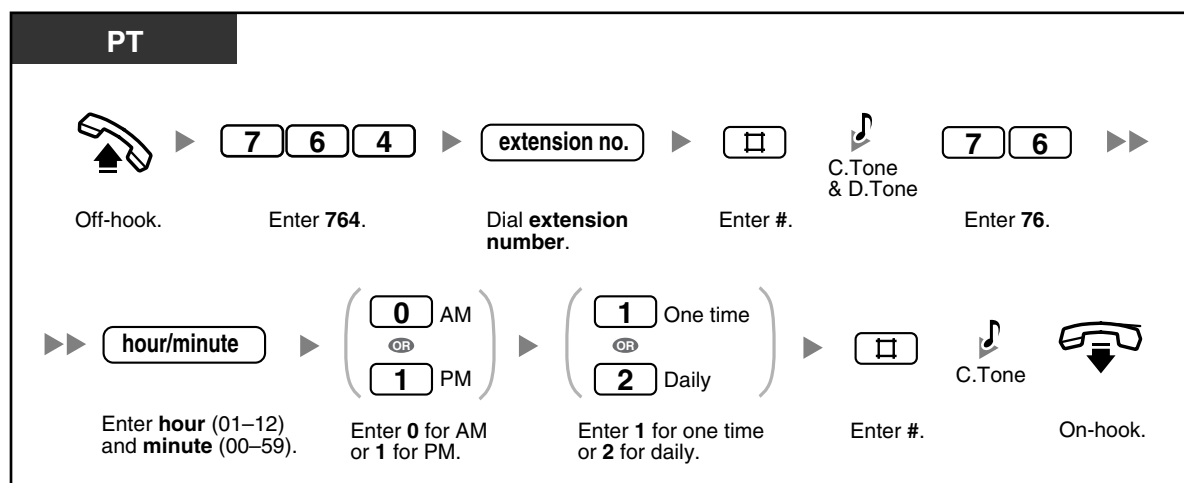

To cancel

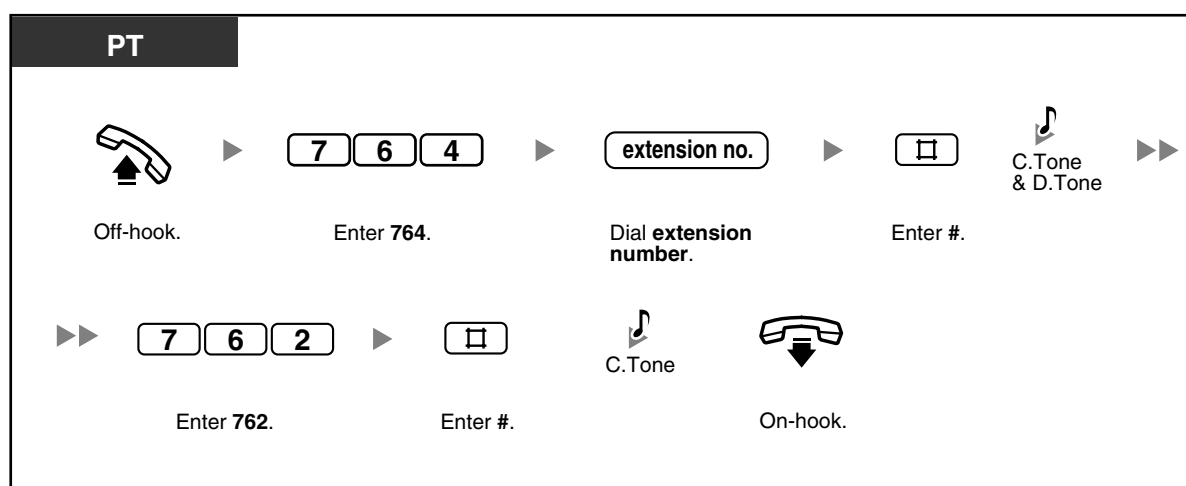

To confirm

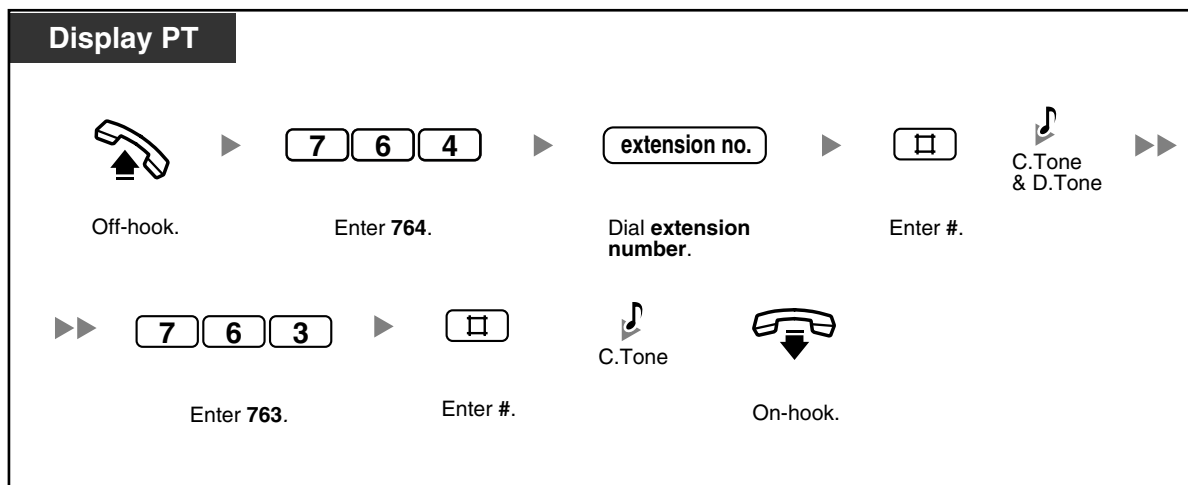


2.1.4 Erasing All Caller Information in the Common Area (Incoming Call Log in the Common Area—CLEAR ALL)

The operator or manager can erase all caller information logged in the common area.



To erase

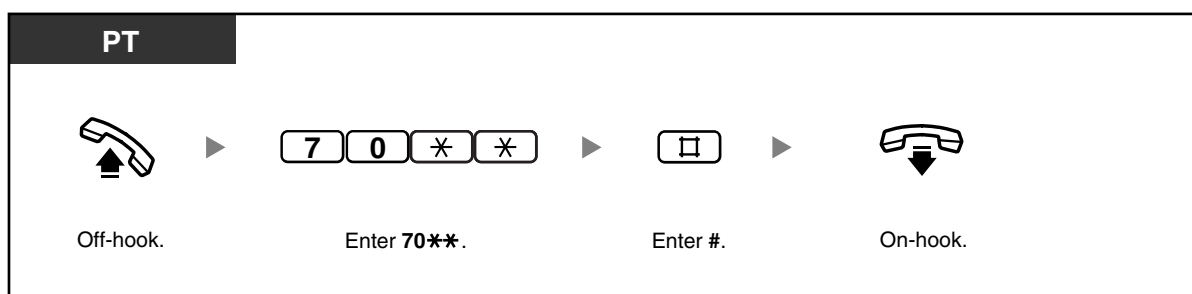


- Caller information with associated voice messages is not erased by this operation.
- This feature is not available while someone is viewing caller information logged in the common area.

2.1.5 Disregarding the Newest Call or Overwriting the Oldest Call in the Common Area Call Log (301st Incoming Call Logged in the Common Area)

The call log in the common area can store up to 300 call records. The operator or manager can select how new calls are treated when this call log is full; either the newest call is disregarded (i.e., not logged), or the oldest call whose information has been viewed is overwritten by the newest call. The Caller ID Selection—Common button lights when the call log in the common area is full.



To disregard the newest call/overwrite the oldest call in the common area call log

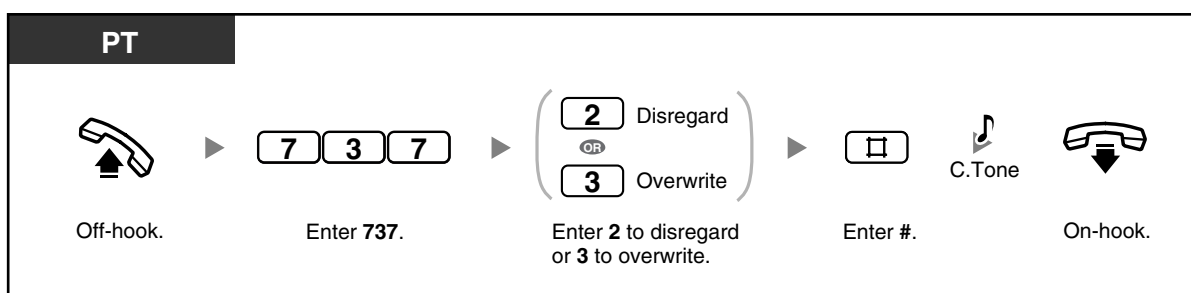


Customising Your Phone

- 3.1.3 Customising the Buttons
Create or edit a Caller ID Selection—Common button.


2.1.6 Recording, Playing, or Erasing Common BV Outgoing Messages

If an optional voice message card is installed in the PBX, the operator or manager can record, play, or erase a common Built-in Voice Message (BV) outgoing message (OGM) in the common message area. When an outside (CO) line call is automatically directed to the common message area, or when a Direct Inward System Access (DISA) call is redirected to the common message area via Intercept Routing, the caller will hear a common BV OGM and can leave a voice message. To play back or erase the voice message, refer to "1.5.5 Using Voice Messaging (Built-in Voice Message [BV])".

To record

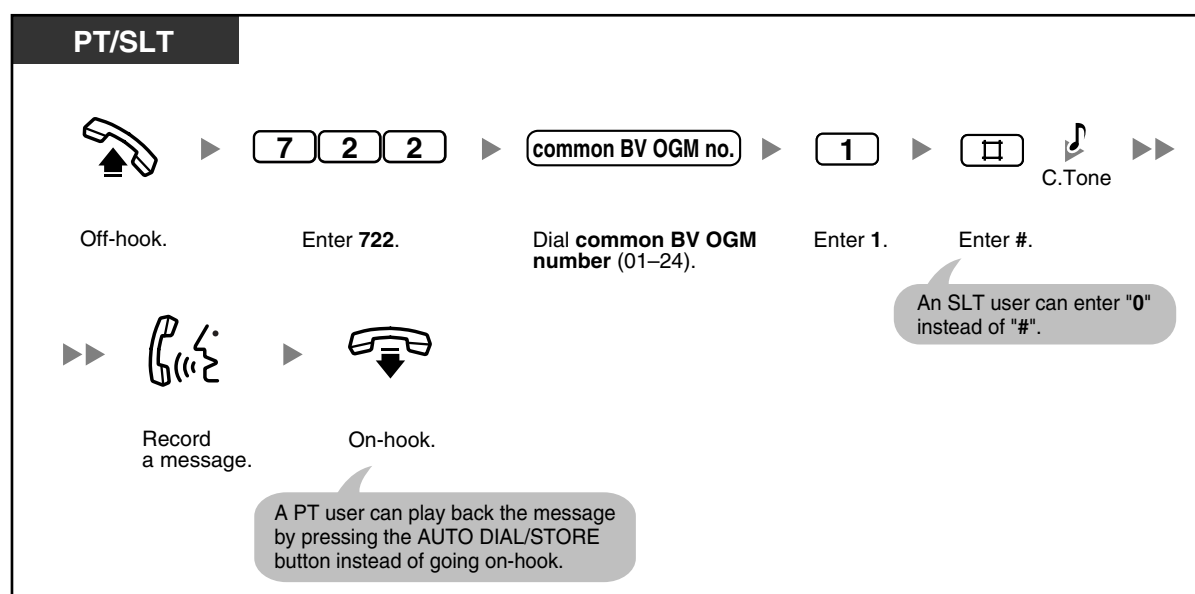


To play back

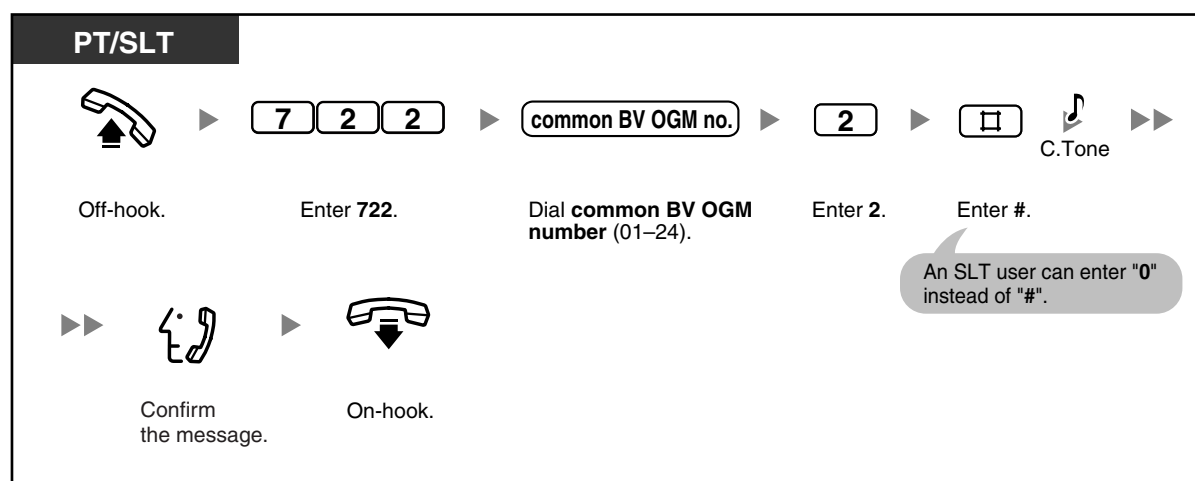


- The AUTO DIAL/STORE button light shows the current status as follows:
Off: You are recording a message, or a message has finished playing.
Red on: A message is playing.
- You can stop playback by pressing the AUTO DIAL/STORE button.

To erase

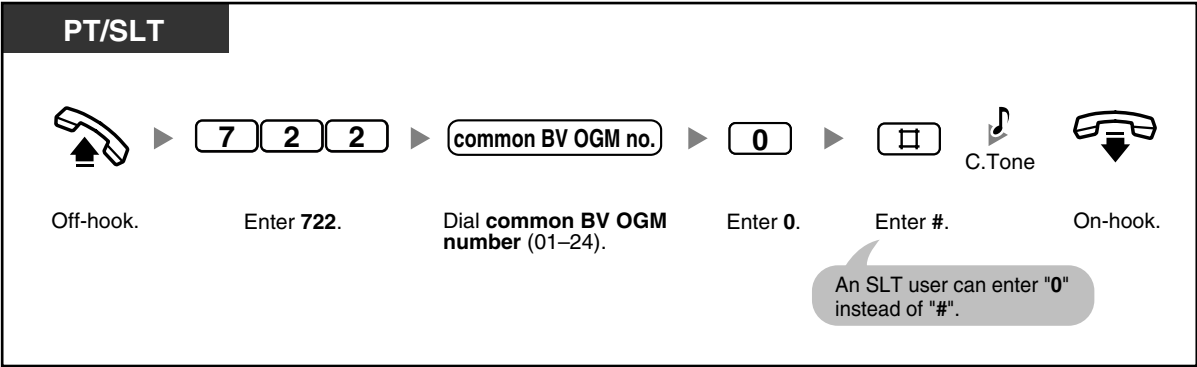



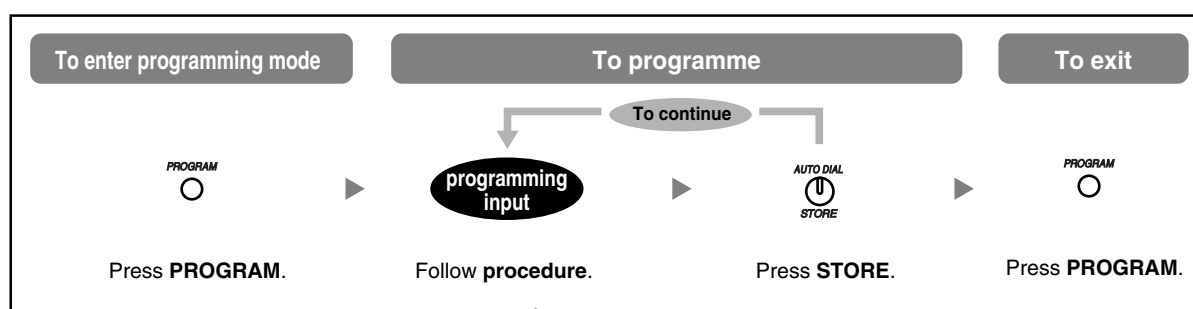


2.1.7 Changing System Settings Using Programming Mode



| Setting | Procedure |
|---|---|
| Recording or playing back the message used by Direct Inward System Access (DISA), Uniform Call Distribution (UCD), and 3-level Automated Attendant (AA) (Outgoing Message [OGM] for DISA/UCD)* ¹ | <p>9 X ^{*2}</p> <p>X = 0 (To delete OGMs for DISA/UCD):</p> <p>DISA/UCD OGM (1–8) + AUTO DIAL STORE ^{*3}</p> <p>1 (To record OGMs for DISA/UCD):</p> <p>DISA/UCD OGM (1–8) + Record + AUTO DIAL STORE ^{*4}</p> <p>2 (To play OGMs for DISA/UCD):</p> <p>DISA/UCD OGM (1–8) ^{*5}</p> <p>3 (To record OGMs for 3-level AA):</p> <p>AA no. for 2-level DISA OGM (0–9) + AA no. for 3-level DISA OGM (0–9, * [if not required]) + Record + AUTO DIAL STORE ^{*4}</p> <p>4 (To play OGMs for 3-level AA):</p> <p>AA no. for 2-level DISA OGM (0–9) + AA no. for 3-level DISA OGM (0–9, * [if not required]) ^{*6}</p> |

2.1 Control Features

| Setting | Procedure |
|---|---|
| Adjusting the current date and time (Date & Time Set) | 0 date and time *7 |
| Cancelling Extension Lock at all extensions (Extension Lock—CANCEL ALL) | 8 |
| Clearing the Live Call Screening (LCS) Password (LCS Password Control) | □ 2 extension no. |
| Setting a password to each extension (Extension Password Set [Manager only]) *8 | <p>7 manager password *9 +  + </p> <p style="text-align: center;">↓</p> <p style="text-align: center;">To continue</p> <p style="text-align: center;">↓</p> <p>+ extension password +  +  OR  *10</p> |



- *1 Up to 32 messages (DISA/UCD: max. 8, 3-level AA: max. 24) can be recorded. The total recording time is 3 minutes. When an optional message expansion card for DISA/UCD OGMs is added, the total recording time of the PBX is increased to 6 minutes. When the total time of all recordings becomes 3 (or 6) minutes or more, the PBX automatically stops recording. Record messages using the handset (not the Hands-free microphone), to reduce background noise.
- *2 Before entering "9", go off-hook.
- *3 "**Delete Complete**" is shown on a display proprietary telephone (PT). While this message is shown, you can enter "0", "1", or "2", to erase, record, or play any OGMs for DISA/UCD.
- *4 The message is played back.
- *5 While the message is being played back, you can enter "0", "1", or "2", to erase, record, or play any OGMs for DISA/UCD, or press the SP-PHONE (NEXT) or REDIAL (PREV) button to start playing other OGMs for DISA/UCD. To exit programming mode after the message has played, press the HOLD button and then the PROGRAM button, or go off-hook and then on-hook.
- *6 While the message is being played back, you can enter "3" or "4", to record or play any OGMs for 3-level AA, or press the SP-PHONE (NEXT) or REDIAL (PREV) button to start playing other OGMs for 3-level AA. To exit programming mode after the message has played, press the HOLD button and then the PROGRAM button, or go off-hook and then on-hook.
- *7 Year (00–99), Month (01–12), Day (01–31), Day of the week (0–6: Sun-Sat), Hour (01–12), Minute (00–59), AM/PM (0/1)
- *8 The preprogrammed extension password can be used for the Walking COS feature and the Remote Extension Lock Feature. Each extension's password must be unique.
- *9 You can enter the system password instead of the password of the extension connected to extension jack 01 (manager password). Ask your administrator or dealer for the manager password or system password.
- *10 Extension numbers are displayed in the order of the jack numbers when you press the SP-PHONE (NEXT) or REDIAL (PREV) button.

Section 3

Customising Your Phone & PBX

This chapter shows you how to customise your telephone or PBX according to your needs.

3.1 Customising Your Phone (Personal Programming)

3.1.1 Customising Your Phone (Personal Programming)

You can customise various features of your telephone, such as line preferences and customised buttons. Additionally, you can return all customised features to their default settings.



- Because certain settings are retained in your proprietary telephone (PT) (not in the PBX), before replacing or changing your PT, we recommend resetting all customised features to their default settings.
- The PROGRAM button is used to enter or exit programming mode.
- In order to programme your extension, it must be idle, on-hook, and holding no calls.
- While you are programming your extension, it is treated as a busy extension.

3.1.2 Changing Settings Using Programming Mode

You can perform the following while in programming mode:


- Setting Features
- Clearing Features
- Confirming Your Own Extension Number (Self-extension Number Confirmation)

◆◆ Setting Features

The default settings are shown in bold letters. For later reference, place a check mark in the boxes below to indicate your customised setting.

Notice

Default settings may vary depending on your country/area. For more details, consult your dealer.

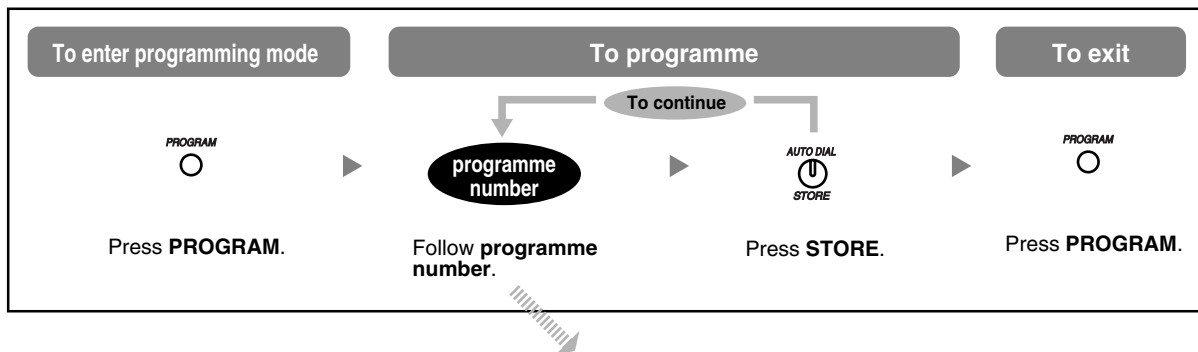

| Item | Programme Number | Setting |
|---|--|---|
| Which line do you prefer to seize when you go off-hook to make a call? (Line Preference—Outgoing) | 1 1 | <input type="checkbox"/> No line |
| | 1 2 | <input type="checkbox"/> An idle outside (CO) line |
| | 1 3 + outside (CO) line no. (1–8)* | <input type="checkbox"/> An assigned outside (CO) line |
| Which line do you prefer to answer when you go off-hook? (Line Preference—Incoming) | 2 1 | <input type="checkbox"/> No line |
| | 2 2 | <input type="checkbox"/> A ringing line |
| | 2 3 + outside (CO) line no. (1–8)* | <input type="checkbox"/> An assigned outside (CO) line |
| From which outside (CO) lines do you want to receive calls at your extension? (Outside (CO) Line Ringing Selection) | 3 + outside (CO) line no. (1–8)* | <input type="checkbox"/> Ring—assigned outside (CO) lines |
| | | <input type="checkbox"/> Ring—all outside (CO) lines |

3.1 Customising Your Phone (Personal Programming)

| Item | Programme Number | Setting |
|--|--|---|
| How do you prefer to receive intercom calls? (Alternate Receiving—Ring/Voice) | 4 1 | <input type="checkbox"/> Ring (Tone Call) |
| | 4 2 | <input type="checkbox"/> Directly—The party's voice is heard without ringing. |
| Which call waiting tone do you prefer? (Call Waiting Tone Type Selection) | 5 1 | <input type="checkbox"/> Tone 1 |
| | 5 2 | <input type="checkbox"/> Tone 2 |
| Which service do you prefer when a calling party is recording a message in your mailbox? (Live Call Screening [LCS] Mode Set) | <input type="checkbox"/> 1 1 | <input type="checkbox"/> You can monitor the message through the telephone speaker. (Hands-free mode) |
| | <input type="checkbox"/> 1 2 | <input type="checkbox"/> Only an alert tone is heard. (Private mode) |



- * If there are only 3 lines in the PBX, outside (CO) line numbers 4 through 8 cannot be used.



- After the programme number is entered, the programme title and the selection are displayed.
- After you have changed a setting, the STORE button turns red and one beep is heard. If the setting was invalid, 3 beeps are heard.


◆◆ Clearing Features

You can reset the following features to their default settings.

This operation also cancels the AUTO ANS/MUTE status of both the Hands-free Answerback feature and the Room Monitor feature.


| Feature | Default Setting |
|-------------------------------------|------------------------------------|
| Line Preference—Outgoing | No line |
| Line Preference—Incoming | A ringing line |
| Outside (CO) Line Ringing Selection | Ring—all outside (CO) lines |
| Alternate Receiving—Ring/Voice | Ring (Tone Call) |
| Call Waiting Tone Type Selection | Tone 1 |

To return features to default (Personal Programming Data Reset)

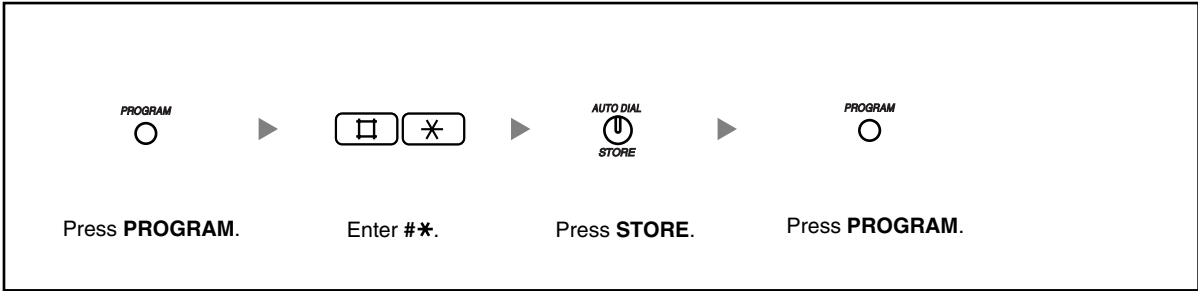

◆◆ **Confirming Your Own Extension Number (Self-extension Number Confirmation)**


You can confirm your jack and extension number.

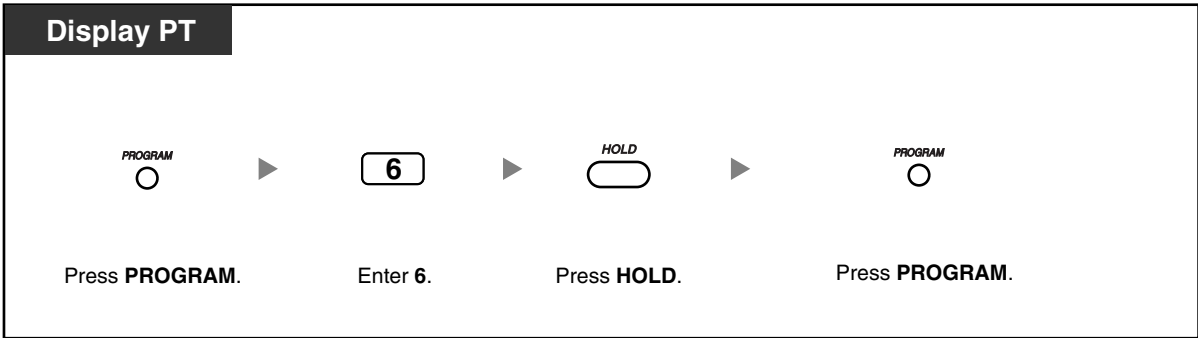

- You can also confirm your extension number by pressing the "*" key 2 times ("* *") while on-hook. Every time you press the "*" key, the display switches between "date (month [day], day [month]) and time", "date (month [day], day [month], year, day of the week)", and "extension number (and extension name if stored)".

3.1.3 Customising the Buttons

You can customise the flexible CO buttons, Direct Station Selection (DSS) buttons, Programmable Feature (PF) buttons, and MESSAGE buttons on your proprietary telephone (PT) and DSS Console by assigning the following features to them. For example, if your telephone has more CO buttons than the number of outside (CO) lines connected to your PBX, you can customise unused CO buttons by assigning them to be One-touch Dialling buttons.

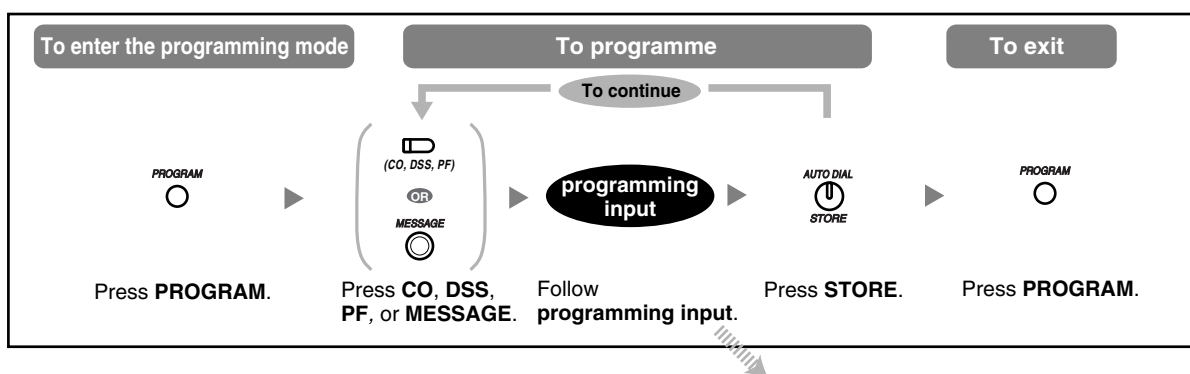

| Button | Programmable Button | | | | Programming Input |
|--|---------------------|-----|----|---------|--|
| | CO | DSS | PF | MESSAGE | |
| Single-CO (S-CO) | ✓ | | | | [0] + outside (CO) line no. (1–8) |
| Group-CO (G-CO) | ✓ | | | | [□] + outside (CO) line group no. (1–8) |
| Other-CO (O-CO) | ✓ | | | | [*] |
| Direct Station Selection (DSS) | ✓ | ✓ | | ✓ | [1] + extension no. |
| One-touch Dialling* ¹ | ✓ | ✓ | ✓ | ✓ | [2] ^{*2} + desired no. (max. 24 digits) |
| Conference | ✓ | | | | [3] |
| Message* ³ | | | | ✓ | [3] |
| FWD/DND (Call Forwarding/Do Not Disturb) | ✓ | | | | [4] |
| Day* ⁴ | | ✓ | | | [4] |
| Save | ✓ | | | | [5] |
| Night* ⁴ | | ✓ | | | [5] |
| Caller ID Indication—Personal | ✓ | | | | [6] |
| Lunch* ⁴ | | ✓ | | | [6] |
| Caller ID Selection—Personal | ✓ | | | | [7] |

| Button | Programmable Button | | | | Programming Input |
|---|---------------------|-----|----|---------|--|
| | CO | DSS | PF | MESSAGE | |
| Extension Lock* ⁴ | | ✓ | | | [7] + extension no. |
| Log-in/Log-out | ✓ | | | | [8] |
| 2-way Record* ⁵ | ✓ | ✓ | | | [9] [0] + voice mail extension no. |
| 2-way Transfer* ⁵ | ✓ | ✓ | | | [9] [1] + voice mail extension no. |
| Live Call Screening (LCS)* ⁵ | ✓ | ✓ | | | [9] [2] |
| LCS Cancel* ⁵ | ✓ | ✓ | | | [9] [3] |
| Voice Mail (VM) Transfer* ⁵ | ✓ | ✓ | | | [9] [4] + voice mail extension no. |
| Message for another extension | ✓ | ✓ | | | [9] [5] + extension no. |
| Caller ID Indication—Common | ✓ | | | | [9] [6] |
| Caller ID Selection—Common | ✓ | | | | [9] [7] |



- *1 Digits "0 through 9", "×", "#", PAUSE, and SECRET (INTERCOM) can be stored. If you do not want to display the stored number when making a call, press the SECRET (INTERCOM) button before and after the numbers you wish to conceal. If you store an outside party's number, you should first store an outside (CO) line access number (9/0*, 81–88). If you need to enter an account code when making outside (CO) line calls, you can enter the feature number and specified account code after the outside (CO) line access number. <Example>

9/0*
Automatic line
access number
× ×
Account code
feature number
1234
Account code
SECRET
[123 4567]
Phone number


* For New Zealand: 1 or 9




- *2 For a PF button, "2" need not be entered before the desired number.
- *3 Allows you to restore the Message Waiting feature to the Message button.
- *4 This button is only available for the operator/manager.
- *5 This button is used for Voice Mail Integration features.

- You can programme DSS and PF buttons only from the paired PT.

To confirm a button setting

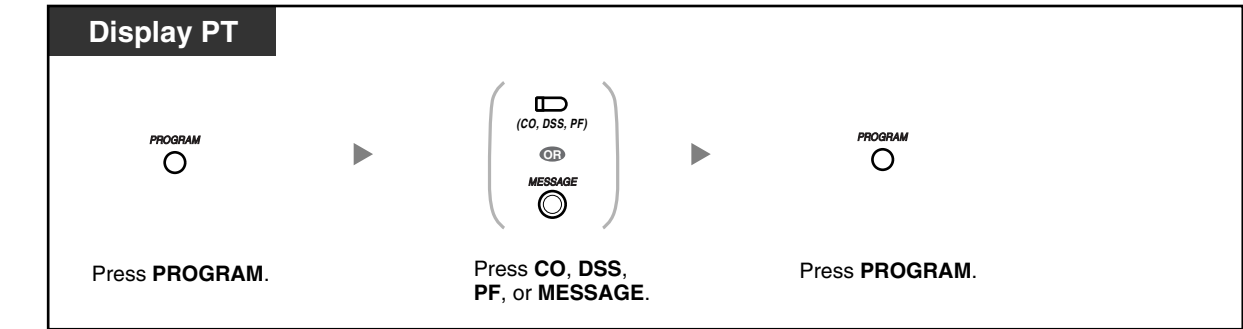

To clear a button setting

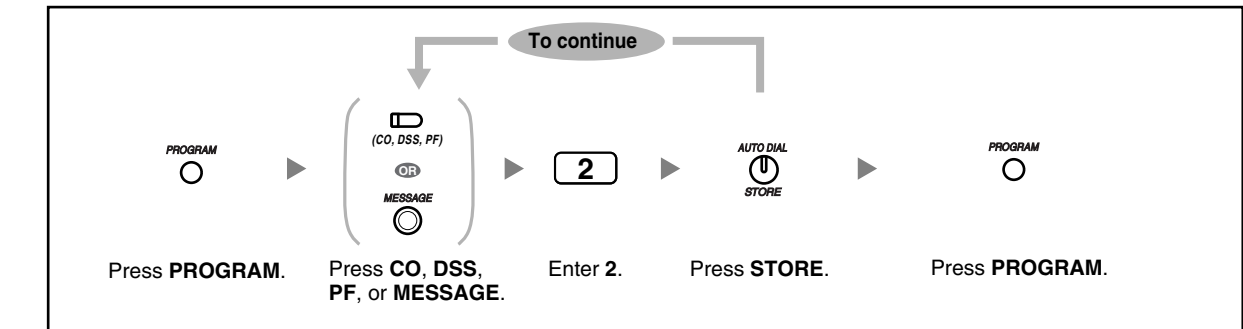

3.2 Managing Call Logs

3.2.1 Requirements

The manager can view, print out, and clear call log information for each extension.

Available Extension

The extension connected to extension jack 01

Required Telephone

A Panasonic proprietary telephone (PT) with a display (e.g., KX-T7730)


Manager Password





To enter programming mode, the manager password (the password of the extension connected to extension jack 01) is required. You can enter the system password instead of the manager password. Ask your administrator or dealer for the manager password or system password.

Conditions

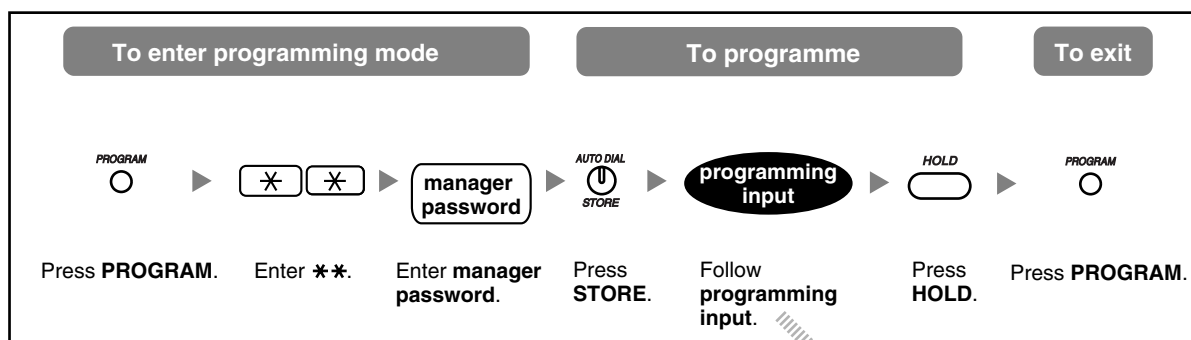In order to perform programming, your extension must be idle, on-hook, and holding no calls.

3.2.2 Viewing, Printing, and Clearing Call Logs



| Item | Programming Input |
|--|--|
| Viewing the call records of each extension. | 1 + extension no. ^{*1} |
| Clearing the call records of each extension. ^{*2} | 1 + extension no. +  +  ^{*1} |
| Printing the call records of each extension. | 1 + extension no. +  ^{*1} |
| Clearing the call records of all extensions. | 5 +  ^{*3} |



- ^{*1} To move to the next or previous extension jack number, press the SP-PHONE (NEXT) or REDIAL (PREV) button respectively. To move to another extension jack number, press the AUTO ANS/MUTE button one time and dial the desired number. To move to another programme number "5", press the AUTO ANS/MUTE button 2 times.
- ^{*2} To confirm the cleared date and time, press the FWD/DND (Call Forwarding/Do Not Disturb) or MESSAGE button. To return to the previous display, press the same button again.
- ^{*3} To move to another programme number "1", press the AUTO ANS/MUTE button one time.

3.3 Customising Your PBX (System Programming)

3.3.1 Programming Information

You can change the default settings of your PBX according to your requirements.

Customisable programming items are shown below, with the programme number in parentheses.

- System Speed Dialling Number [001]
- System Speed Dialling Name [011]
- DISA Security Code [512]
- DISA Security Code Digits [530]

Available Extension

The extension connected to extension jack 01

Required Telephone

A Panasonic proprietary telephone (PT) with a display (e.g., KX-T7730)

Manager Password

To enter programming mode, the manager password (the password of the extension connected to extension jack 01) is required. You can enter the system password instead of the manager password. Ask your administrator or dealer for the manager password or system password.

















Conditions

In order to perform programming, your extension must be idle, on-hook, and holding no calls.

List

Before programming, decide the settings and write them down. Your notes will provide a useful record of the programming for future reference. Your dealer also has programming records that contain all dealer-performed system programming. If necessary, you can request copies of these records to confirm the available facilities and features.


◆◆ Icon Descriptions

| Fixed Button (KX-T7730/KX-T7735) | Function |
|---|---|
|  | PREV (PREVIOUS) |
|  | NEXT |
|  |  |
|  |  |
|  |  |
|  | SECRET |
|  | STORE |
|  | PAUSE |
|  | PROGRAM |
|  | END |
|  | SELECT |
|  | FLASH |
|  | CLEAR |

◆◆ Procedure

The basic steps are shown below.


1. *To enter programming mode*

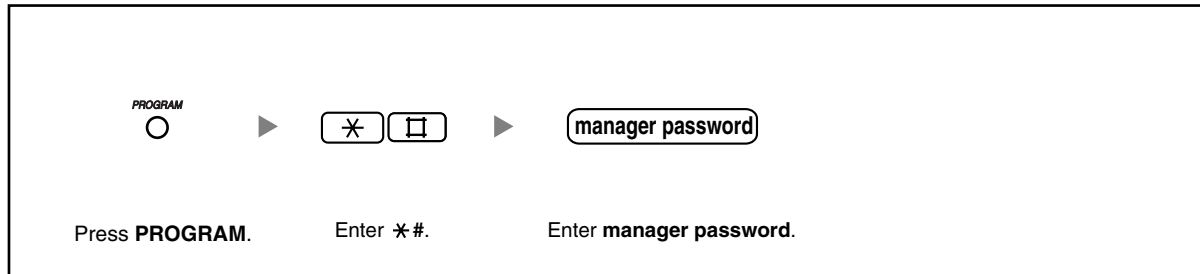

2. *To programme*

You can enter each programme number (3 digits).


3. *To exit programming mode*

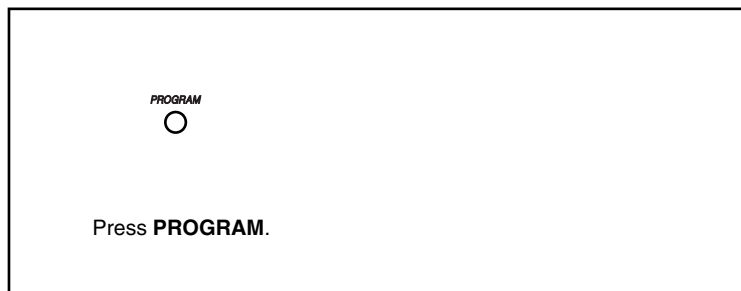

3.3.2 System Programming

◆◆ System Speed Dialling Number [001]

You can store frequently used phone numbers for convenient dialling.

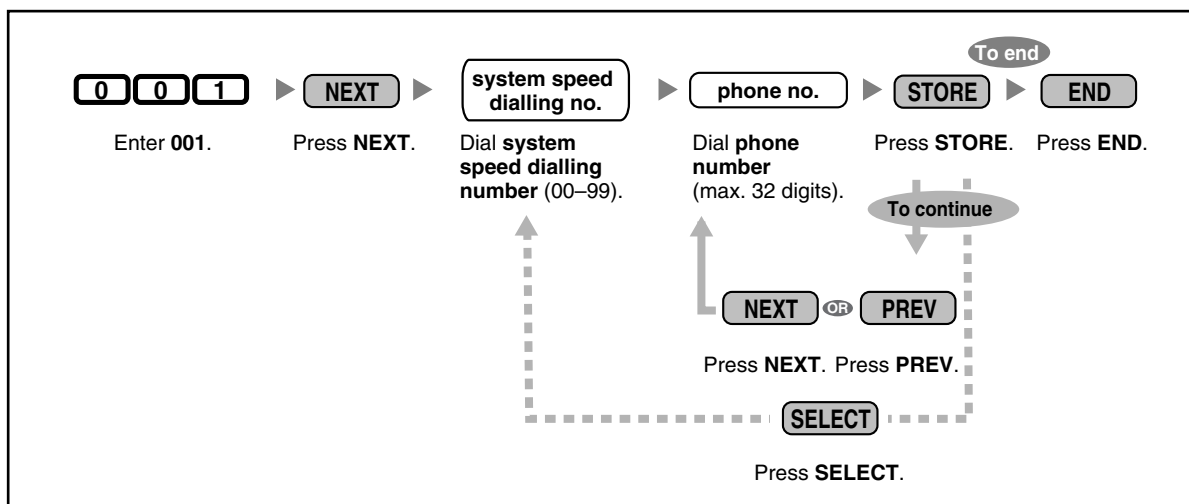

- If the desired number is more than 32 digits, divide the number and store it into more than one speed dialling number.
- "×", "#", FLASH/RECALL, PAUSE, SECRET (INTERCOM), and "- (CONF)" can also be stored.
- If you do not want to display the stored number when making a call, press the SECRET (INTERCOM) button before and after the numbers you wish to conceal.

If you store an outside party's number, you should first store an outside (CO) line access number (9/0*, 81-88).

If you need to enter an account code when making outside (CO) line calls, you can enter the feature number and specified account code after the outside (CO) line access number.


<Example>

| | | | |
|---------------------------------|--------------------------------|--------------|--------------------|
| 9/0* | * * | 1234 | SECRET 123 4567 |
| Automatic line access number | Account code feature number | Account code | Phone number |

* For New Zealand: 1 or 9


◆◆ System Speed Dialling Name [011]

You can store the name associated with each speed dialling number. These names are displayed when making calls using the System Speed Dialling feature. To enter characters, refer to "Entering Characters".

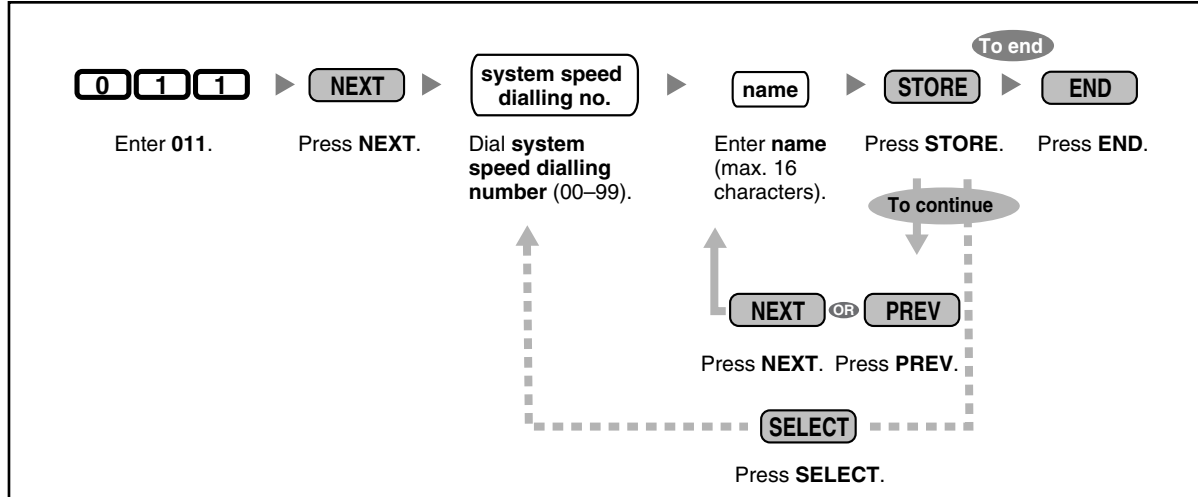

◆◆ DISA Security Code [512]

You can assign required Direct Inward System Access (DISA) security codes if "Trunk Security" or "All Security" is selected in DISA Security Mode [511].

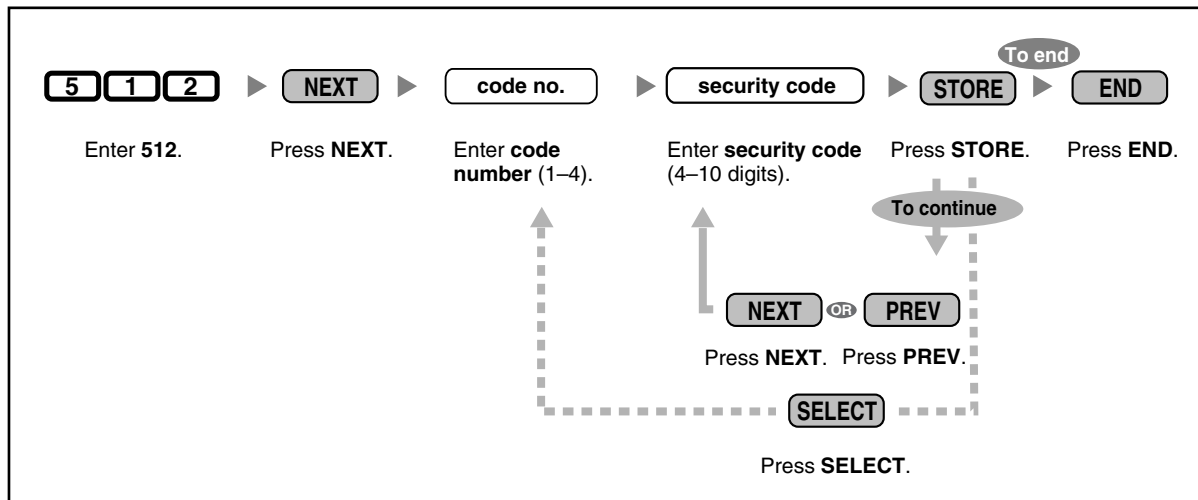




- **WARNING**
There is a risk that fraudulent telephone calls will be made using the Outside-to-Outside (CO-to-CO) Line Call feature of DISA.
The cost of such calls will be billed to the owner/renter of the PBX.
To protect the PBX from this kind of fraudulent use, we strongly recommend:
 - a) Enabling DISA security (Trunk Security or All Security).
 - b) Keeping DISA security codes secret.
 - c) Selecting complex, random codes that cannot be easily guessed.
 - d) Changing codes regularly.
- Security code numbers (not security codes) are logged by Station Message Detail Recording (SMDR).
- The number of digits required for DISA security codes can be assigned in DISA Security Code Digits [530].

◆◆ DISA Security Code Digits [530]

You can select the number of digits used for DISA security codes assigned in DISA Security Code [512].

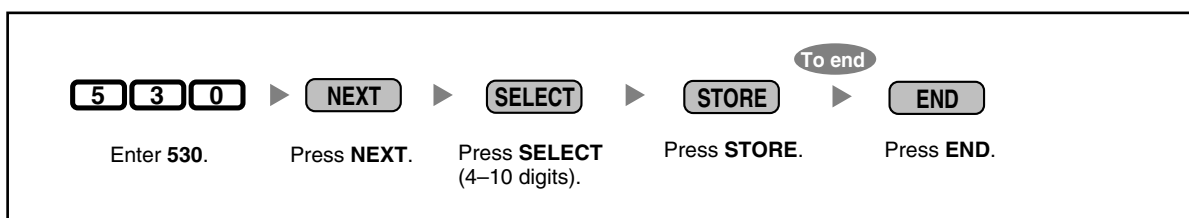

- When this setting is changed, all assigned DISA security codes are cleared.

◆◆ Entering Characters


You can enter the following characters. The tables below show you the characters available for each button.

Table 1 (Alphabet mode)/Table 2 (Numeral mode)

| Buttons \ Times (Pressing SELECT) | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-----------------------------------|---------|---|---|---|---|---|---|---|
| 1 | ! | ? | " | | | | | |
| 2 | A | B | C | a | b | c | | |
| 3 | D | E | F | d | e | f | | |
| 4 | G | H | I | g | h | i | | |
| 5 | J | K | L | j | k | l | | |
| 6 | M | N | O | m | n | o | | |
| 7 | P | Q | R | S | p | q | r | s |
| 8 | T | U | V | t | u | v | | |
| 9 | W | X | Y | Z | w | x | y | z |
| 0 | (Space) | . | , | ' | : | ; | | |
| * | / | + | — | = | < | > | | |
| □ | \$ | % | & | @ | (|) | | |

| Buttons \ Times (Pressing SELECT) | 1 |
|-----------------------------------|---|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| * | * |
| □ | □ |

<Example> To enter "Ann",

| | | |
|----------|---|--------------------|
| A | n | n |
| 2 | 6 (5 times) ► | 6 (5 times) |
| | OR | |
| |  | |

Notes

- To toggle between "Alphabet mode" and "Numeral mode", press SELECT.
- To move the cursor right, press ►.
- To delete all characters, press CLEAR. To delete a character, press ◀.








Section 4




















Appendix




 

 



This chapter provides Troubleshooting, the Feature Number Table and Tone List. Check the Troubleshooting section before consulting your dealer.

4.1 Troubleshooting

4.1.1 Troubleshooting

| Problem | Remedy |
|---|---|
| I cannot make calls using the telephone. | <ul style="list-style-type: none"> • The telephone is locked. <ul style="list-style-type: none"> ➤ Unlock your telephone. ( 1.5.3 Preventing Other People from Using Your Telephone (Extension Lock), 2.1.1 Locking Other Extensions (Remote Extension Lock)) |
| Some features do not function. | <ul style="list-style-type: none"> • System management may restrict certain features. <ul style="list-style-type: none"> ➤ Consult your manager or dealer. |
| I cannot make calls to other extensions using a proprietary telephone (PT). | <ul style="list-style-type: none"> • An idle or assigned outside (CO) line is being seized. The line seized when going off-hook was changed in personal settings. ( 3.1.2 Changing Settings Using Programming Mode) <ul style="list-style-type: none"> ➤ If this setting has been changed, press the INTERCOM button after going off-hook, and then follow the instructions. |
| My new telephone does not function correctly. | <ul style="list-style-type: none"> • The previous extension's settings have not been cleared. <ul style="list-style-type: none"> ➤ Clear the settings and then programme your desired settings again. ( 1.7.8 Clearing Features Set at Your Extension (Extension Feature Clear), 3.1.2 Changing Settings Using Programming Mode, 3.1.3 Customising the Buttons) |
| My PT does not have the button needed to perform a certain operation. | <ul style="list-style-type: none"> • Some models do not have certain feature buttons. <ul style="list-style-type: none"> ➤ Customise a flexible button to function as the desired button. ( 3.1.3 Customising the Buttons) ➤ Enter the specified feature number instead of pressing the feature button. ( 1.1.1 Before Operating a Telephone) |
| When I try to make an outside (CO) line call, I hear a reorder tone, or the display shows "Restricted". | <ul style="list-style-type: none"> • The telephone is locked. <ul style="list-style-type: none"> ➤ Unlock your telephone. ( 1.5.3 Preventing Other People from Using Your Telephone (Extension Lock), 2.1.1 Locking Other Extensions (Remote Extension Lock)) • Toll restriction is activated. <ul style="list-style-type: none"> ➤ Consult your manager or dealer. • An account code is required. ( 1.2.6 Using Your Calling Privileges at Another Extension (Walking COS), Using an Account Code (Account Code Entry) in 1.2.1 Basic Calling) |

| Problem | Remedy |
|--|---|
| I cannot make an outside (CO) line call using a One-touch Dialling button or Speed Dialling. | <ul style="list-style-type: none"> • An outside (CO) line access number was not stored with the phone number.  An outside (CO) line access number is required for outside (CO) line calls. ( 1.2.1 Basic Calling, 3.1.3 Customising the Buttons) |
| During a conversation with an outside party, the call was disconnected. | <ul style="list-style-type: none"> • The specified time limit has run out. ( 1.4.1 Transferring a Call (Call Transfer), 1.4.5 Talking to Multiple Parties (Conference))  Consult your dealer about extending the time limit, if necessary. |
| The Redial feature does not function. | <ul style="list-style-type: none"> • The stored number is more than 64 digits long, or is an extension number. ( 1.2.3 Redialling)  Redialling can only be used with outside (CO) line numbers of 64 digits or less. |
| I cannot access computer services, telephone banking, etc. | <ul style="list-style-type: none"> • A tone signal is required and your outside (CO) line is set to "Pulse". ( 1.2.6 Using Your Calling Privileges at Another Extension (Walking COS))  Change the dialling mode. |
| Computer or fax machine communication was interrupted. | <ul style="list-style-type: none"> • An indication tone may have interrupted communication. ( 1.7.6 Protecting Your Line against Notification Tones (Data Line Security))  Set your line to not receive signalling tones. |
| I cannot send a call waiting tone to the dialled extension. | <ul style="list-style-type: none"> • The other party has not set the Call Waiting feature. ( Sending a Call Waiting Tone to a Busy Extension (Busy Station Signalling [BSS]), 1.4.4 Answering Call Waiting, 1.7.3 Receiving Call Waiting) • The other party has set Data Line Security. ( 1.7.6 Protecting Your Line against Notification Tones (Data Line Security)) |
| I forgot my extension password. | <ul style="list-style-type: none"> •  Ask your manager to assist you. ( 2.1.1 Locking Other Extensions (Remote Extension Lock)) |
| Music started playing through the telephone's speaker. | <ul style="list-style-type: none"> • This is Background Music (BGM). ( 1.7.5 Turning on the Background Music (BGM))  Turn off the music by entering "1" while on-hook.  Ask your manager or dealer to set your extension not to play music when "1" is entered while on-hook. |
| I want to prevent a number that is stored in memory from being displayed. | <ul style="list-style-type: none"> •  Conceal the number. ( 3.1.3 Customising the Buttons) |
 
| Problem | Remedy |
|---|--|
| I want to confirm my extension number. | <ul style="list-style-type: none">  Confirm your extension number by pressing the "*" key 2 times while on-hook, or through personal programming.  Your Extension Number in 1.1.1 Before Operating a Telephone, 3.1.2 Changing Settings Using Programming Mode) |
| The date and/or time are not correct. | <ul style="list-style-type: none">  Ask your operator or manager to change the date or time. ( Date & Time Set in 2.1.7 Changing System Settings Using Programming Mode) |
| The display is dim. | <ul style="list-style-type: none">  Change the display contrast level. ( 1.1.1 Before Operating a Telephone) |
| The MESSAGE/Message button light or Message/Ringer Lamp is lit. | <ul style="list-style-type: none"> There are 3 possible reasons: (1) Someone has left a message waiting indication for you, (2) Someone has left a Built-in Voice Message (BV) for you, or (3) Someone has left a Voice Mail message for you. Press the MESSAGE/Message button to call the party back or receive the message. |
| "Voice Msg Full" is displayed. | <ul style="list-style-type: none"> The maximum voice message recording time has been reached.  Delete voice messages stored in your personal message area or in the common message area.  It may take about 10 seconds for the display to return to the idle status display even if the remaining recording time becomes 5 minutes or more. ( 1.5.5 Using Voice Messaging (Built-in Voice Message [BV])) |
| A power failure has occurred. | <ul style="list-style-type: none"> When a power failure occurs... All functions of the PBX and Panasonic PTs stop. The following outside (CO) lines will be connected to the assigned extensions: Outside (CO) line 1: extension jack 01 Outside (CO) line 4: extension jack 09 Outside (CO) line 7: extension jack 17 This allows outside (CO) line conversations between the specified extensions and outside destinations. When the power is turned back on... Your PBX restarts with the stored data automatically. Memory is protected by a factory-provided lithium battery. There is no memory loss except for the data associated with Automatic Callback Busy, Redial, and Call Park. |

4.2 Feature Number Table

4.2.1 Feature Number Table

The numbers listed below are the feature numbers used to access the PBX features. The numbering plan can be selected through system programming. Numbers in parentheses indicate that the feature numbers are different from those of "Plan 1" when "Plan 2" or "Plan 3" is selected.

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|--|---|---|
| 1.2.1 Basic Calling To call the operator (Operator Call) To select an idle outside (CO) line automatically (Automatic Line Access) To select an idle outside (CO) line in the specified outside (CO) line group automatically (Outside (CO) Line Group Access) Using an Account Code (Account Code Entry) | 0/9 9/0 ^{*1} 8 49/×× (×) | outside phone no. outside (CO) line group no. (1–8) + outside phone no. account code + outside phone no. |
| 1.2.2 Easy Dialling Using Numbers Stored at Your Extension (Personal Speed Dialling) <ul style="list-style-type: none"> – To store – To dial – To confirm Using Numbers Stored in the PBX (System Speed Dialling) <ul style="list-style-type: none"> – To dial Dialling a Preset Number by Going Off-hook (Hot Line) <ul style="list-style-type: none"> – To store – To set – To cancel | 2× 1×/# (1×/##) 3× × 74 | personal speed dialling no. (0–9) + phone no. + #/0 personal speed dialling no. (0–9) personal speed dialling no. (0–9) + # system speed dialling no. (00–99) 2 + phone no. + # 1 + #/0 0 + #/0 |
| 1.2.3 Redialling Redialling the Last Outside Number You Dialed (Last Number Redial) | 80/## (80/###) | |

4.2 Feature Number Table

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|---|---|--|
| <p>1.2.4 When the Dialed Party is Busy or There is No Answer</p> <p>Leaving a Message Waiting Indication/Calling Back a Caller Who Left an Indication (Message Waiting)</p> <p>Leaving a Message Waiting Indication</p> <ul style="list-style-type: none"> – To leave – To cancel <p>Calling Back a Caller Who Left an Indication</p> <ul style="list-style-type: none"> – To cancel all indications left at your extension – To cancel all indications left at another extension – To lock indications left at your extension – To unlock indications left at your extension | 70 | <p>1 + extension no. + #/0</p> <p>2 + extension no. + #/0</p> <p>0 + #/0</p> <p>3 + extension no. + #</p> <p>4-digit (4000–9999) lock code 2 times + #/0</p> <p>stored lock code + #/0</p> |
| 1.2.6 Using Your Calling Privileges at Another Extension (Walking COS) | 7✕ | extension password + your extension no. + #/0 |
| <p>1.3.3 Answering a Call Ringing at Another Telephone (Call Pickup)</p> <p>Answering a Call from Another Telephone (Call Pickup)</p> <ul style="list-style-type: none"> – Group Call Pickup – Directed Call Pickup <p>Preventing Other People from Picking Up Your Calls (Call Pickup Deny)</p> <ul style="list-style-type: none"> – To prevent – To allow | <p>40 (#40)</p> <p>4 (#41)</p> <p>72</p> | <p>extension no.</p> <p>1 + #/0</p> <p>0 + #/0</p> |
| <p>1.4.2 Holding a Call</p> <p>To retrieve a call (Call Hold Retrieve)</p> <ul style="list-style-type: none"> – To retrieve an outside (CO) line call – To retrieve an intercom call <p>Holding in a System Parking Zone (Call Park)</p> <ul style="list-style-type: none"> – To park a call | <p>53 (#59)</p> <p>5 (#5)</p> <p>22 (#22)*2</p> | <p>no. (1–8) of outside (CO) line being held</p> <p>extension no. that put the call on hold</p> <p>parking zone no. (0–9)</p> |

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|--|---------------------------|---|
| – To retrieve | 52 (#56)* ³ | stored parking zone no. (0–9) |
| 1.4.4 Answering Call Waiting Answering Call Waiting from the Telephone Company | 6 | |
| 1.4.5 Talking to Multiple Parties (Conference) Originating a 5-party Conference Call (5-party Conference) | 22* (#22*) | (phone no. + CONF) 4 times + CONF |
| 1.5.1 Forwarding Your Calls (Call Forwarding [FWD])/1.7.2 Refusing Incoming Calls (Do Not Disturb [DND]) | 71 | 0 (Cancel) + #/0 1 (All Calls) + extension no. + #/0 2 (Busy/No Answer) + extension no. + #/0 3 (To Outside (CO) Line) + outside (CO) line access no. + outside phone no. + # 4 (Do Not Disturb [DND]) + #/0 5 (Follow Me) + your extension no. + #/0 8 (Follow Me Cancel) + your extension no. + #/0 |
| 1.5.2 Showing a Message on the Caller's Telephone Display (Absent Message) – To set – To cancel | 75 | 1–6 (+ parameter) + #/0 0 + #/0 |
| 1.5.3 Preventing Other People from Using Your Telephone (Extension Lock) – To lock – To unlock | 77 | 4-digit lock code 2 times + #/0 stored lock code + #/0 |
| 1.5.4 Leaving a Group (Log-in/Log-out) – To log in – To log out | 736 | 0 + #/0 1 + #/0 |

4.2 Feature Number Table

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|---|--|---|
| 1.5.5 Using Voice Messaging (Built-in Voice Message [BV]) Recording, Playing, or Erasing Personal BV Outgoing Messages <ul style="list-style-type: none"> – To record – To play back – To erase Forwarding Your Calls to Built-in Voice Message <ul style="list-style-type: none"> – To set – To cancel Leaving, Playing, or Erasing Voice Messages <ul style="list-style-type: none"> – To leave a voice message using Direct Message – To play back all voice messages in a voice message area – To erase all voice messages in a voice message area | 723 71 725 | 1 + #/0 2 + #/0 0 + #/0 1 (All Calls) or 2 (Busy/No Answer) + 725 + #/0 0 (Cancel) + #/0 1 + extension no. + #/0 2 + #/0 0 + #/0 |
| 1.6.1 Paging <ul style="list-style-type: none"> – All Extensions – Group – External – All Extensions & External | 33 (#33) 33 (#33) 34 (#34) 33 (#33) | 0 extension group no. (1–8) × or 9 |
| 1.6.2 Answering/Denying a Paging Announcement <ul style="list-style-type: none"> – To answer – To refuse – To accept | 43 (#43) 734 734 | 1 + # 0 + # |
| 1.7.1 Setting the Alarm (Timed Reminder) <ul style="list-style-type: none"> – To set – To cancel – To confirm | 76 | hour/minute + 0 (AM)/1 (PM) + 1 (one time)/2 (daily) + #/0 2 + #/0 3 + # |

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|--|--------------------------------|---|
| 1.7.3 Receiving Call Waiting <ul style="list-style-type: none"> – To set for outside (CO) line calls – To cancel for outside (CO) line calls – To set for intercom calls/doorphone calls – To cancel for intercom calls/doorphone calls | 731 731 732 732 | 1 + #/0 0 + #/0 1 + #/0 0 + #/0 |
| 1.7.4 Preventing Other People from Joining Your Conversation (Executive Busy Override Deny) <ul style="list-style-type: none"> – To prevent – To allow | 733 | 0 + #/0 1 + #/0 |
| 1.7.6 Protecting Your Line against Notification Tones (Data Line Security) <ul style="list-style-type: none"> – To set – To cancel | 730 | 1 + #/0 0 + #/0 |
| 1.7.8 Clearing Features Set at Your Extension (Extension Feature Clear) | 79 | #/0 |
| 1.7.9 Monitoring a Room (Room Monitor) <ul style="list-style-type: none"> – To set – To cancel – To monitor through a doorphone | 735 31 (#31) | 1 + # 0 + # doorphone no. (1–4) |
| 1.8.1 If a Doorphone/Door Opener is Connected Calling to and from a Doorphone (Doorphone Call) Opening a Door (Door Open) | 31 (#31) 55 (#55) | doorphone no. (1–4) door opener no. (1–4) |
| 1.8.2 If a Host PBX is Connected Accessing External Services (External Feature Access [EFA]) | 6 | |
| 1.8.3 If a Voice Processing System is Connected Forwarding Your Calls to a Voice Processing System (Voice Mail Integration) <ul style="list-style-type: none"> – To set – To cancel – To listen to messages | 71 784 | 1 (All Calls) or 2 (Busy/No Answer) + voice mail extension no. + #/0 0 (Cancel) + #/0 #/0 |

4.2 Feature Number Table

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|--|---|---|
| Screening Calls (Live Call Screening [LCS]) <ul style="list-style-type: none"> To set the LCS password To cancel the LCS password | 77✕ | 3-digit LCS password 2 times + # stored LCS password + # |
| 1.9.1 Calling with the Incoming Call Log <ul style="list-style-type: none"> To erase all caller information in the personal area To disregard the newest call in the personal area To overwrite the oldest call in the personal area To set logging of caller information when answering a call To cancel logging of caller information when answering a call | 70✕ 737 737 738 738 | # 0 + # 1 + # 1 (Personal area) or 2 (Common area) + #/0 0 (Cancel) + #/0 |
| 2.1.2 Switching the Time Service Mode (Time Service)* ⁴ <ul style="list-style-type: none"> To set (Day/Night/Lunch) To cancel | 78 | (1/2/3) + # 0 + # |
| 2.1.3 Setting an Alarm for Other Extensions (Remote Timed Reminder [Wake-up Call])* ⁴ <ul style="list-style-type: none"> To set To cancel To confirm | 764 | extension no. + # + 76 + hour/minute + 0 (AM)/1 (PM) + 1 (one time)/2 (daily) + # extension no. + # + 76 + 2 + # extension no. + # + 76 + 3 + # |
| 2.1.4 Erasing All Caller Information in the Common Area (Incoming Call Log in the Common Area—CLEAR ALL)* ⁴ <ul style="list-style-type: none"> To erase | 70✕✕ | # |
| 2.1.5 Disregarding the Newest Call or Overwriting the Oldest Call in the Common Area Call Log (301st Incoming Call Logged in the Common Area)* ⁴ <ul style="list-style-type: none"> To disregard the newest call To overwrite the oldest call | 737 | 2 + # 3 + # |

| Feature (While a dial tone is heard) | Numbering | Additional Number |
|--|-----------|--|
| 2.1.6 Recording, Playing, or Erasing Common BV Outgoing Messages* ⁴ <ul style="list-style-type: none"> – To record – To play back – To erase | 722 | common BV outgoing message (OGM) no. (01–24) + 1 + #/0 common BV OGM no. (01–24) + 2 + #/0 common BV OGM no. (01–24) + 0 + #/0 |



- *1 For New Zealand: 1 or 9
- *2 For United Kingdom and New Zealand: Plan 1: 36; Plan 2/Plan 3: #36
- *3 For United Kingdom and New Zealand: Plan 1: 56; Plan 2/Plan 3: #56
- *4 This feature is only available for the operator/manager.

| Feature (While a busy, DND, or ringback tone is heard) | Numbering |
|---|-----------|
| 1.2.4 When the Dialed Party is Busy or There is No Answer | |
| Sending a Call Waiting Tone to a Busy Extension (Busy Station Signalling [BSS])/ Calling an Extension That Is Refusing Calls (DND Override) | 2 |
| Joining an Existing Call (Executive Busy Override) | 3 |
| Reserving a Busy Line (Automatic Callback Busy [Camp-on]) | 6 |

| Feature (While dialling or talking) | Numbering |
|---|-----------|
| 1.2.5 Switching the Calling Method (Alternate Calling—Ring/Voice) | ✕ |
| 1.3.3 Answering a Call Ringing at Another Telephone (Call Pickup) | |
| – Call Retrieving from a Telephone Answering Machine (TAM) | 4* |
| 1.4.9 Changing the Dialling Mode (Pulse to Tone Conversion) | ✕# |
| 1.4.5 Talking to Multiple Parties (Conference) | 3 |
| Adding a Third Party During a Conversation (3-party Conference) | (#3) |
| 1.8.1 If a Doorphone/Door Opener is Connected | 5 |
| From an extension that is on a call with a doorphone | |



- * Dial after dialling the TAM's extension number and hearing a busy tone.

4.2 Feature Number Table

| Feature (When the extension is on-hook) | Numbering |
|--|-----------|
| 1.7.5 Turning on the Background Music (BGM) – To set/cancel | 1 |
| 1.7.7 Checking the Time Service Mode/2.1.2 Switching the Time Service Mode (Time Service) – To confirm the current mode | # |
| 3.1.2 Changing Settings Using Programming Mode | |
| Confirming Your Own Extension Number (Self-extension Number Confirmation) | ✕ |


4.3 Identifying Tones

4.3.1 Identifying Tones

While On-hook


Ring Tone Patterns

The following ring tone patterns can be assigned to incoming call types (outside (CO) line, intercom, or doorphone calls), or are fixed for certain call types (Hold Recall, Timed Reminder, or Camp-on Recall).

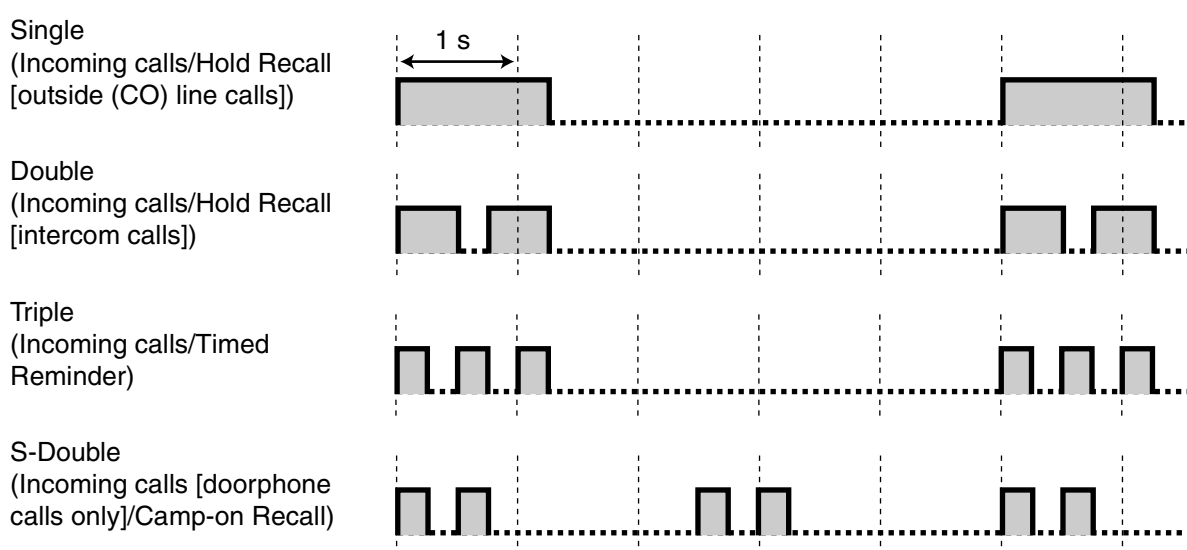


Ring Tone Patterns Sent from the Telephone Company (New Zealand only)

The following ring tone patterns sent from the telephone company can be detected for each outside (CO) line.

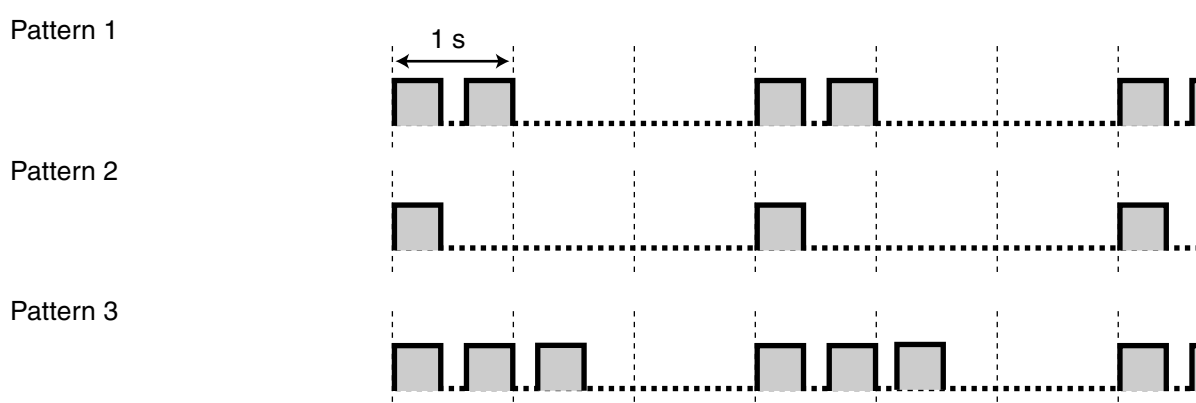

4.3 Identifying Tones

Pattern 4

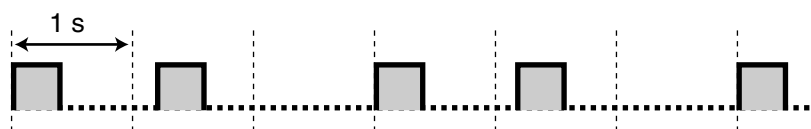

Doorphone Chime Patterns

The following doorphone chime patterns can be assigned to each doorphone when doorbells and door chimes are connected to the PBX.

Pattern 1*



Pattern 2*



Pattern 3*



Pattern 4*



Pattern 5



Pattern 6



Pattern 7



Pattern 8




* Chime patterns 1 to 4 are played only one time during the doorphone ringing time.

When Going Off-hook

Dial Tones

Tone 1

 
Normal



Tone 2

Any of the following features is set:

 - Absent Message
- Background Music (BGM) (proprietary telephone [PT] only)
- Call Forwarding (FWD)
- Call Pickup Deny
- Data Line Security
- Do Not Disturb (DND)
- Extension Lock
- Hot Line (single line telephone [SLT] only)
- Message Waiting (PT only)
- Remote Extension Lock
- Timed Reminder




Tone 3

- When going off-hook with an SLT that has messages waiting
- When Account Code Entry is performed
- When answering a call from Timed Reminder




Tone 4

 A new voice message has been recorded (Built-in Voice Message [BV]).




Tone 5

 The remaining voice message recording time is less than 5 minutes or 125 voice messages have been recorded (Built-in Voice Message [BV]).



When Making Calls

 Busy Tone



Reorder Tone

The outside (CO) line you tried to seize is not assigned or was denied.



Ringback Tones

Single (3-s interval)



Double (3-s interval)



Single (5-s interval)



Double (5-s interval)



DND Tone

 
The dialled extension is refusing incoming calls.



While Off-hook

Indication Tones

Tone 1 (Call Waiting Tone)



Tone 2 (Call Waiting Tone)

Single



Double

 


Triple




Tone 3 (Hold Alarm Tone)

A call has been on hold for longer than the specified time.

**When Talking to an Outside Party****Warning Tone**


This tone is sent 15 seconds before the specified time for disconnection.

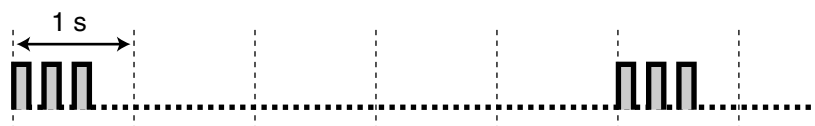**When Setting the Features or Programming****Confirmation Tones****Tone 1**

The feature was set successfully, or the Extension Lock feature was set or cancelled.

**Tone 2**

 The new feature setting was the same as the previous setting, or certain features were successfully performed or accessed (e.g., Call Hold, Automatic Callback Busy).

**Tone 3**

Before the following features activate:

- Retrieving a held call
- Picking up another call
- Establishing a conference
- Paging/Answering a paging announcement



4.3 Identifying Tones

Index

Numerics

- 2-way Record 17, 101, 129
- 2-way Transfer 17, 102, 129
- 301st Incoming Call Logged in the Common Area 116
- 3-level Automated Attendant 2
- 3-party Conference 56, 151
- 5-party Conference 58, 147

A

- Absent Message 67, 147
- Accessing Another Party Directly from Outside (Direct Inward System Access [DISA]) 40
- Accessing External Services (External Feature Access [EFA]) 95
- Account Code Entry 24, 145
- Adding a Third Party During a Conversation (3-party Conference) 56
- Alternate Calling—Ring/Voice 38, 151
- Alternate Receiving—Ring/Voice 126
- Answering a Call from Another Telephone (Call Pickup) 45
- Answering a Call Ringing at Another Telephone (Call Pickup) 45
- Answering Call Waiting 53
- Answering Call Waiting from the Telephone Company 55
- Answering Call Waiting in the PBX 53
- Answering Calls 43
- Answering Hands-free (Hands-free Answerback) 44
- Answering/Denying a Paging Announcement 81
- Appendix 141
- AUTO ANS (Auto Answer)/MUTE 15
- AUTO DIAL/STORE 15
- Automated Attendant (AA) 42
- Automatic Callback Busy (Camp-on) 31, 151
- Automatic Callback Busy Cancel 32
- Automatic Line Access 21, 145
- Automatic Redial 29, 30

B

- Background Music (BGM) 87
- Basic Calling 20
- Before Leaving Your Desk 64
- Before Operating a Telephone 12
- BGM → Background Music (BGM) 87
- BSS → Busy Station Signalling (BSS) 32
- Built-in Voice Message (BV) 2, 71, 148
- Busy Station Signalling (BSS) 32, 151
- Busy Tone 156
- BV → Built-in Voice Message (BV) 71

C

- Call Forwarding (FWD) 64
- Call Hold 49
- Call Hold Retrieve 50, 146
- Call Park 51, 146
- Call Park Retrieve 51
- Call Pickup 45
- Call Pickup Deny 46, 146
- Call Routing for Fixed Line SMS 3
- Call Splitting 52
- Call Transfer 47
- Call Waiting 53, 85, 149

- Call Waiting Tone Type Selection 126
- Caller ID Indication—Common 17, 129
- Caller ID Indication—Personal 17, 128
- Caller ID Selection—Common 17, 129
- Caller ID Selection—Personal 17, 128
- Calling an Extension Refusing Calls (DND Override) 37
- Calling an Outside Party 21
- Calling Other Extensions 20
- Calling to and from a Doorphone (Doorphone Call) 93
- Calling with the Incoming Call Log 103
- Changing Settings Using Programming Mode 125
- Changing System Settings Using Programming Mode 119
- Changing the Dialling Mode (Pulse to Tone Conversion) 63
- Checking the Time Service Mode 89
- Clearing Features 126
- Clearing Features Set at Your Extension (Extension Feature Clear) 90
- CO 15
- Common BV OGM 71, 117
- CONF 16
- Conference 16, 56, 128
- Confirmation Tones 157
- Confirming Your Own Extension Number (Self-extension Number Confirmation) 127
- Connection Example 19
- Control Features 110
- Customised Buttons 16
- Customising the Buttons 128
- Customising Your PBX (System Programming) 133
- Customising Your Phone & PBX 123
- Customising Your Phone (Personal Programming) 124

D

- Data Line Security 88, 149
- Date & Time Set 120
- Day 16, 128
- Dial Tones 155
- Dialling a Preset Number by Going Off-hook (Hot Line) 27
- Direct Inward System Access (DISA) 40
- Direct Message 72
- Direct Station Selection (DSS) 16, 128
- DISA Security Code [512] 137
- DISA Security Code Digits [530] 138
- DISA → Direct Inward System Access (DISA) 40
- Display 12
- Disregarding the Newest Call or Overwriting the Oldest Call in the Common Area Call Log (301st Incoming Call Logged in the Common Area) 116
- DND Override 37, 151
- DND Tone 156
- DND → Do Not Disturb (DND) 84
- Do Not Disturb (DND) 84
- Door Open 94, 149
- Doorphone Call 149
- Doorphone Chime Patterns 154
- During a Conversation 47

E

- Easy Dialling 25
- EFA → External Feature Access (EFA) 95

Electronic Station Lockout → Extension Lock 69, 147
 Entering Characters 139
 Erasing All Caller Information in the Common Area (Incoming Call Log in the Common Area—CLEAR ALL) 115
 Examples 13
 Exclusive Call Hold 49
 Executive Busy Override 36, 151
 Executive Busy Override Deny 86, 149
 Extension Feature Clear 90, 149
 Extension Lock 16, 69, 129, 147
 Extension Lock—CANCEL ALL 120
 Extension Password 39, 110, 121
 Extension Password Set 120
 External Feature Access (EFA) 95, 149

F

Feature Number Table 145
 Feature Numbers 12
 Fixed Buttons 15
 FLASH/RECALL 15
 For Future Reference 7
 Forwarding Your Calls (Call Forwarding [FWD]) 64
 Forwarding Your Calls to a Voice Processing System (Voice Mail Integration) 96
 Forwarding Your Calls to Built-in Voice Message (BV) 74
 FWD → Call Forwarding (FWD) 64
 FWD/DND (Call Forwarding/Do Not Disturb) 16, 128

G

General Call Hold 49
 Group-CO (G-CO) 16, 128

H

Handset/Headset Selection → Headset Operation 61
 Hands-free Answerback 44
 Hands-free Operation 20, 23, 43, 62
 Headset Operation 61
 HOLD 15
 Holding 49
 Holding a Call 49
 Holding in a System Parking Zone (Call Park) 51
 Hot Line 27, 145
 How to Follow the Steps 18

I

Icon Descriptions 13, 134
 Identifying Tones 153
 If a Doorphone/Door Opener is Connected 93
 If a Host PBX is Connected 95
 If a Voice Processing System is Connected 96
 Incoming Call Log 103
 Incoming Call Log in the Common Area—CLEAR ALL 115
 Indication Tones 156
 INTERCOM 15
 Intercom Call 20

J

Joining an Existing Call (Executive Busy Override) 36

L

Last Number Redial 29, 145
 LCS Cancel 17, 129
 LCS Password Control 120
 LCS → Live Call Screening (LCS) 98
 Leaving a Conference Call (Unattended Conference) 57
 Leaving a Group (Log-in/Log-out) 70
 Leaving a Message Waiting Indication/Calling Back a Caller Who Left an Indication (Message Waiting) 33
 Line Preference—Incoming 125
 Line Preference—Outgoing 125
 Live Call Screening (LCS) 17, 98, 129
 Live Call Screening (LCS) Mode Set 126
 Locking Other Extensions (Remote Extension Lock) 110
 Log-in/Log-out 16, 70, 129, 147
 Lunch 17, 128

M

Making Calls 20
 Making/Answering a Paging Announcement 79
 Manager Password 121, 131, 133
 Managing Call Logs 131
 MESSAGE 15
 Message 16, 128
 Message for another extension 16, 129
 Message Waiting 33, 146
 Message Waiting for Another Extension Lock 35
 Microphone Mute 60
 MONITOR 15
 Monitoring a Room (Room Monitor) 91
 Muting a Microphone (Microphone Mute) 60

N

Navigator Key 16
 Night 17, 128

O

One-touch Dialling 16, 25, 128
 One-touch Transfer 47
 Opening a Door (Door Open) 94
 Operation 11
 Operator Call 21, 145
 Operator/Manager Operation 109
 Originating a 5-party Conference Call (5-party Conference) 58
 Other-CO (O-CO) 16, 128
 Outgoing Message (OGM) for DISA/UCD 40, 119
 Outside (CO) Line Group Access 22, 145
 Outside (CO) Line Ringing Selection 125

P

Paging 79
 Paging and then Transferring a Call 80
 Paging Deny 81
 PAUSE 15
 Personal BV OGM 71, 72
 Personal Programming 124
 Personal Speed Dialling 26, 145
 Pickup Dialling → Hot Line 27, 145

Index

Preventing Other People from Joining Your Conversation (Executive Busy Override Deny) 86
Preventing Other People from Picking Up Your Calls (Call Pickup Deny) 46
Preventing Other People from Using Your Telephone (Extension Lock) 69
Procedure 135
PROGRAM 16
Programmable Feature (PF) 16
Programming Information 133
Protecting Your Line against Notification Tones (Data Line Security) 88
Pulse to Tone Conversion 63, 151

Q

Quick Dialling 28

R

Receiving Call Waiting 85
Receiving Calls 43
Recording a Conversation (2-way Record) 101
Recording, Playing, or Erasing Common BV Outgoing Messages 117
Recording, Playing, or Erasing Personal BV Outgoing Messages 72
REDIAL 15
Redialling 29
Redialling the Last Outside Number You Dialed (Last Number Redial) 29
Refusing Incoming Calls (Do Not Disturb [DND]) 84
Remote Extension Lock 110
Remote Station Lock Control → Remote Extension Lock 110
Remote Timed Reminder (Wake-up Call) 113, 150
Reorder Tone 156
Requirements 131
Reserving a Busy Line (Automatic Callback Busy [Camp-on]) 31
Restrictions 13
Ring Tone Patterns 153
Ring Tone Patterns Sent from the Telephone Company (New Zealand only) 153
Ringback Tones 156
Room Monitor 91

S

Safety Instructions 4
Save 16, 128
Saved Number Redial 30
Saving an Outside Phone Number for Redialling (Saved Number Redial) 30
Screening Calls (Live Call Screening [LCS]) 98
Self-extension Number Confirmation 127
Sending a Call Waiting Tone to a Busy Extension (Busy Station Signalling [BSS]) 32
Setting an Alarm for Other Extensions (Remote Timed Reminder [Wake-up Call]) 113
Setting Features 125
Setting the Alarm (Timed Reminder) 82
Setting the Telephone According to Your Needs 82
Short Message Service (SMS) 3
Showing a Message on the Caller's Telephone Display (Absent Message) 67
Single-CO (S-CO) 16, 128
SMS → Short Message Service (SMS) 3

SP-PHONE 15
Station Feature Clear → Extension Feature Clear 90, 149
Station Programme Clear → Extension Feature Clear 90, 149
Station Speed Dialling → Personal Speed Dialling 26, 145
Switching the Calling Method (Alternate Calling—Ring/Voice) 38
Switching the Time Service Mode (Time Service) 111
System Programming 133, 136
System Speed Dialling 27, 145
System Speed Dialling Name [011] 137
System Speed Dialling Number [001] 136

T

Talking to 2 Parties Alternately (Call Splitting) 52
Talking to Another Party without Lifting the Handset (Hands-free Operation) 62
Talking to Multiple Parties (Conference) 56
TAM → Telephone Answering Machine (TAM) 45
Telephone Answering Machine (TAM) 45
Time Service 111, 150
Timed Reminder 82, 148
Tone 12
TRANSFER 15
Transferring a Call (Call Transfer) 47
Transferring to an Extension within the PBX 47
Transferring to an Outside Destination 48
Troubleshooting 142
Turning on the Background Music (BGM) 87

U

Unattended Conference 57
Using a Display Proprietary Telephone 103
Using a Navigator Key/Volume Key (depending on the type of your PT) 13
Using a One-touch Button (One-touch Dialling) 25
Using a Preprogrammed Number (Quick Dialling) 28
Using an Account Code (Account Code Entry) 24
Using Numbers Stored at Your Extension (Personal Speed Dialling) 26
Using Numbers Stored in the PBX (System Speed Dialling) 27
Using the Headset (Headset Operation) 61
Using User-supplied Equipment 93
Using Voice Messaging (Built-in Voice Message [BV]) 71
Using Your Calling Privileges at Another Extension (Walking COS) 39

V

Viewing, Printing, and Clearing Call Logs 132
VOICE CALL 16
Voice Mail (VM) Transfer 17, 97, 129
Voice Mail Integration 96, 149
Volume Key 16

W

Walking COS 146
Warning Tone 157
What Kind of Telephone Can Be Used? 12
When Going Off-hook 155
When Making Calls 156
When Setting the Features or Programming 157
When Talking to an Outside Party 157

| | |
|---|-----|
| When the Dialed Party is Busy or There is No Answer | 31 |
| When You Use a Panasonic Proprietary Telephone | 15 |
| While Off-hook | 156 |
| While On-hook | 153 |

Y

| | |
|-----------------------|----|
| Your Extension Number | 13 |
|-----------------------|----|

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.